



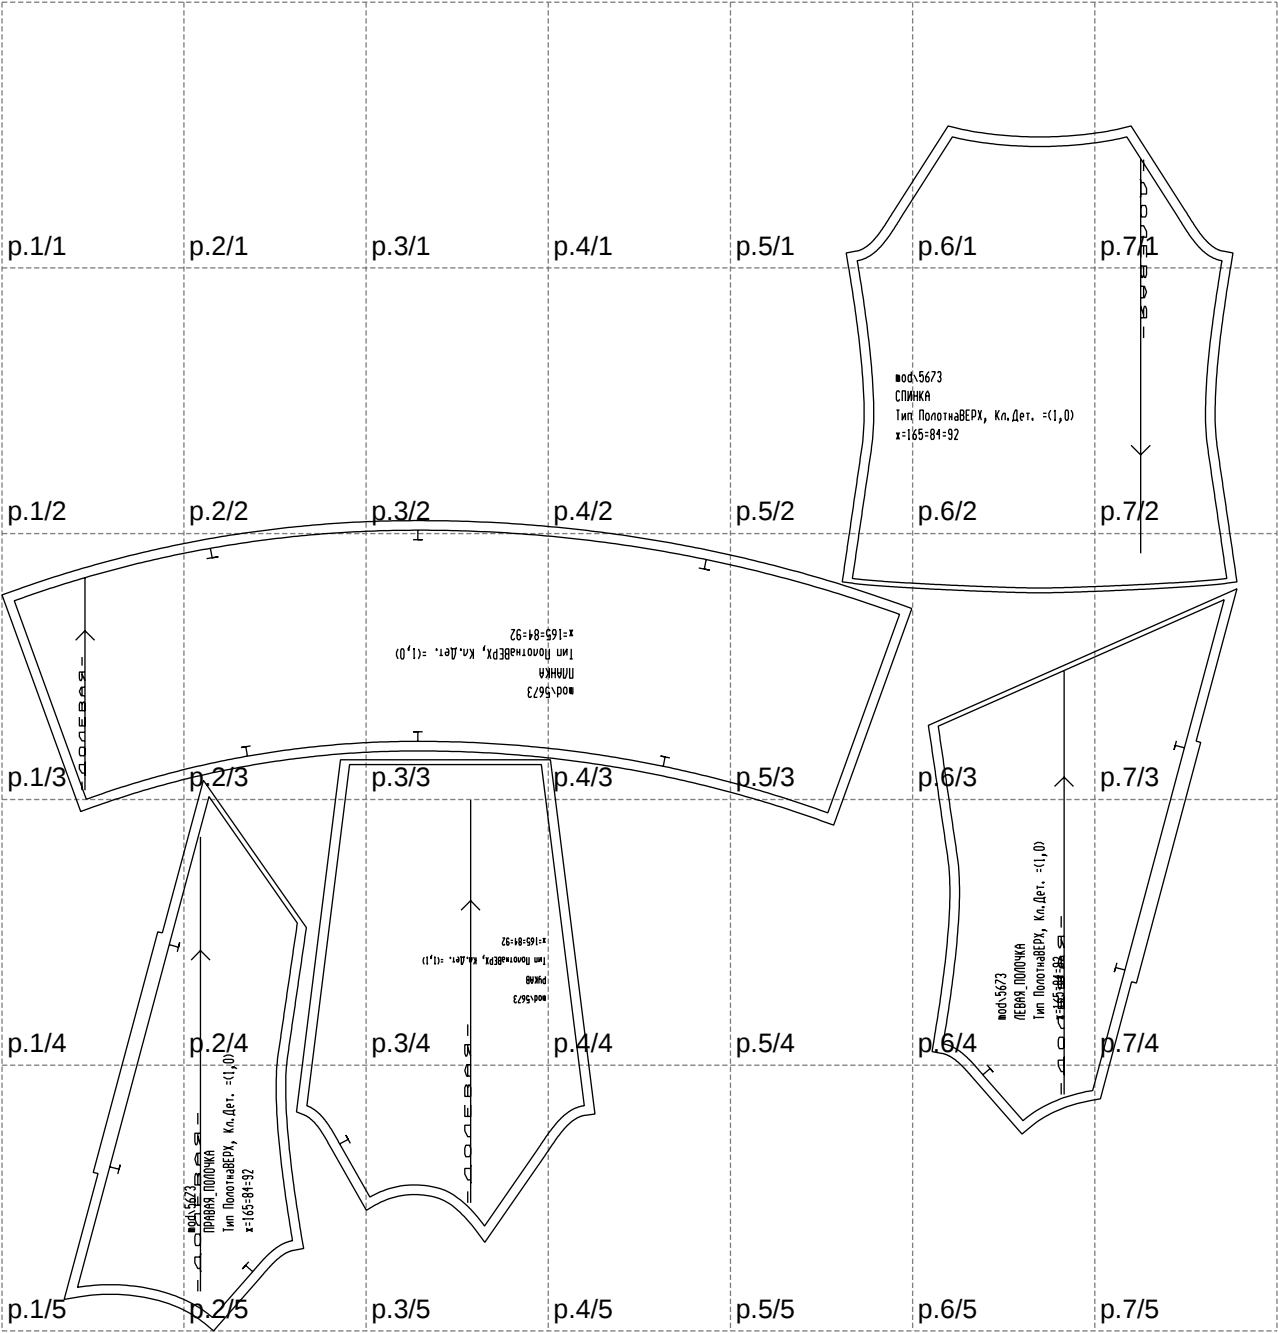


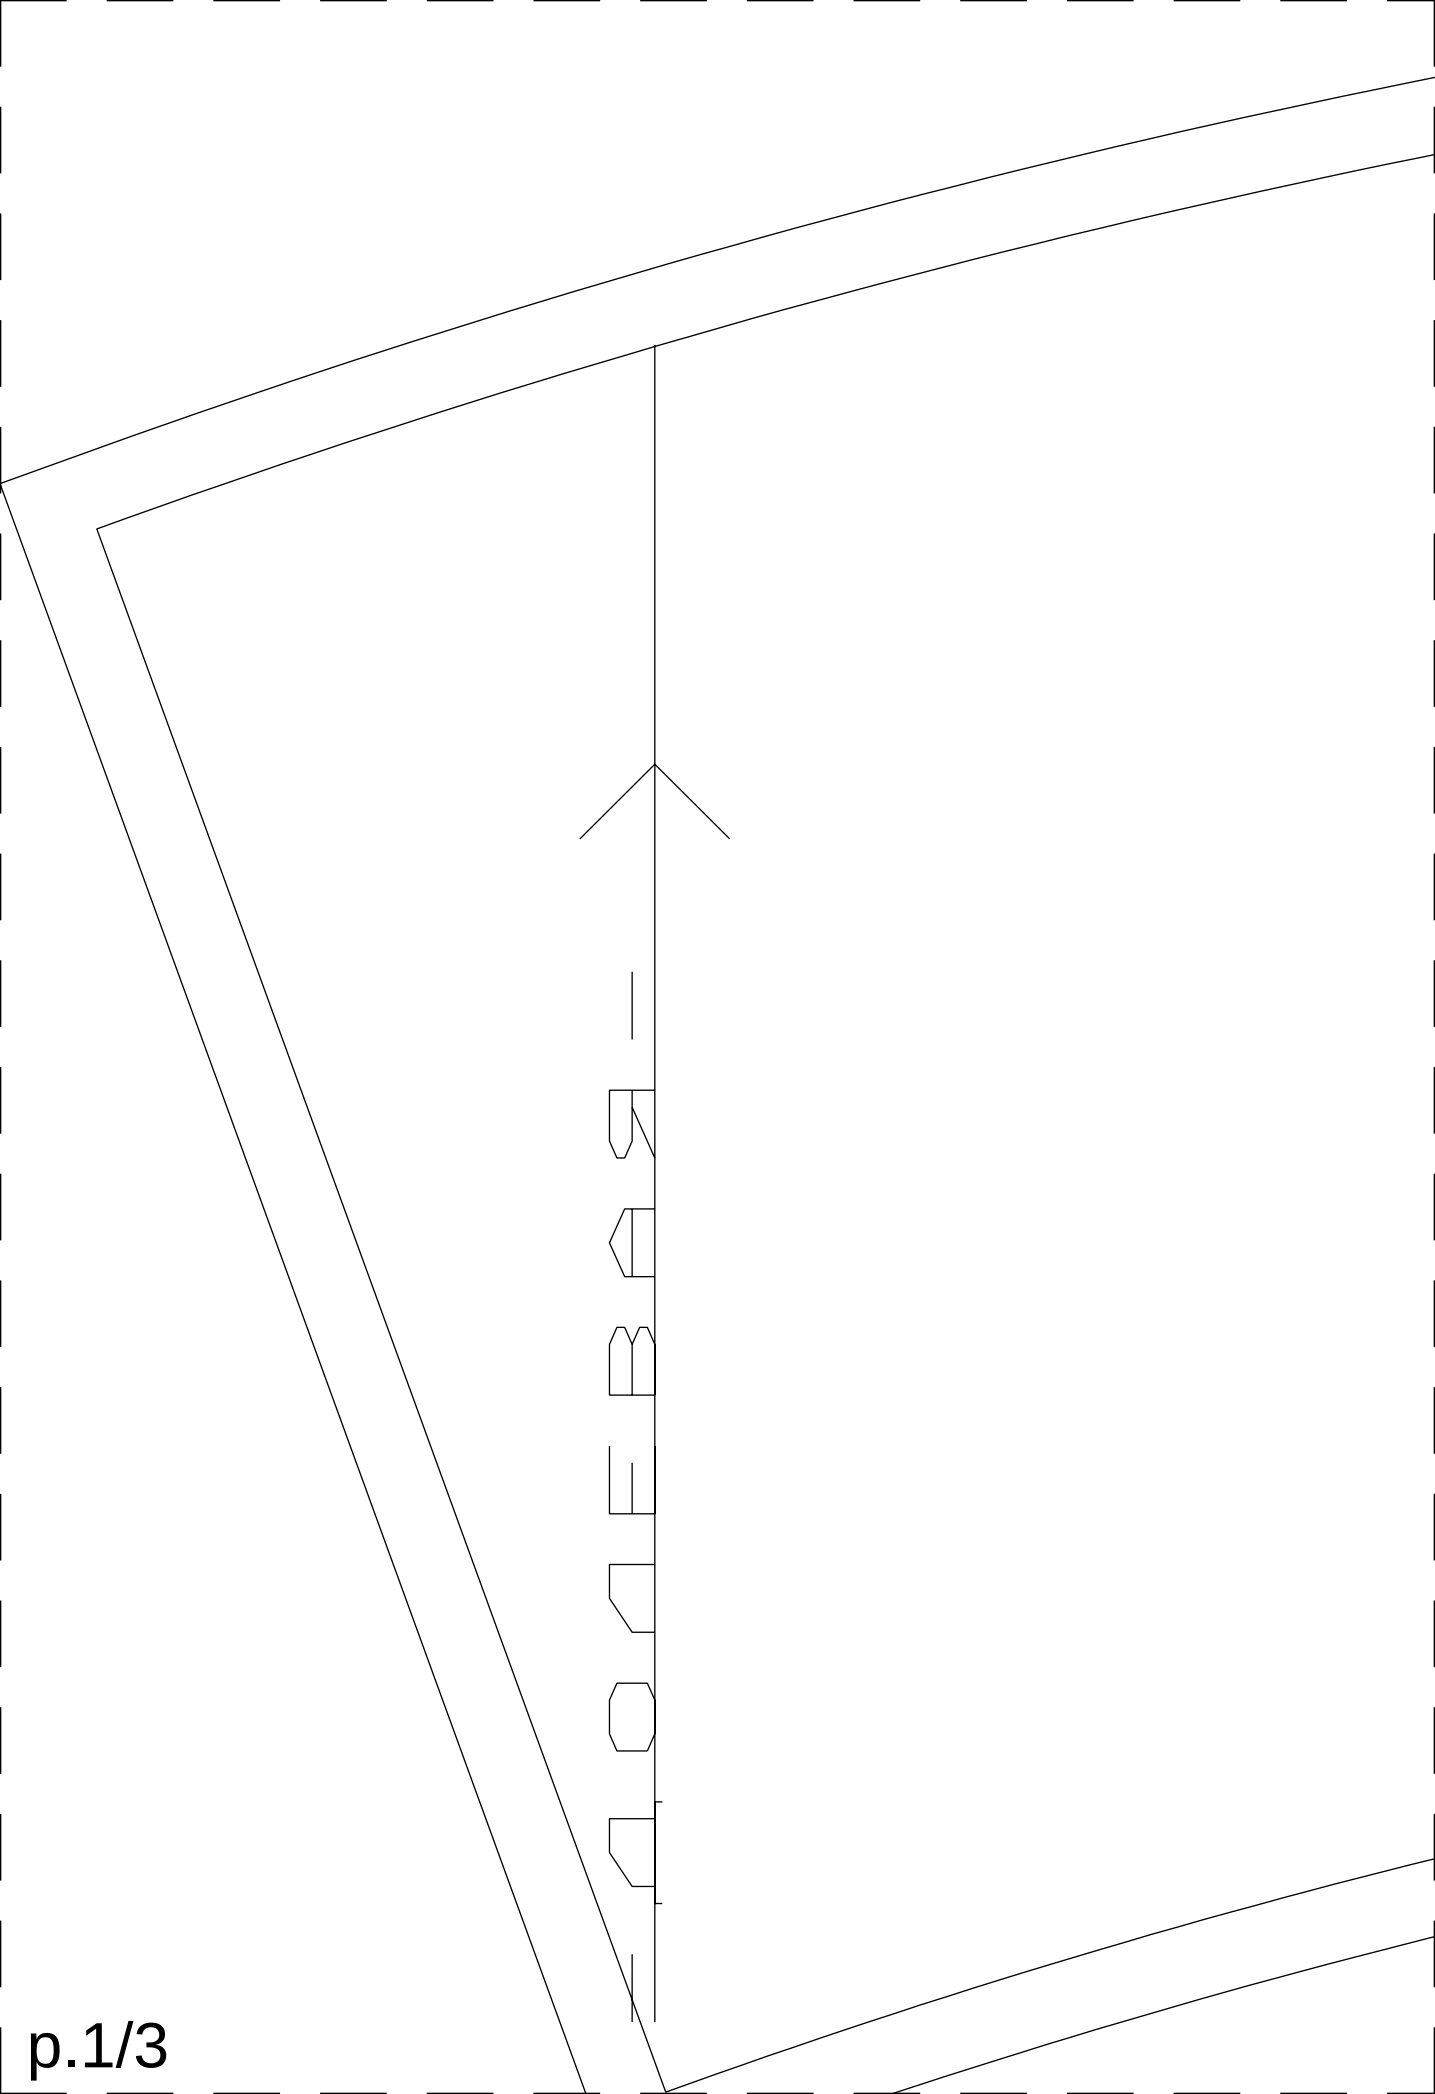









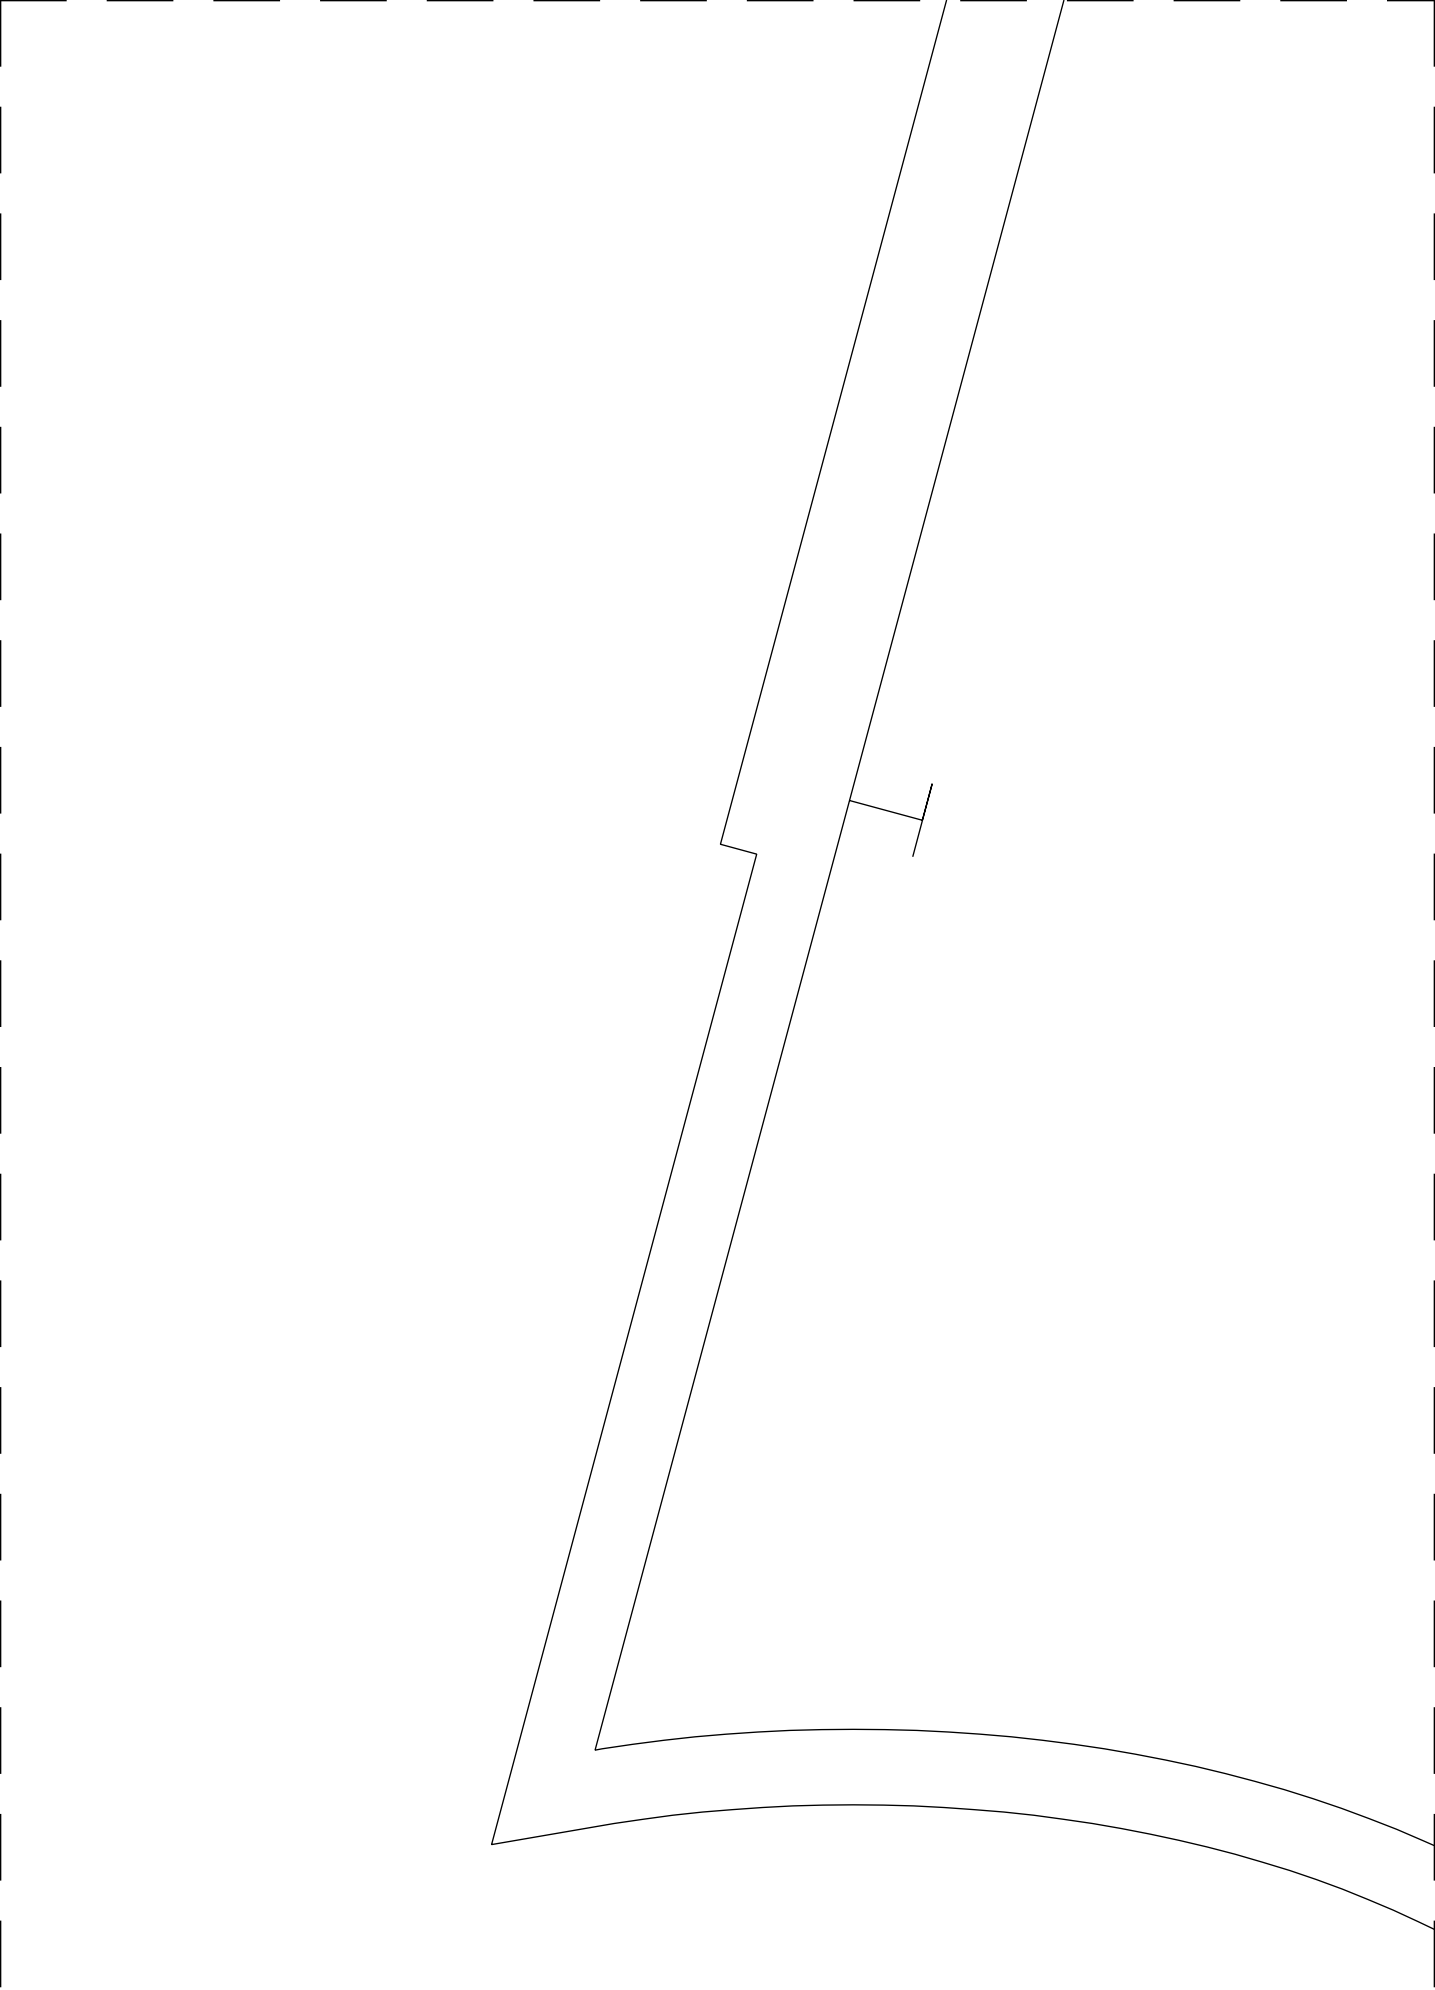





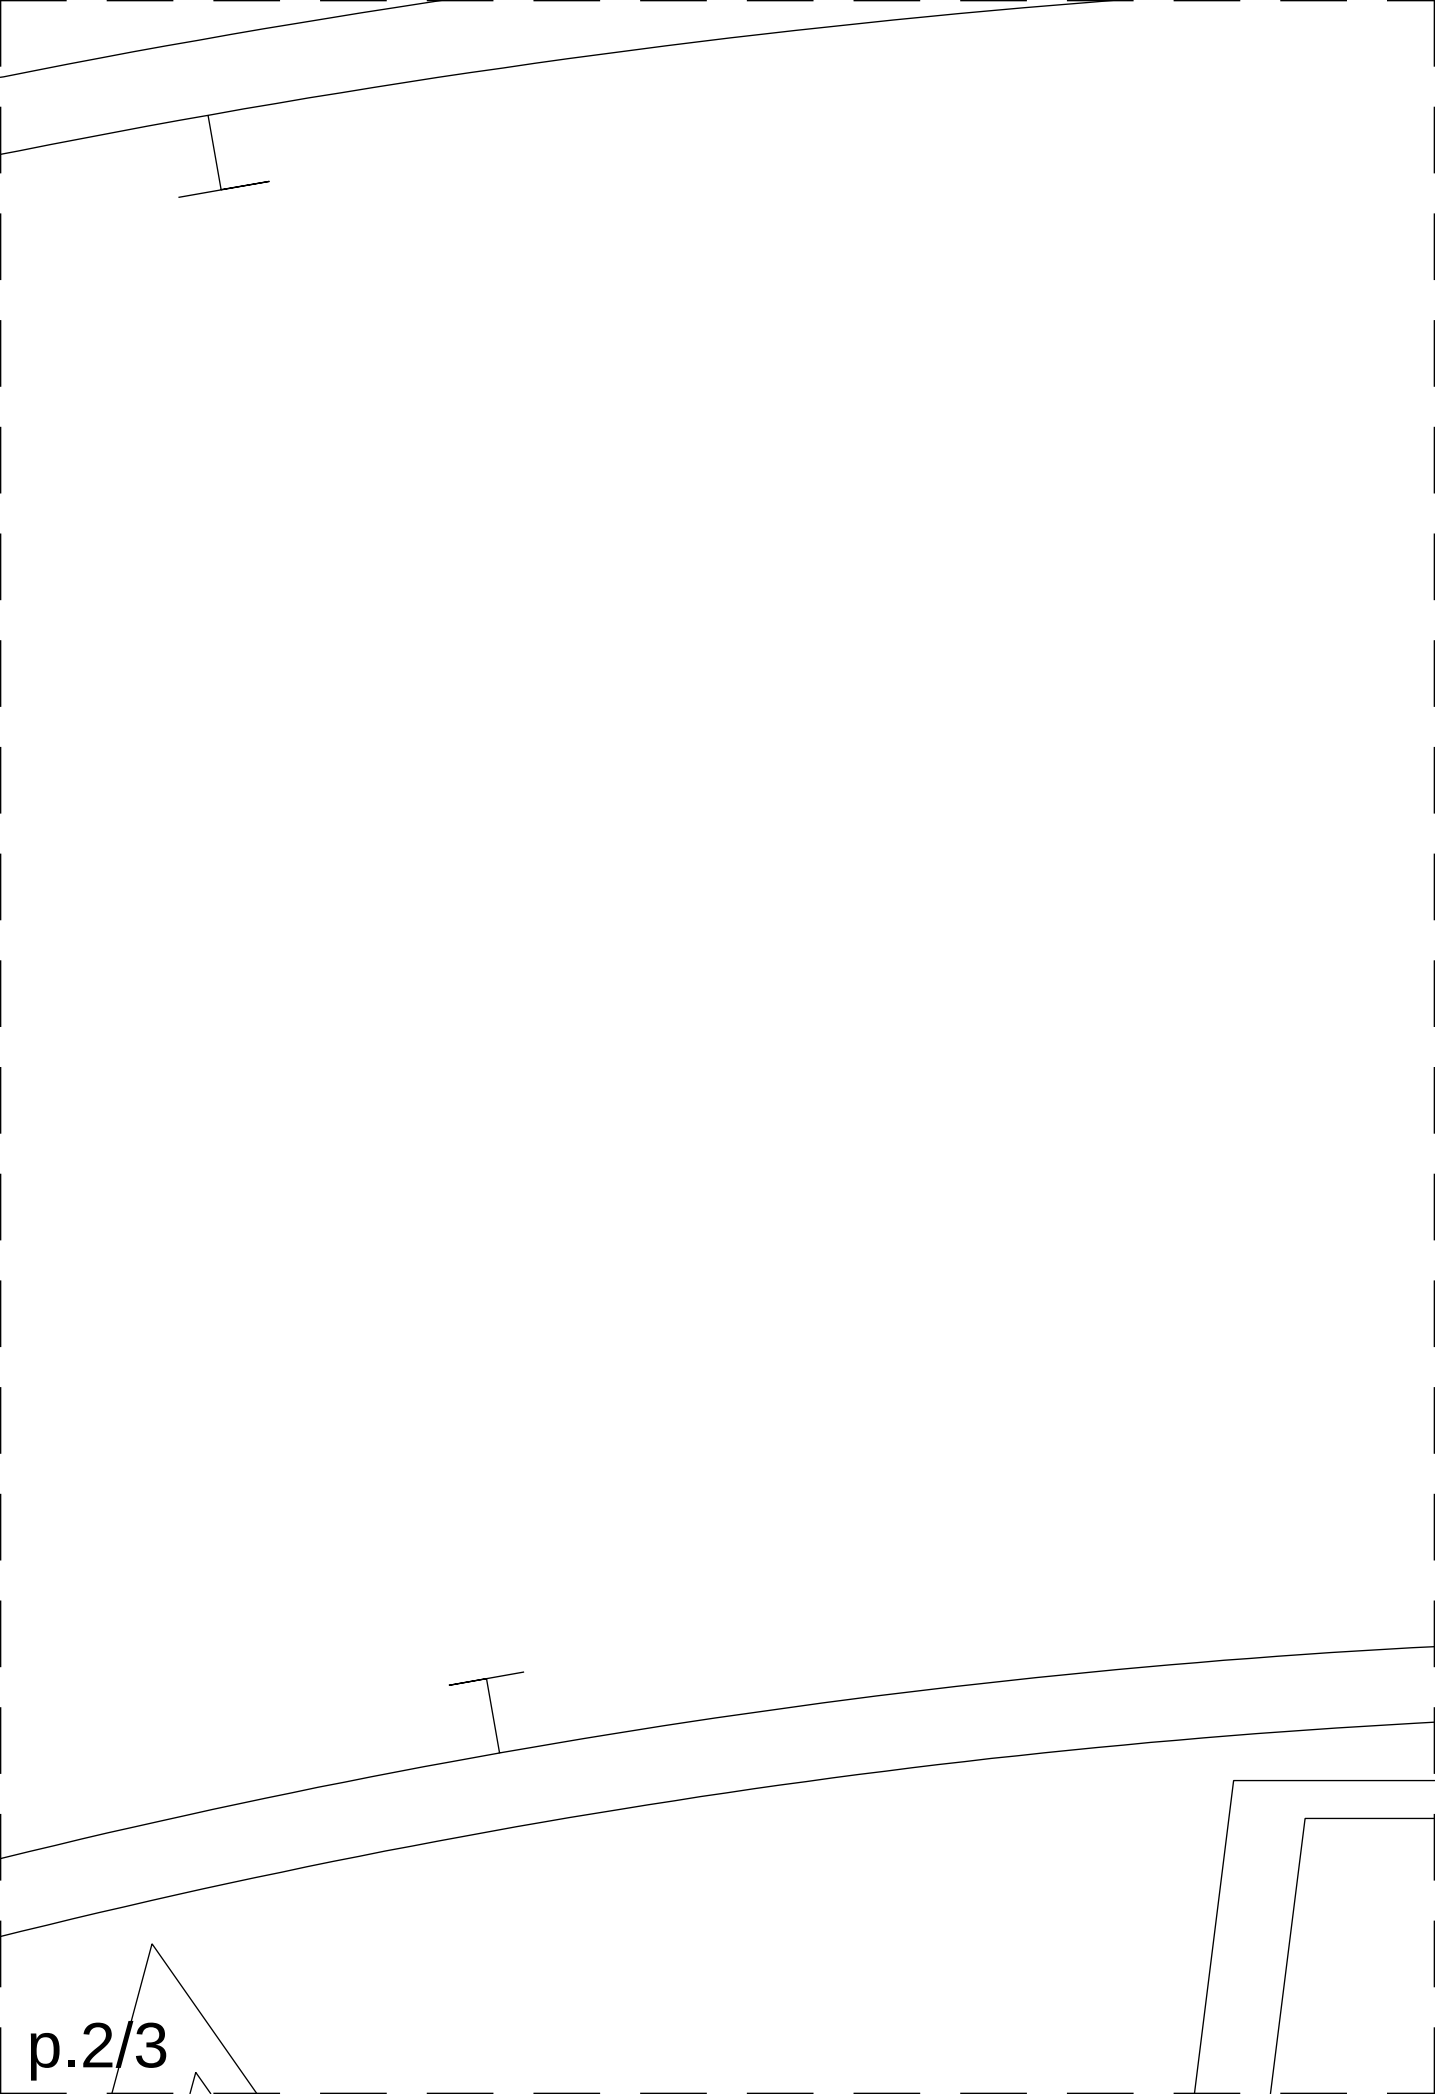

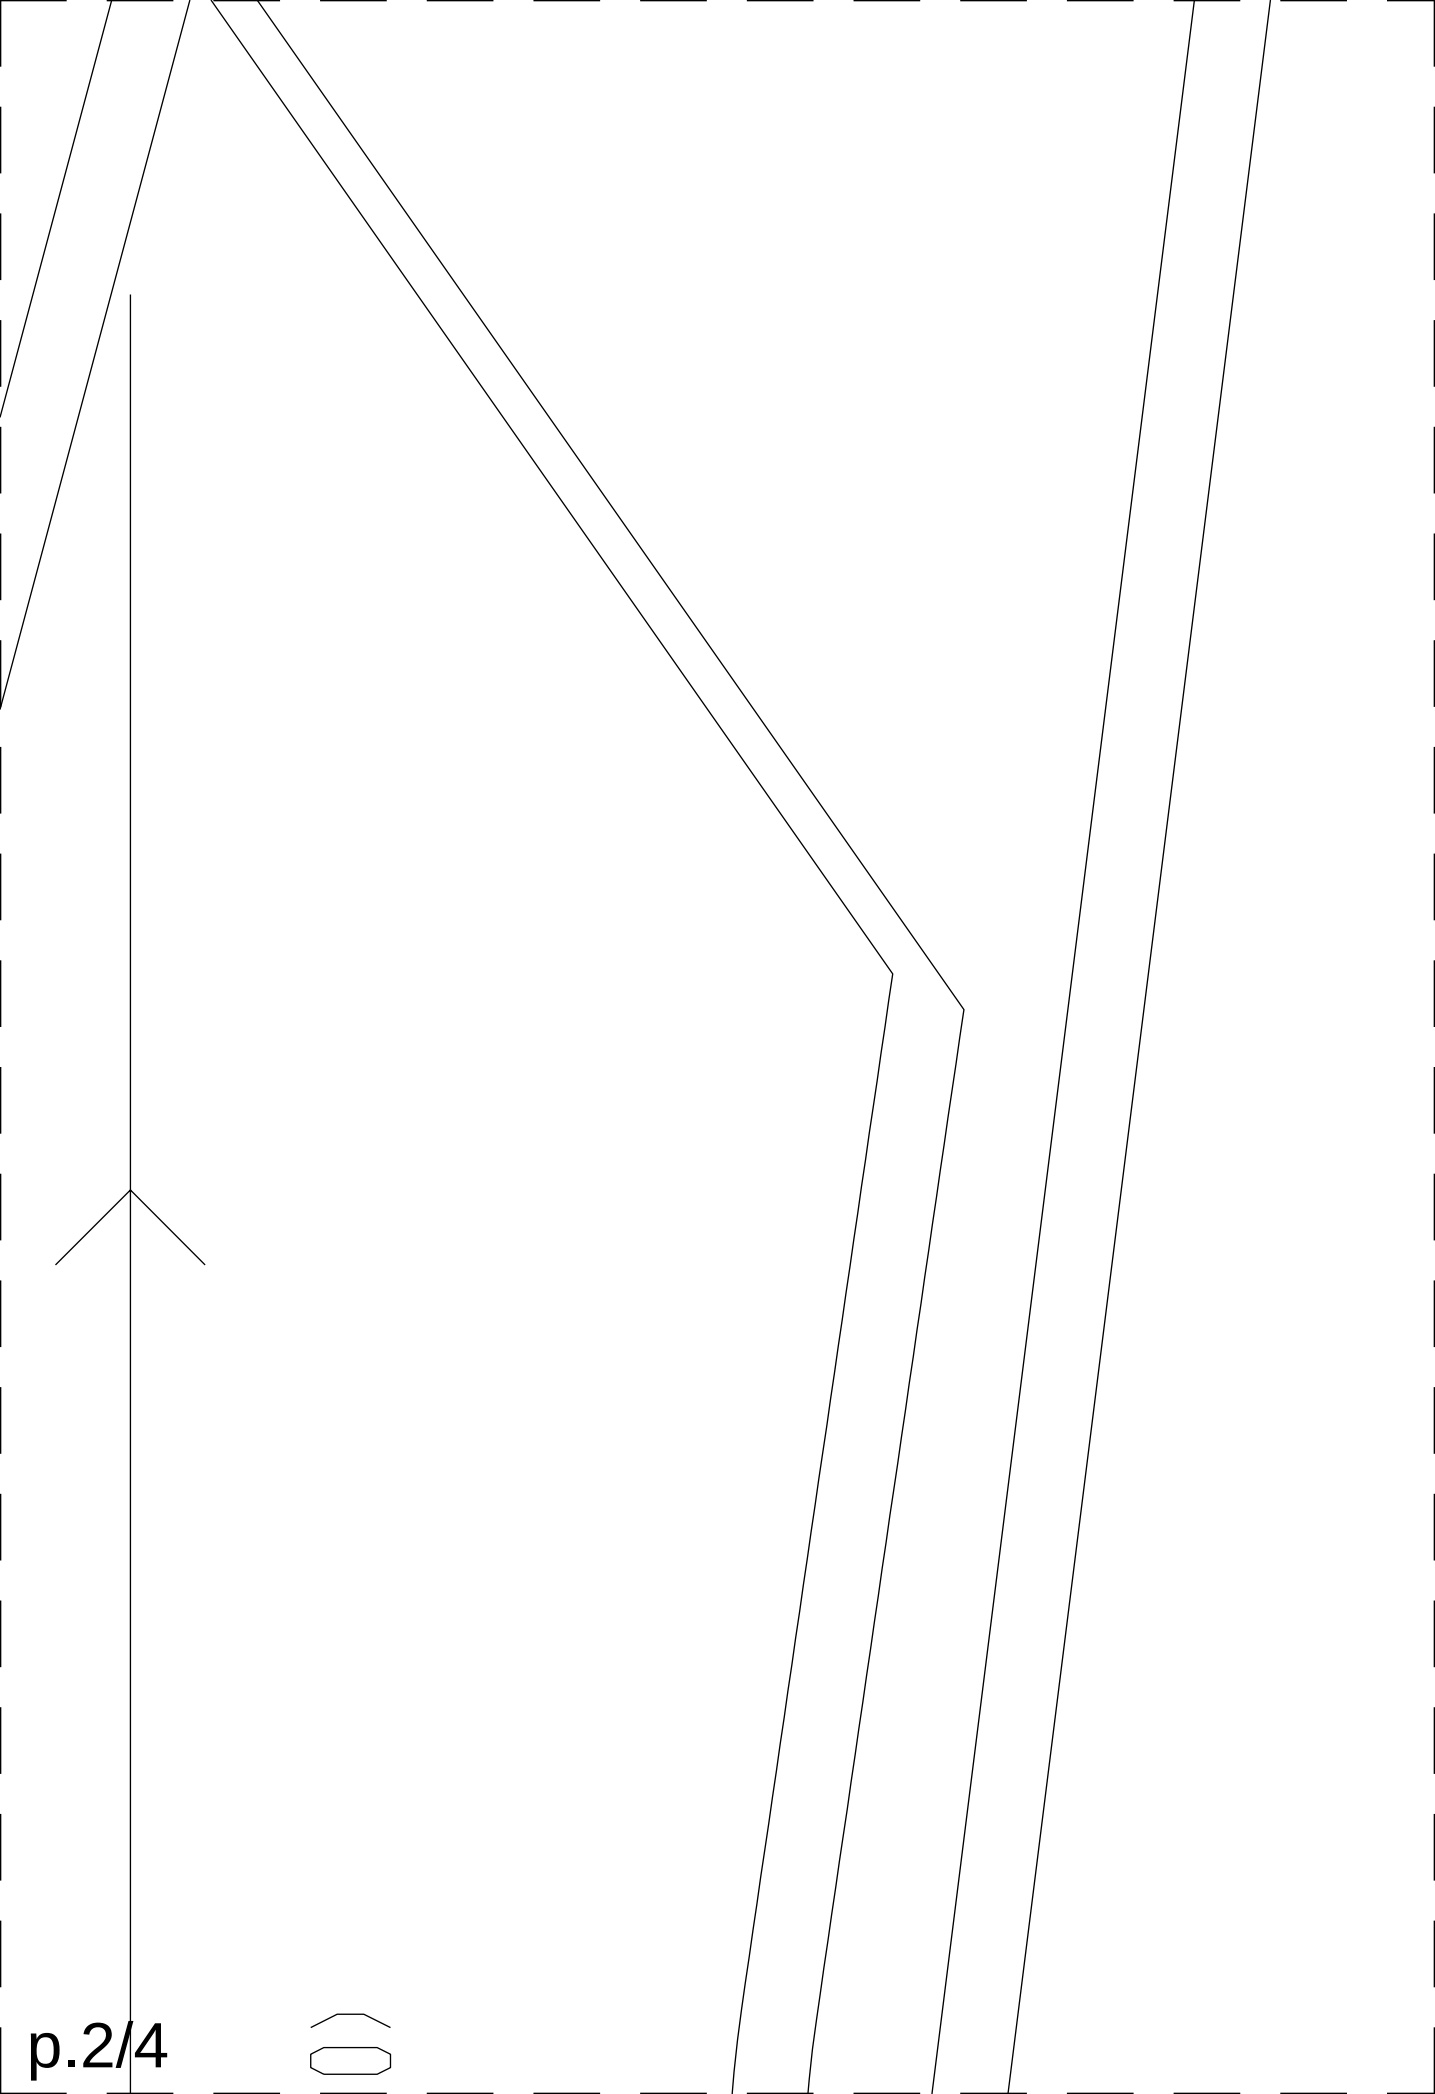

mod\5673

ПРАВАЯ ПОЛОЧКА

Тип ПолотнаВЕРХ, Кл.Дет. =(1,

Ж=165=84=92






0673

KN

ПОЛОЖИТЕЛЬ, KN. DET. = (1, 0)  
0 = 84 = 92

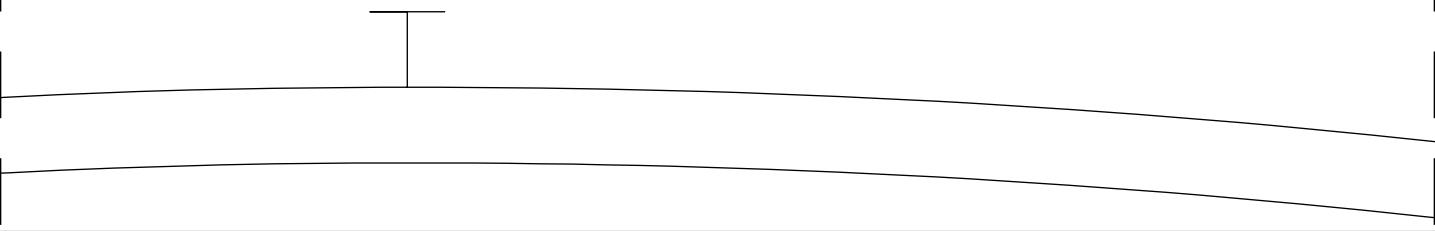


mod\5673

РУКАВ

Тип Поворотная, kn. det. =(1,1)


\*=165=84=92



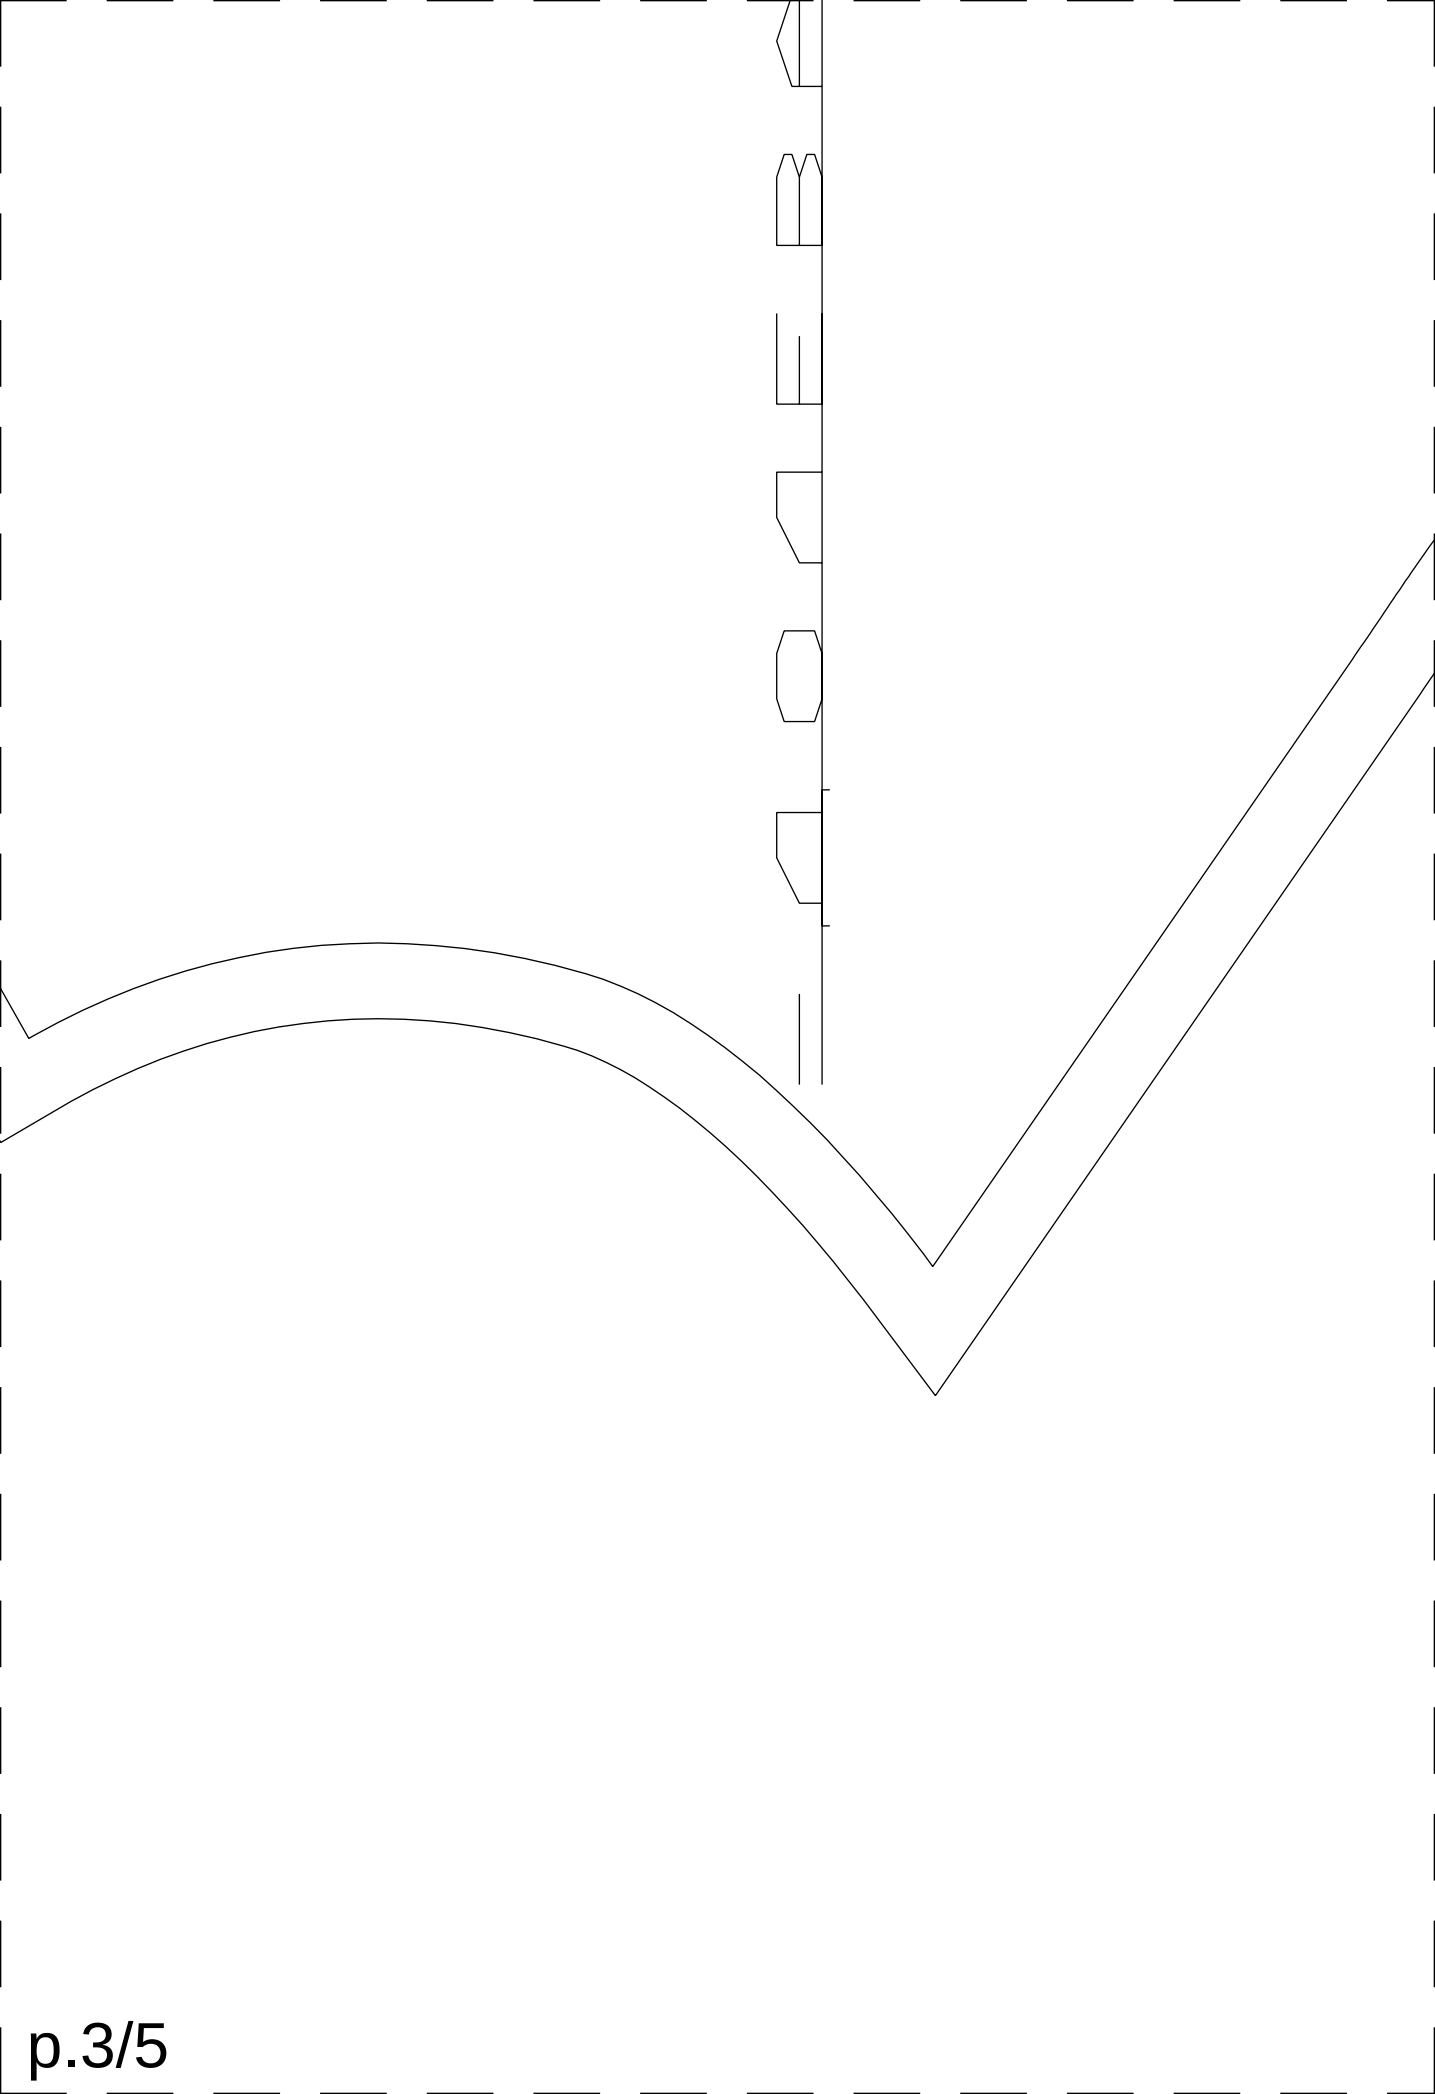





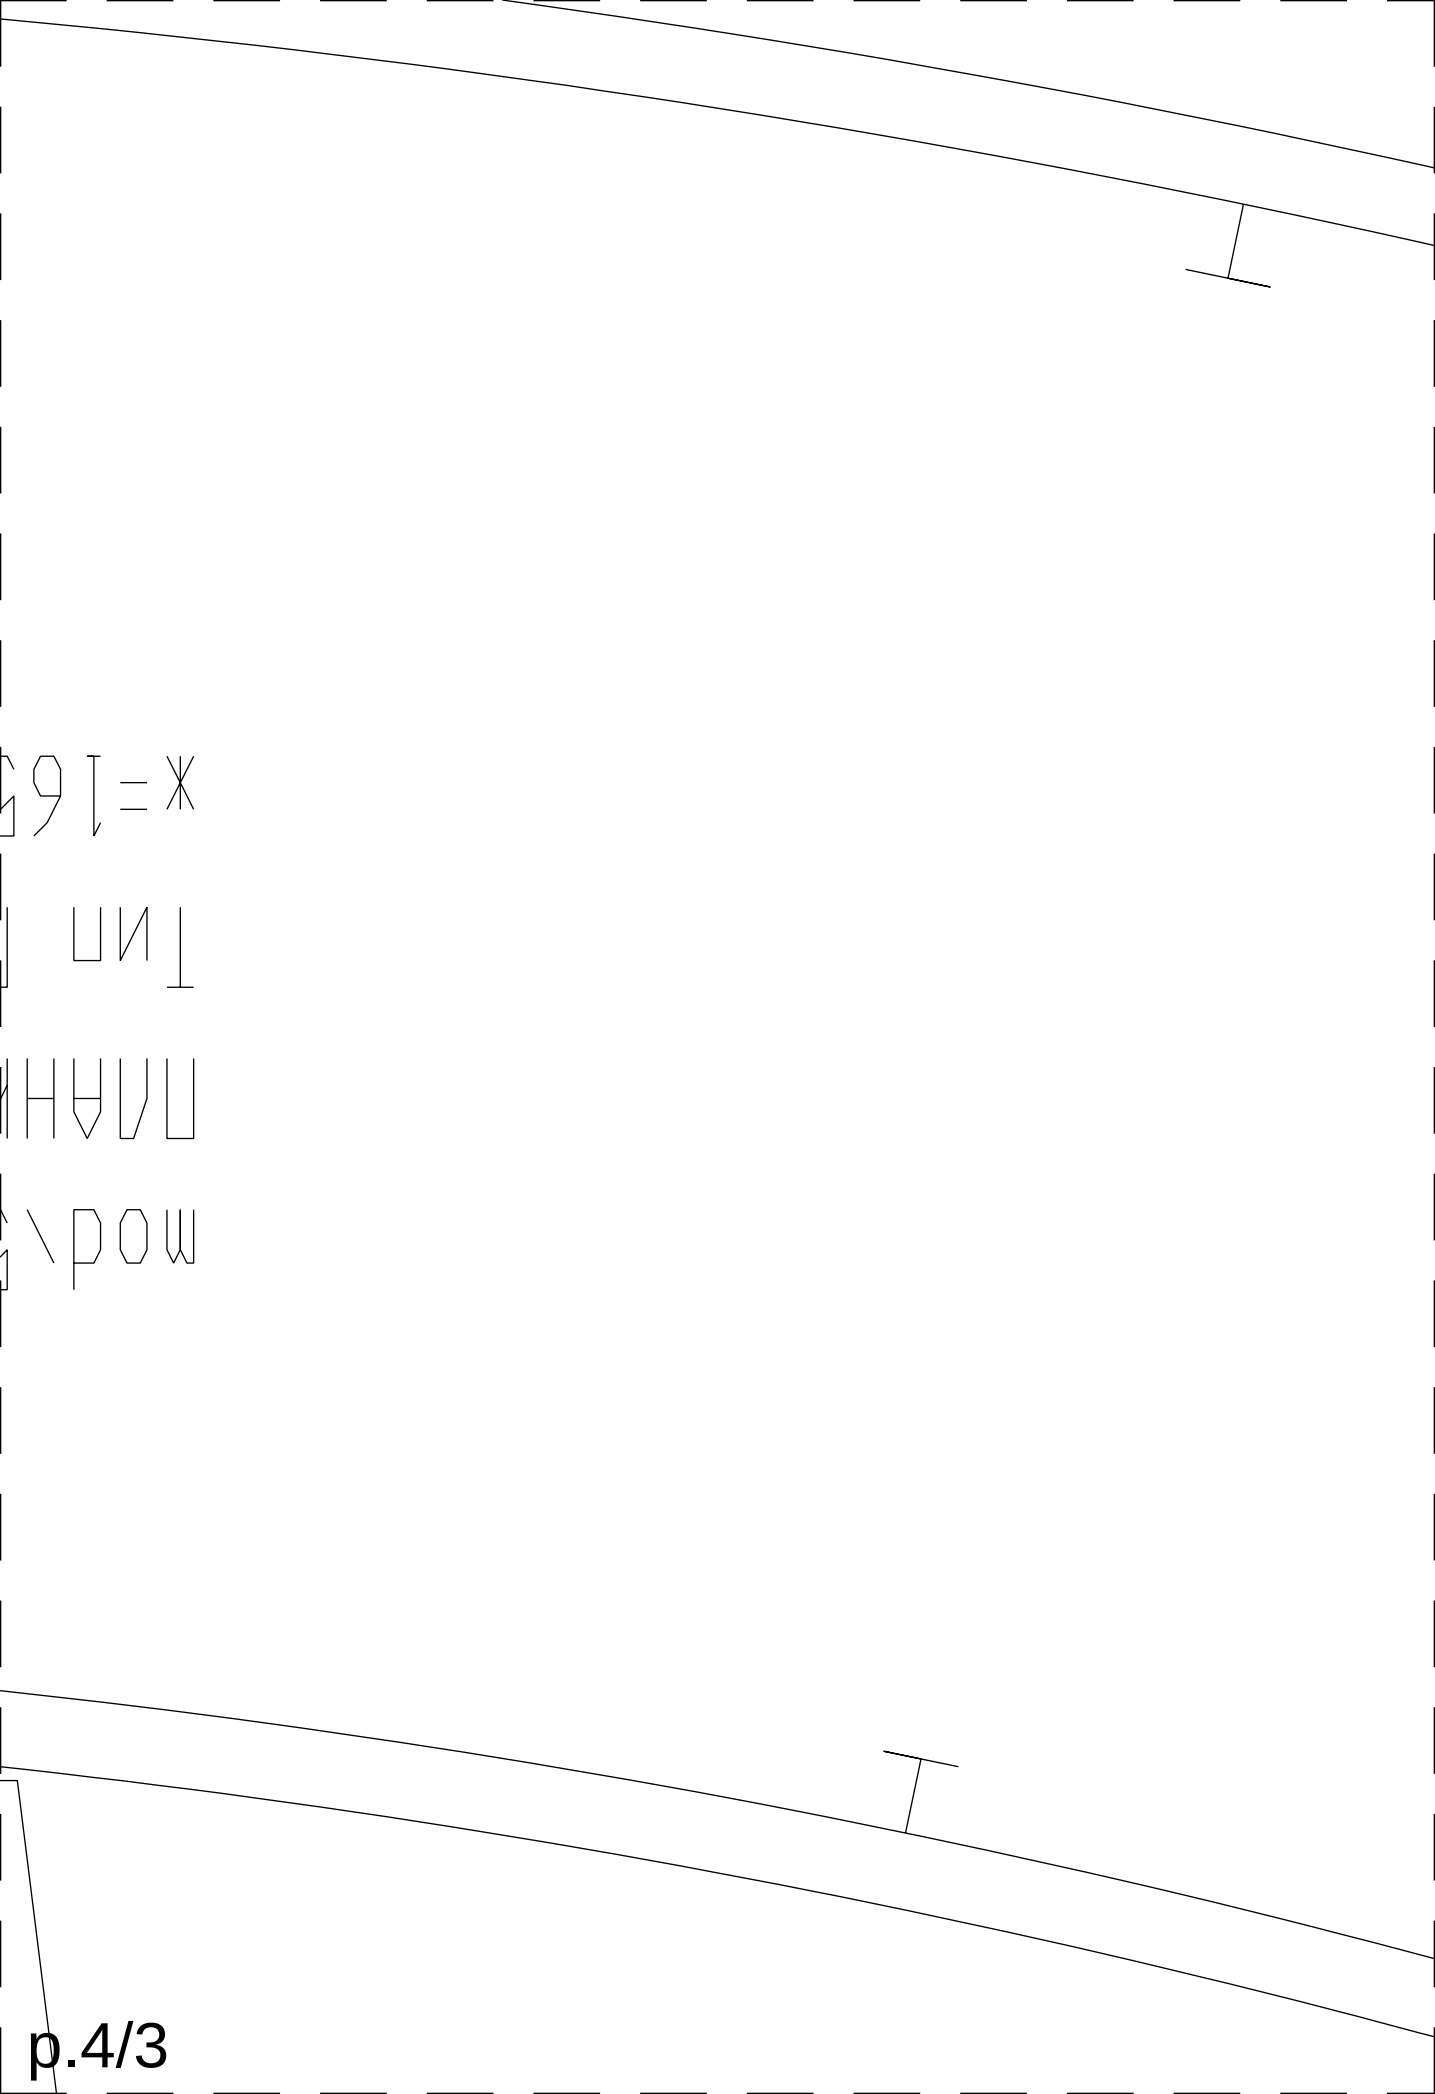



9] = ж

ни]

ннвв

\rho w

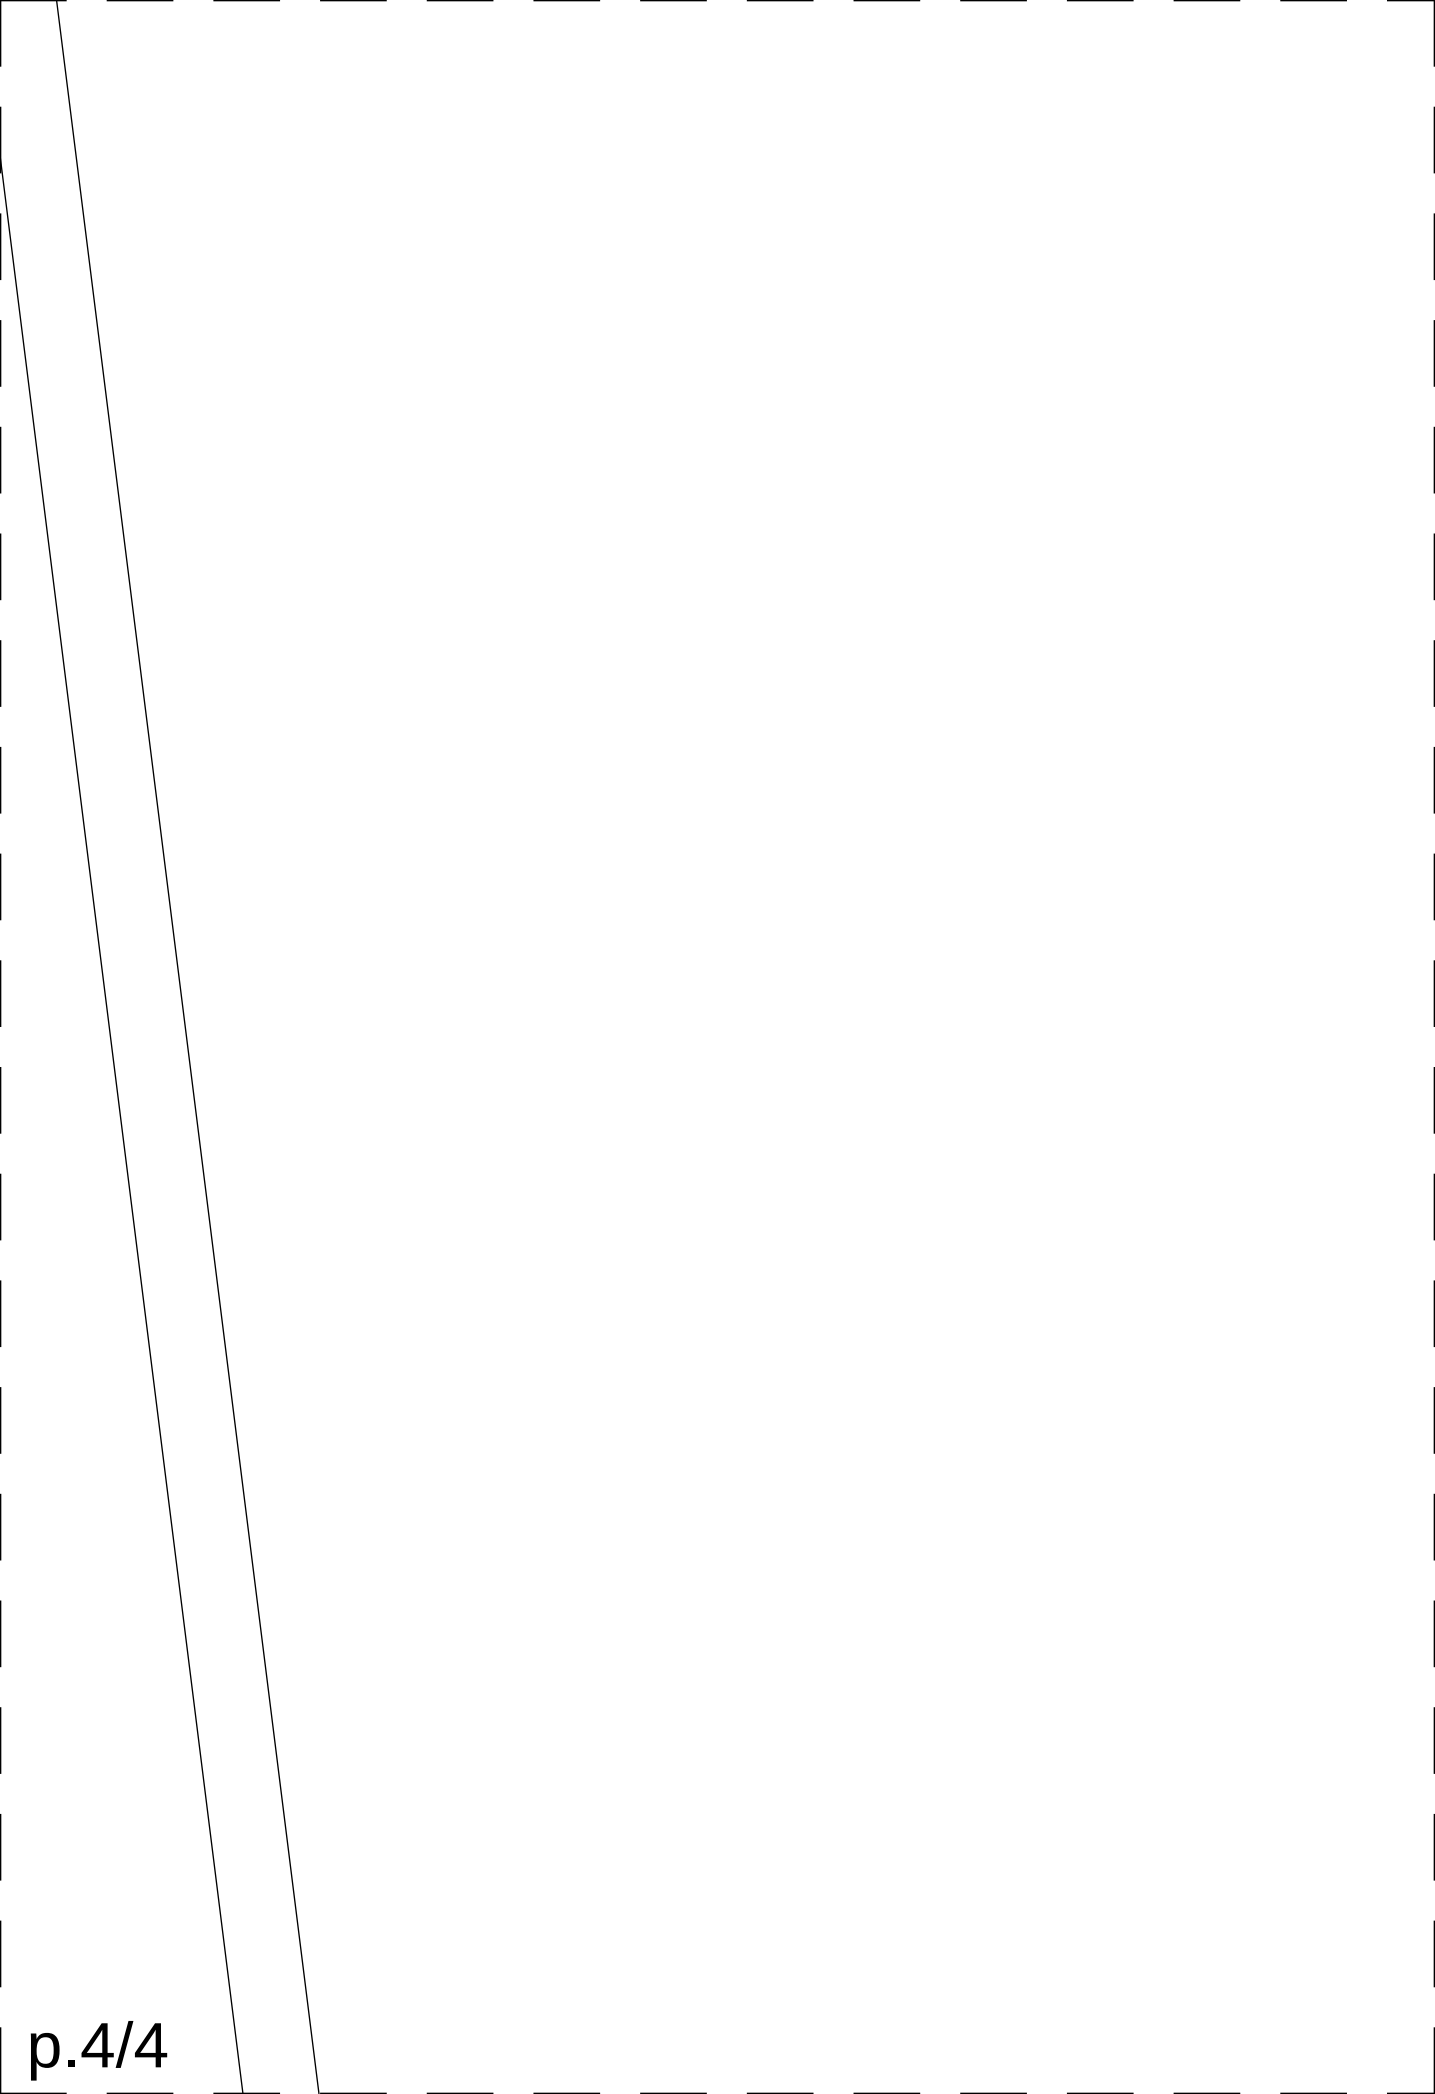

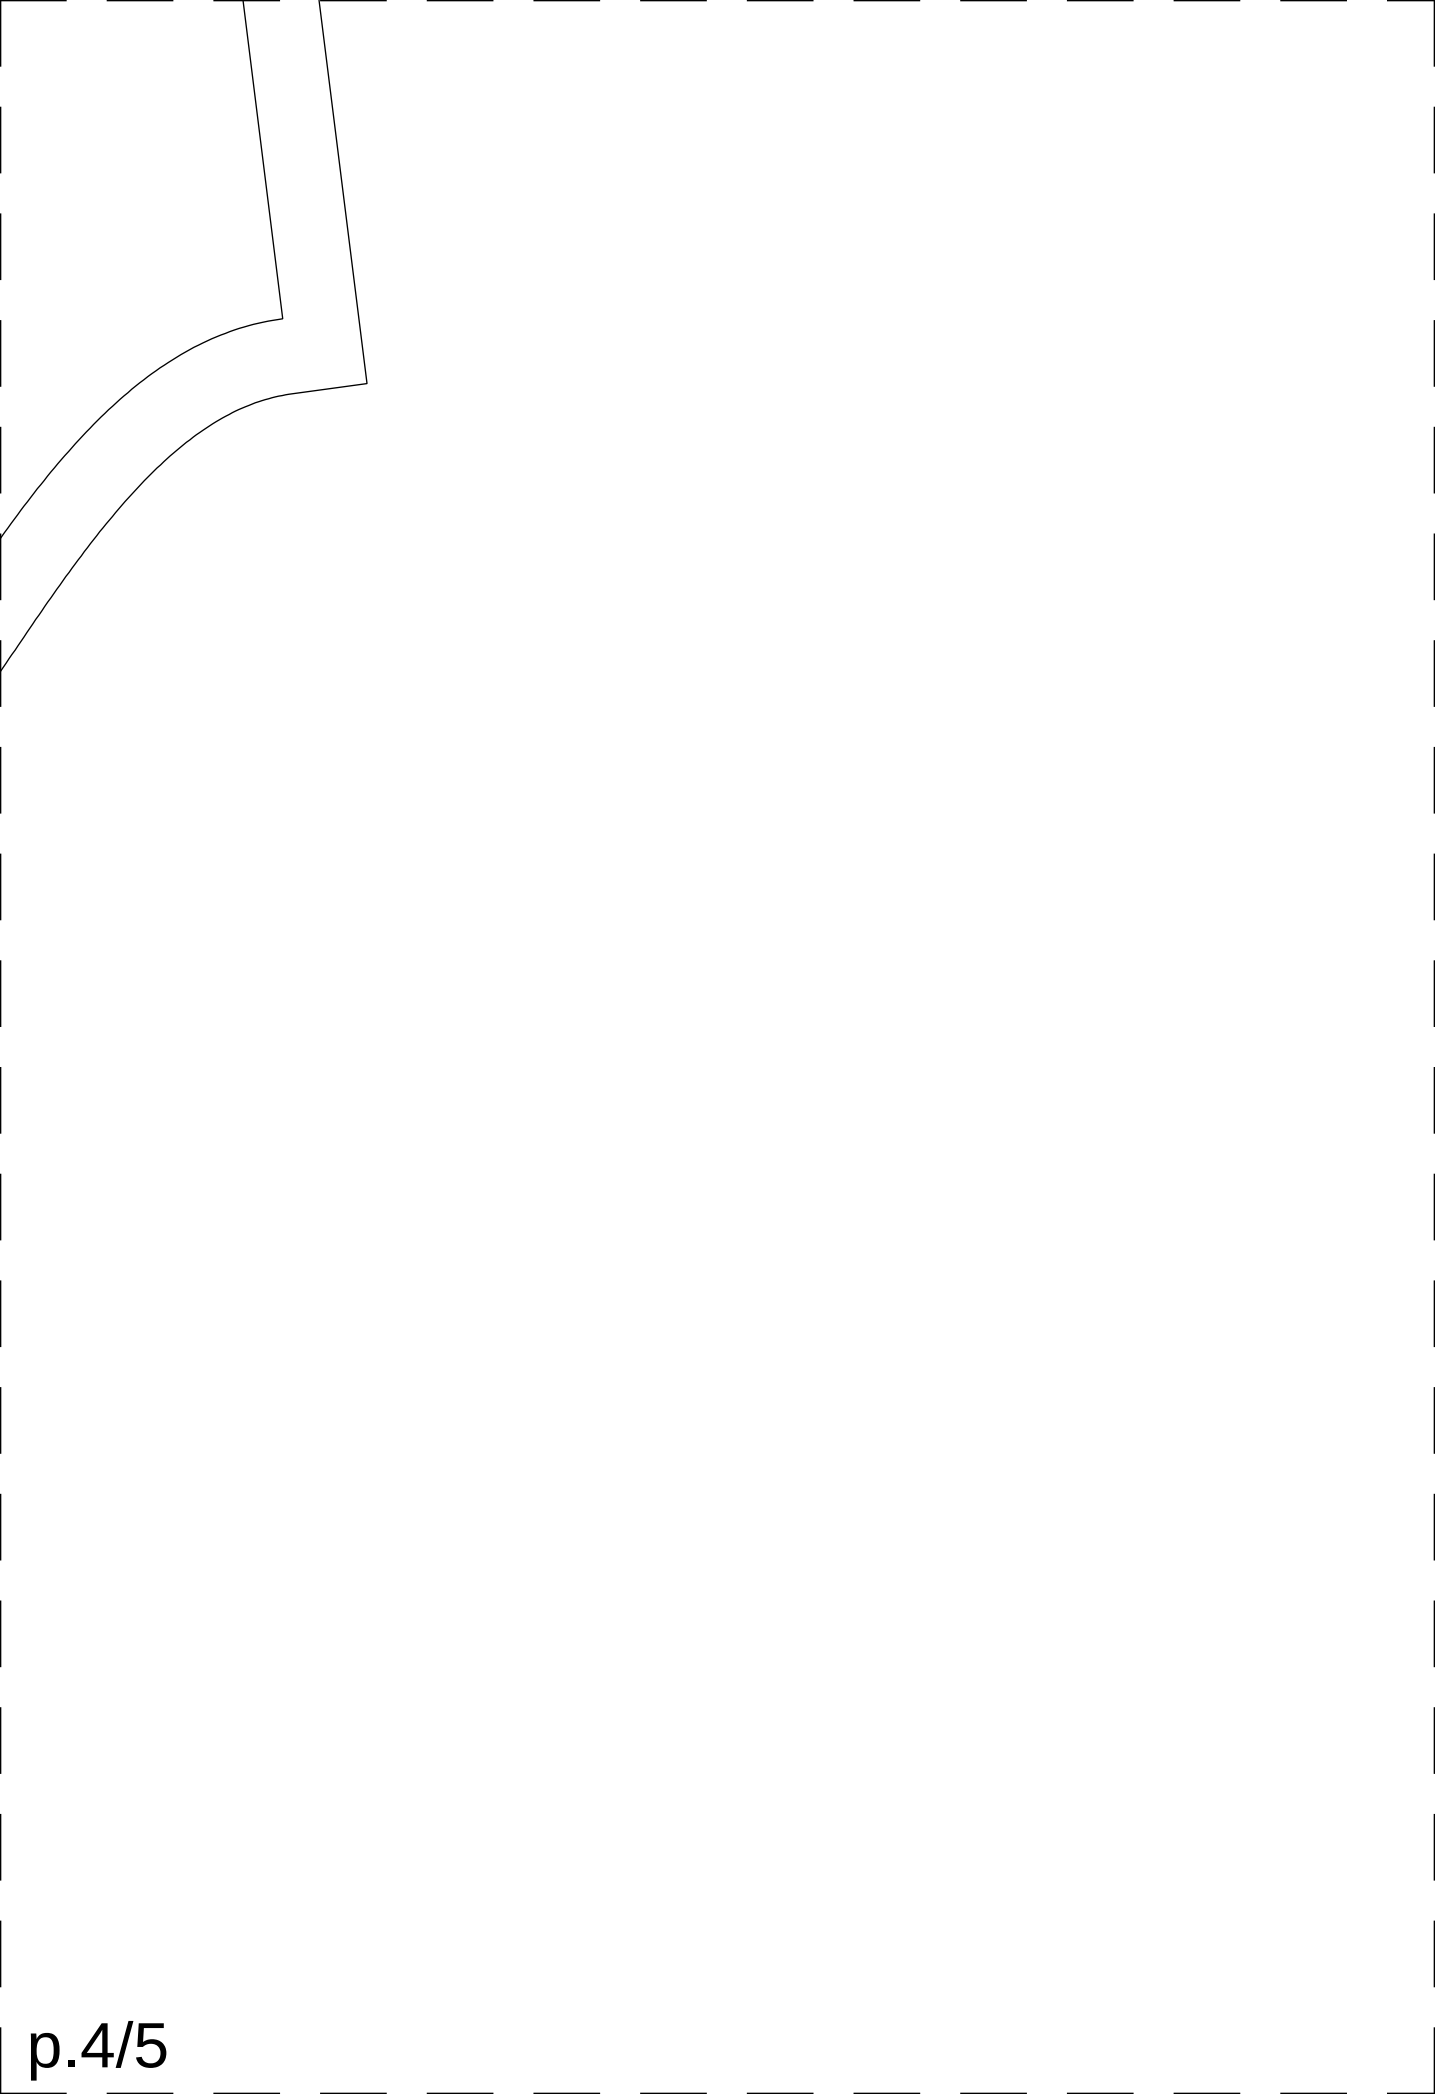





mod

СПИ


Тип

ж=1

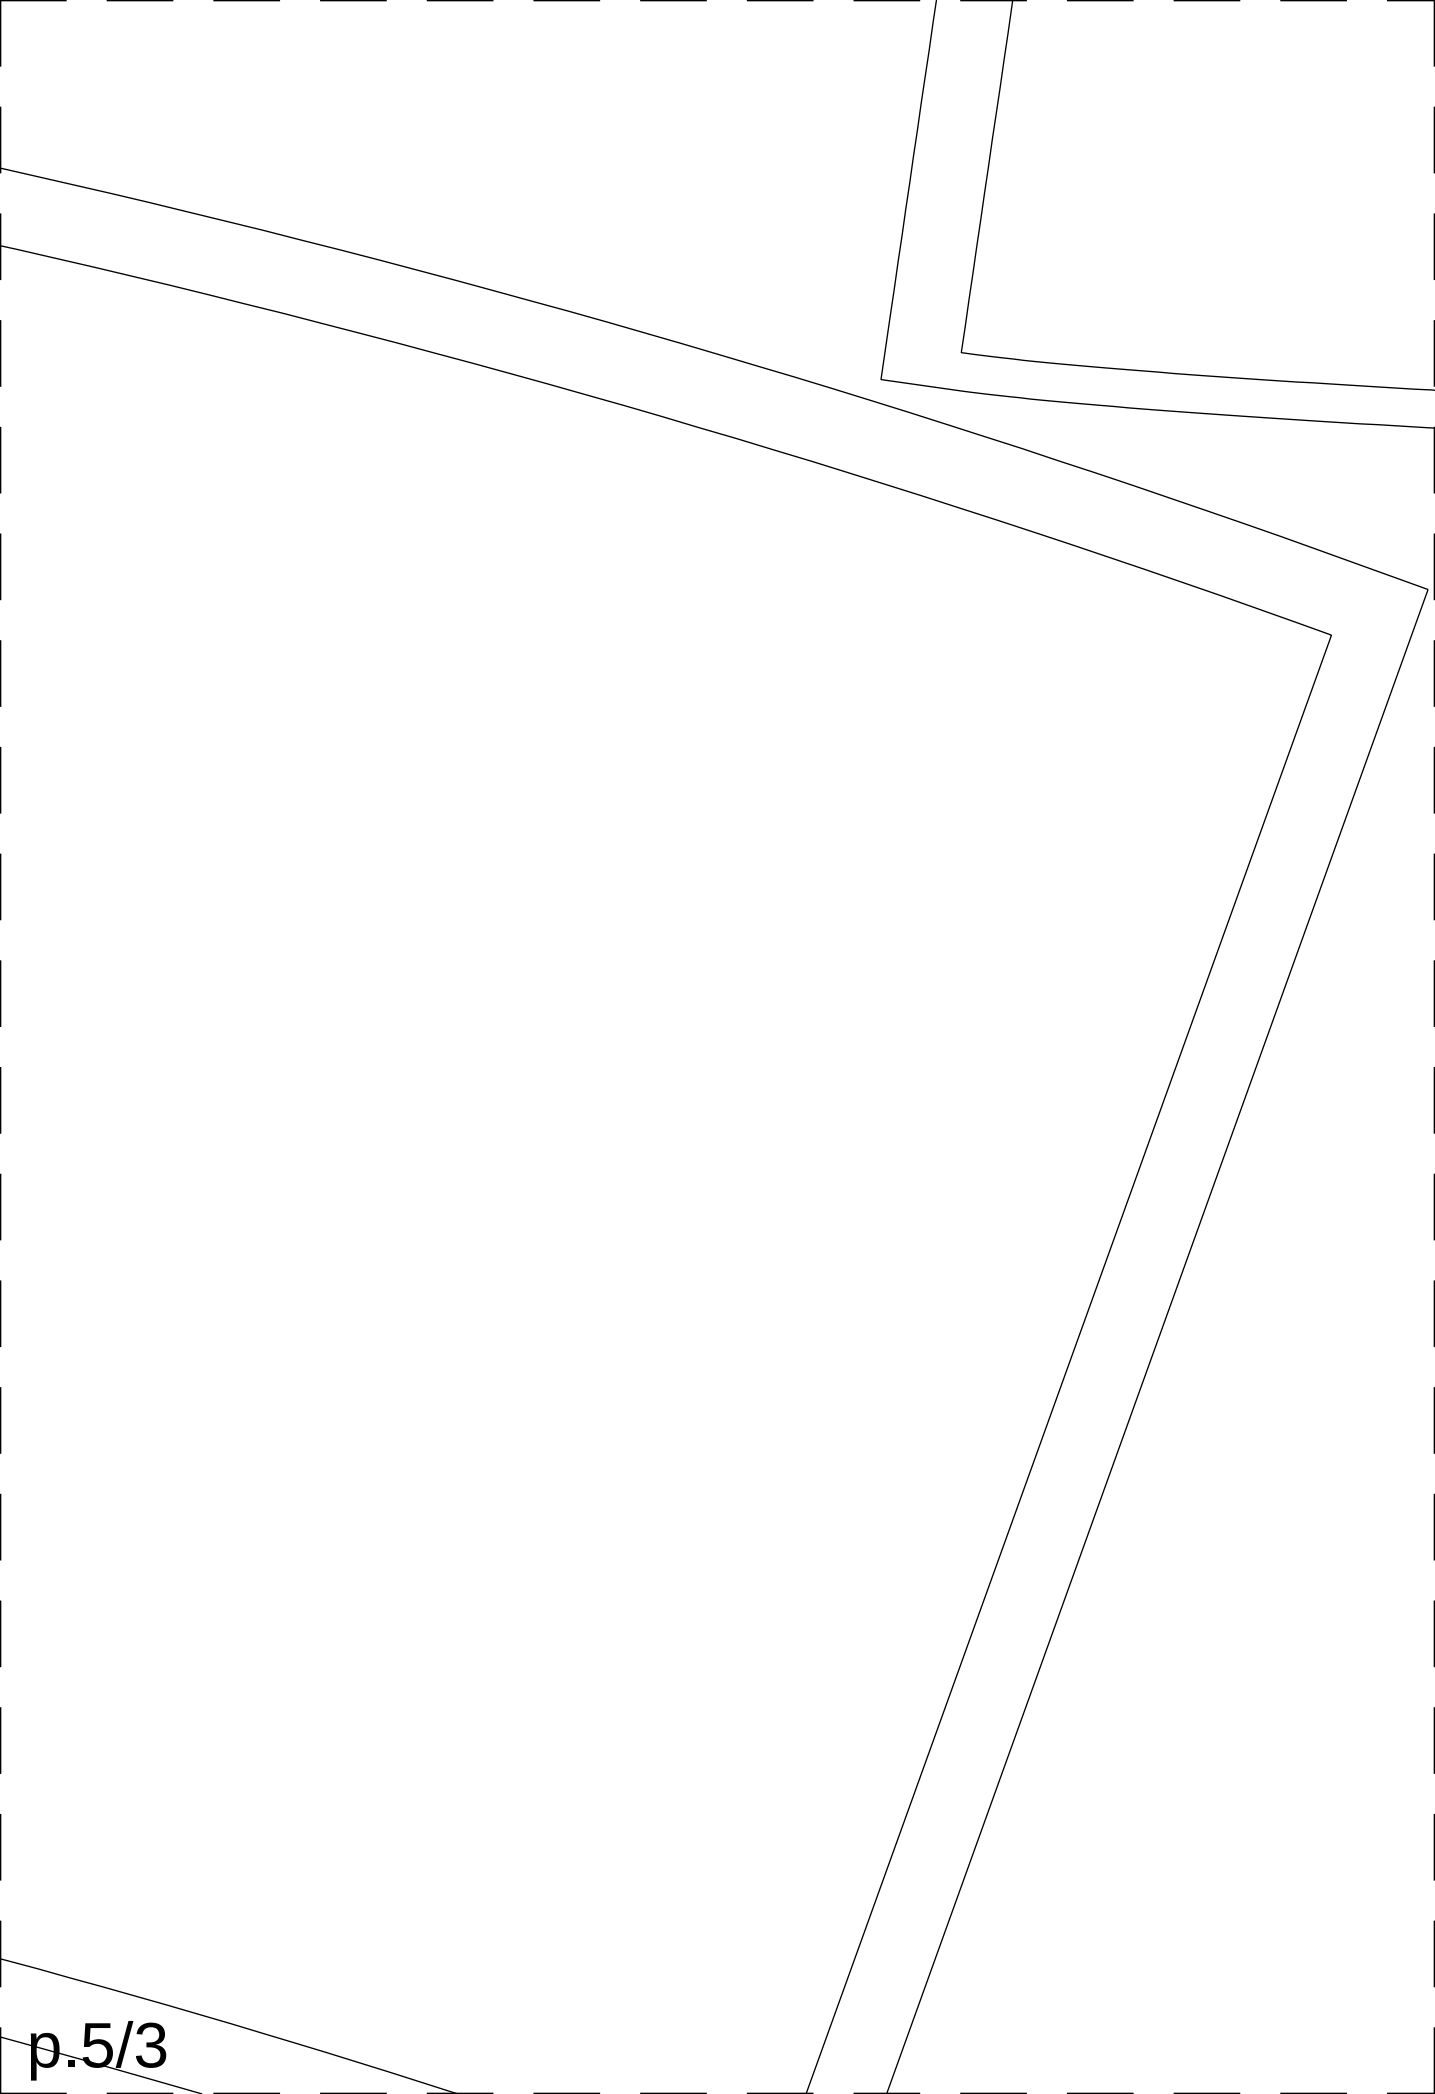

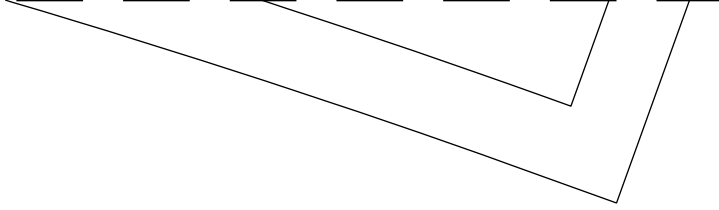



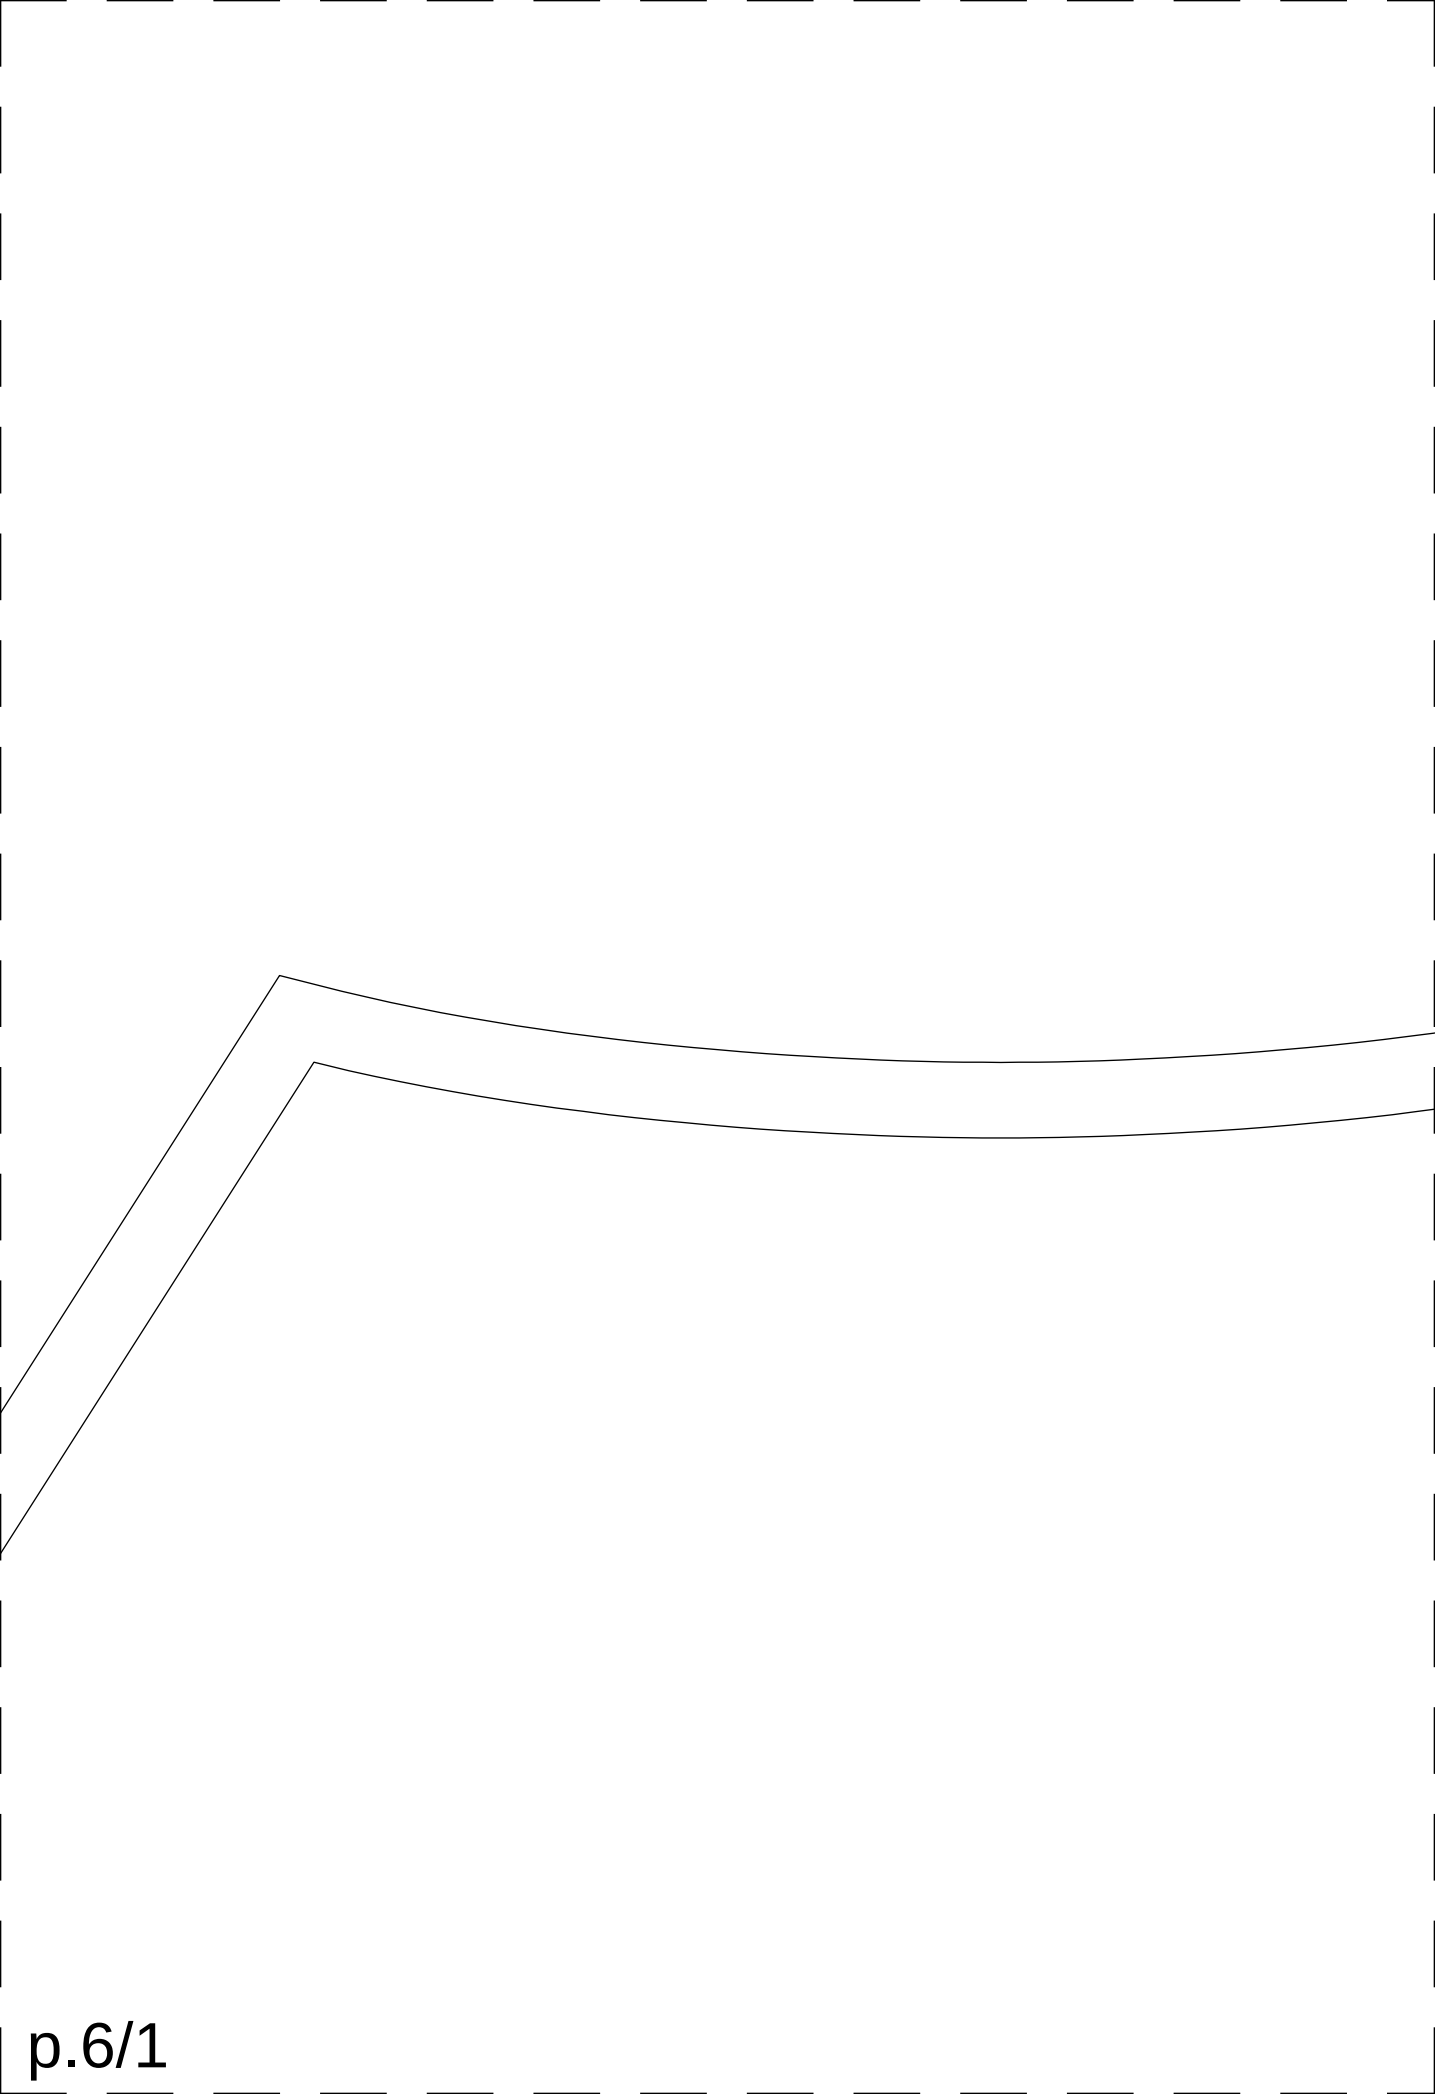



\5673

НКА

Полотна ВЕРХ, Кл. Дет. = (1, 0)

65=84=92

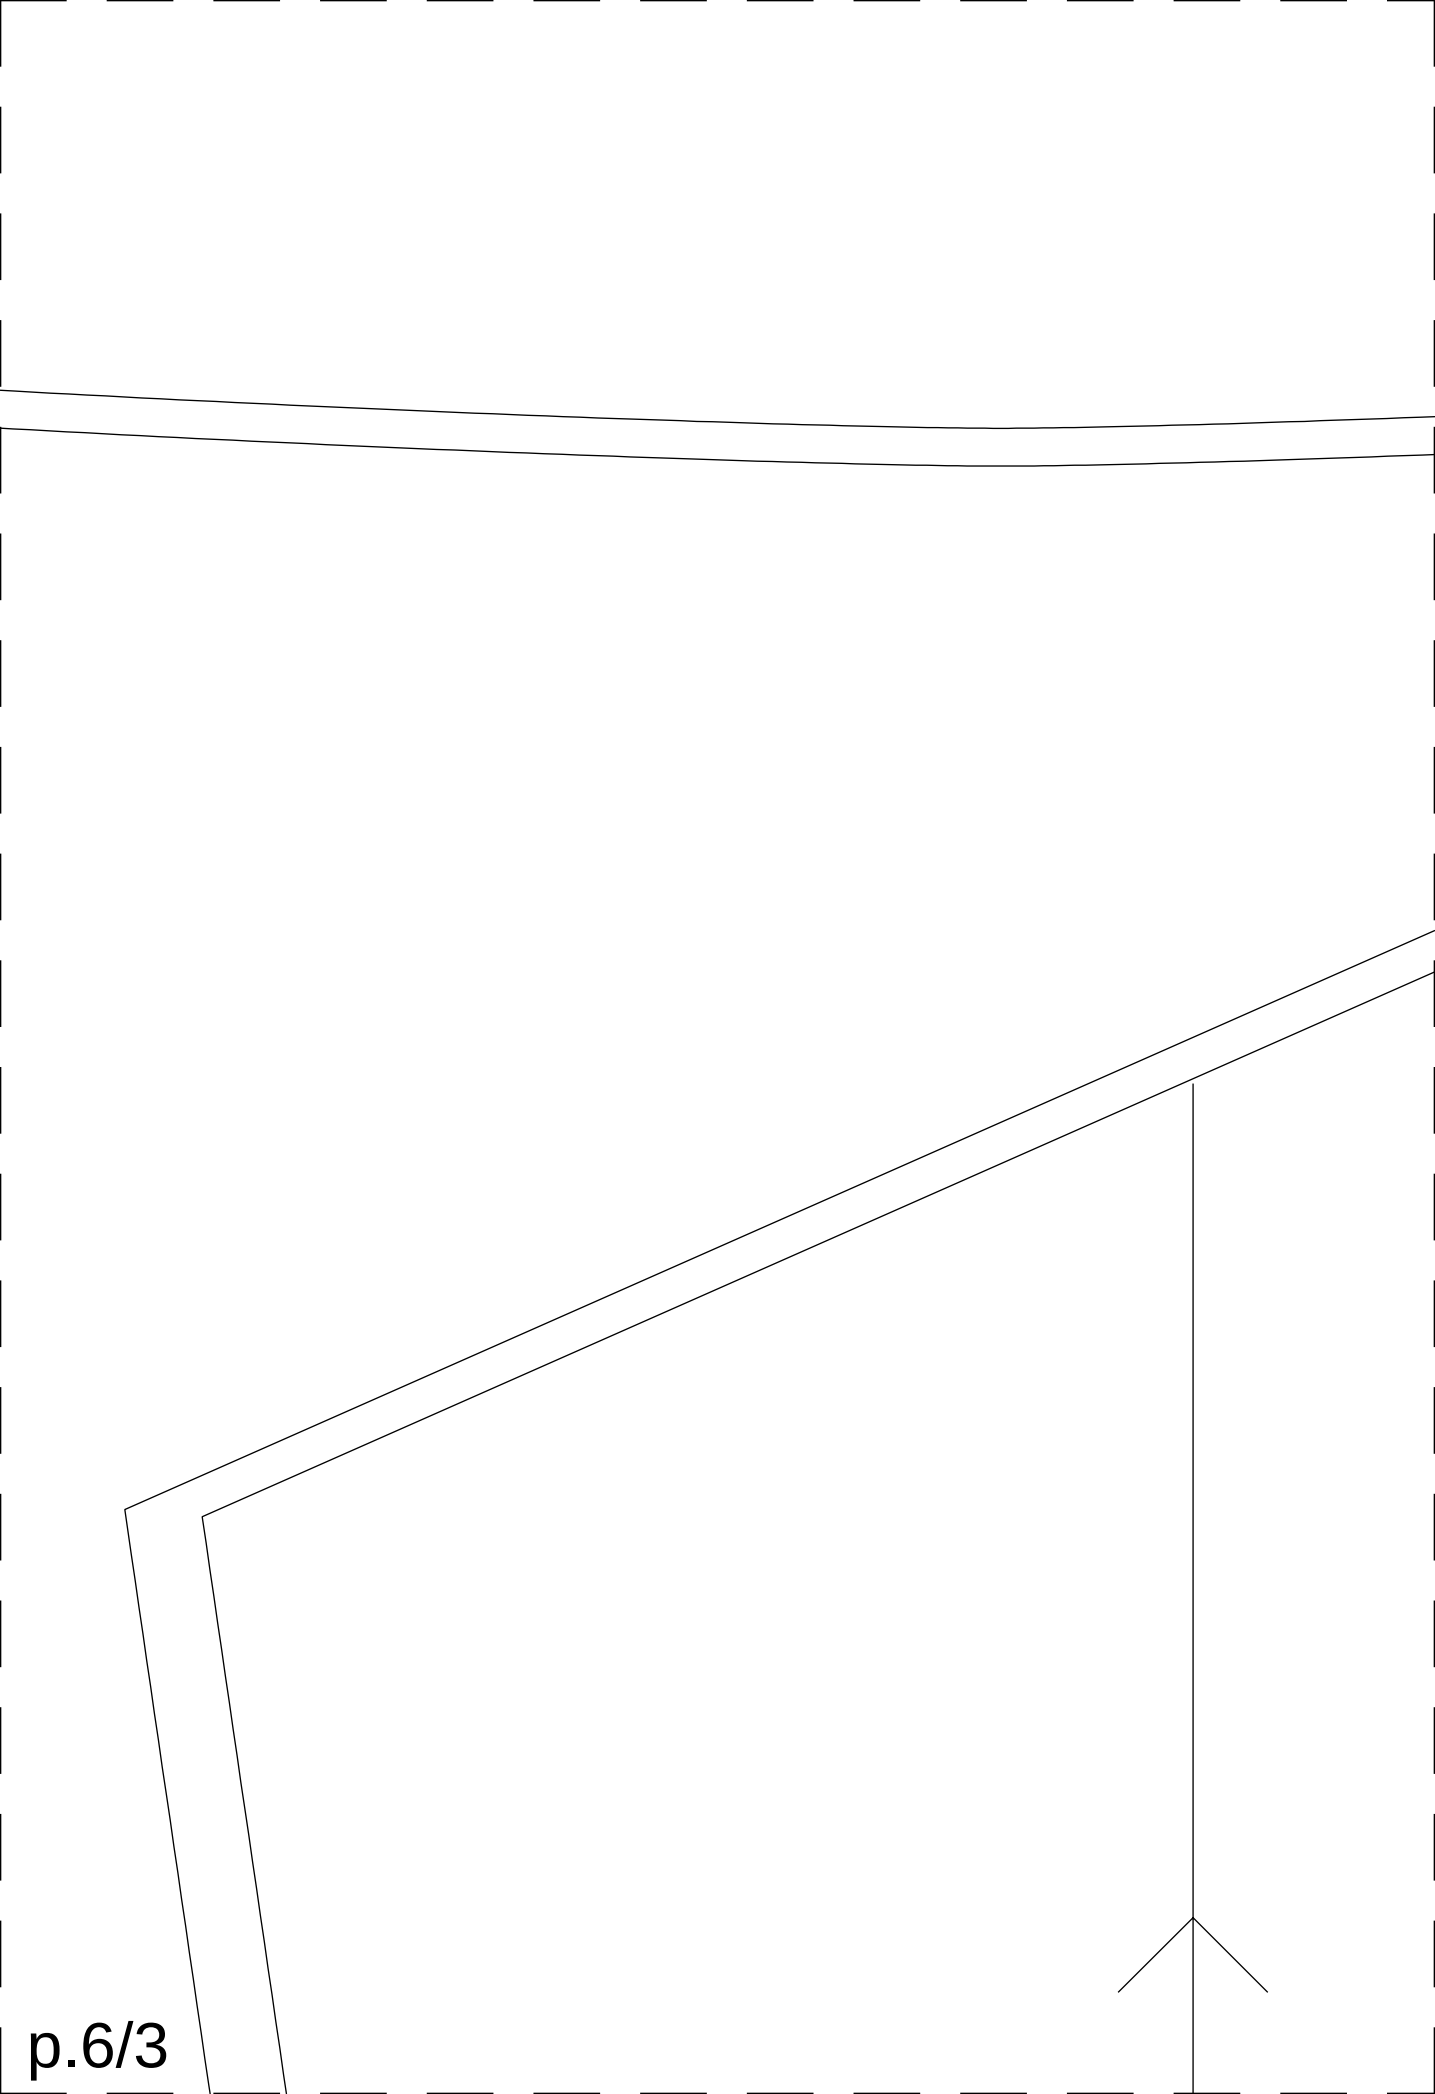

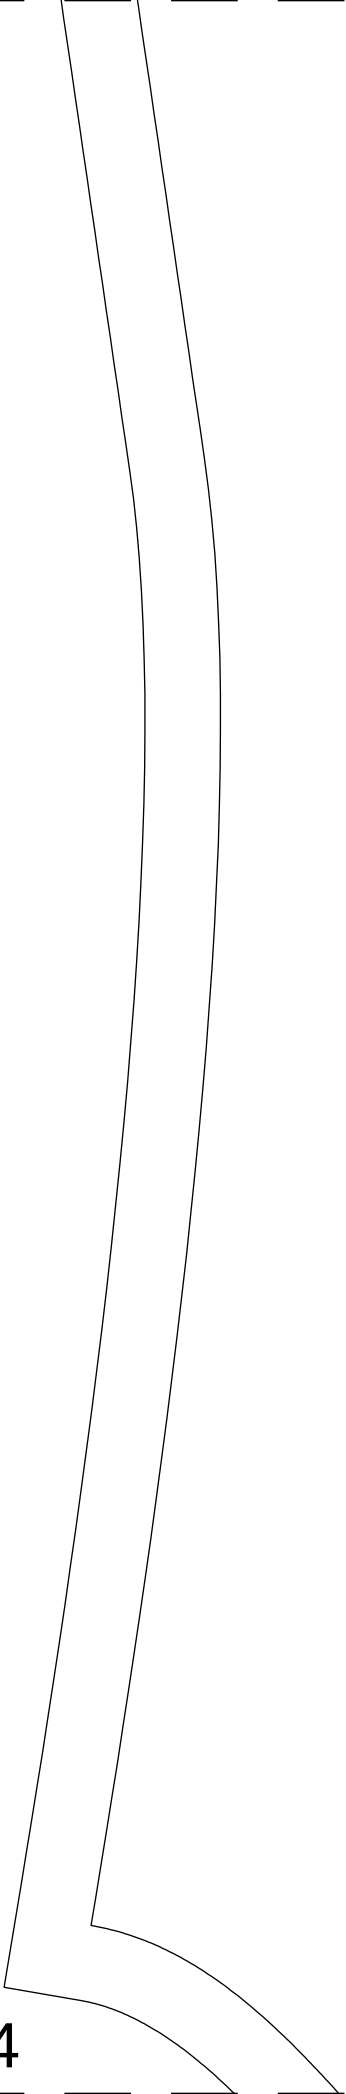


mod\5673


ЛЕВАЯ ПОЛОЧКА


Тип ПолотнаВЕРХ, Кл.Дет. =(1,0)


Ж=165-84=81



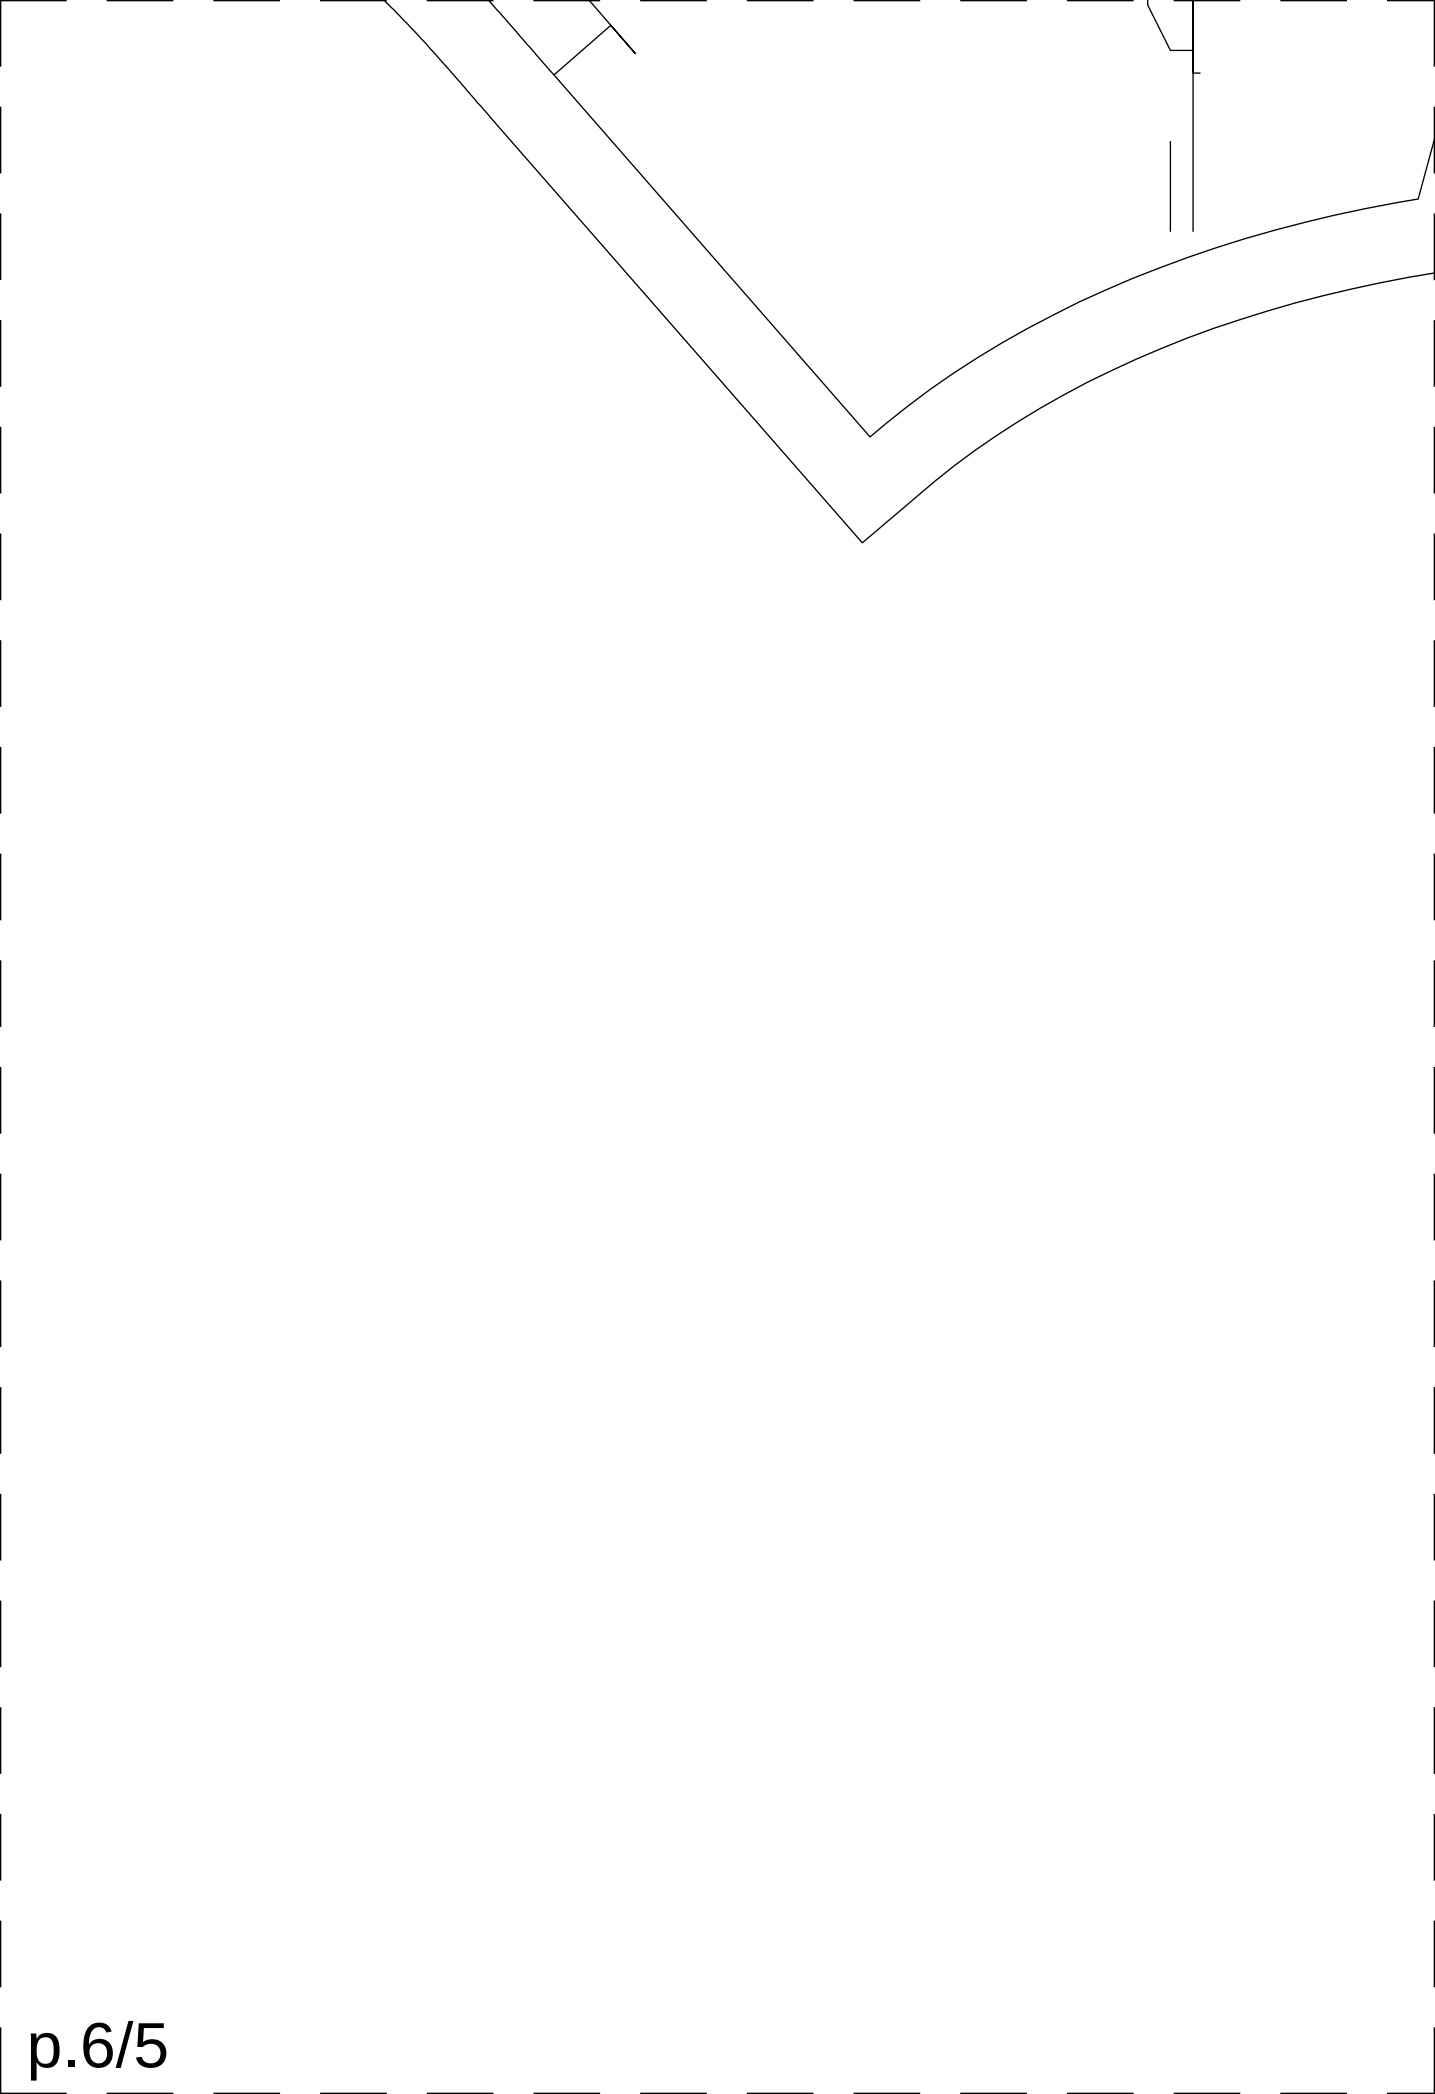


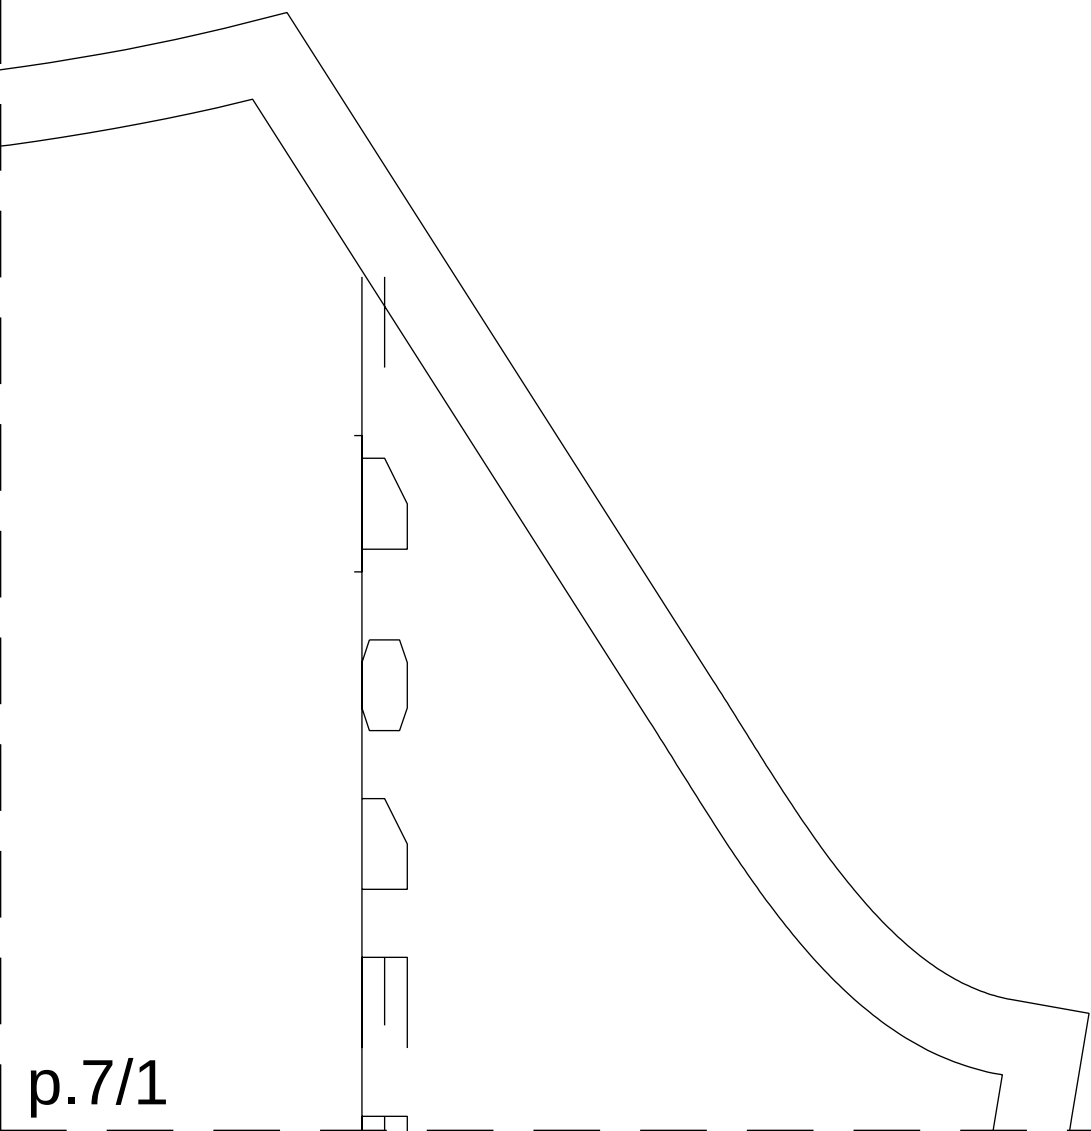



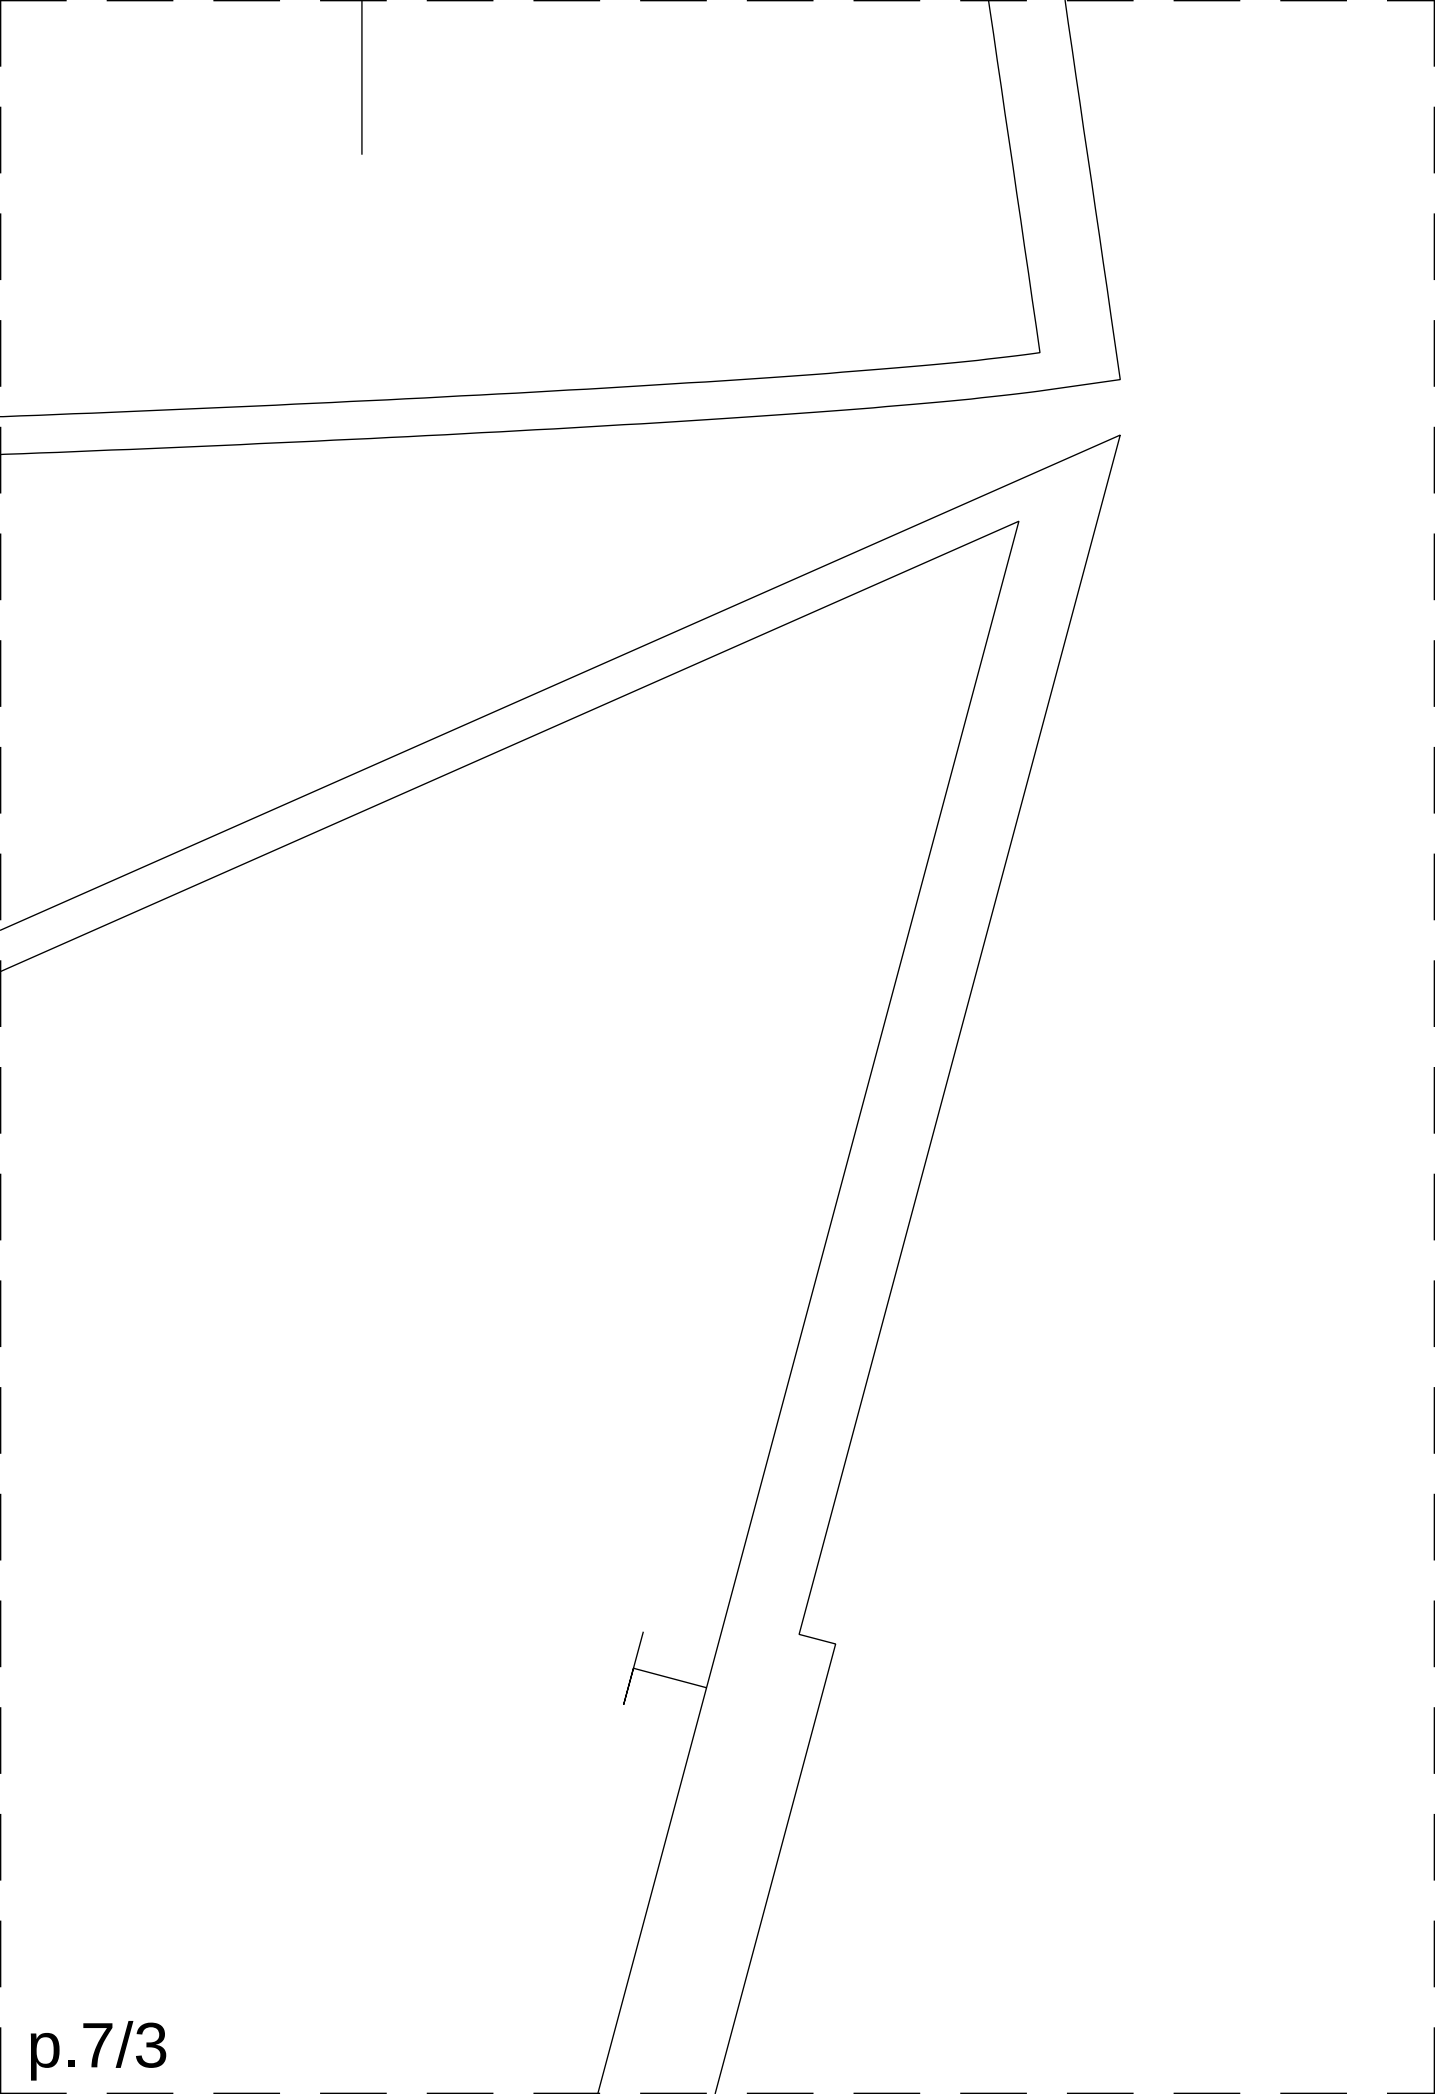





Maneken = ver. 0

rz\_1=165          rz\_16=84          rz\_18=64          rz\_19=92