


mod\5703

ПОДБОР

Тип ПолотнаВЕРХ, Кл.Дет. =(1,1)

Ж=165=84=92

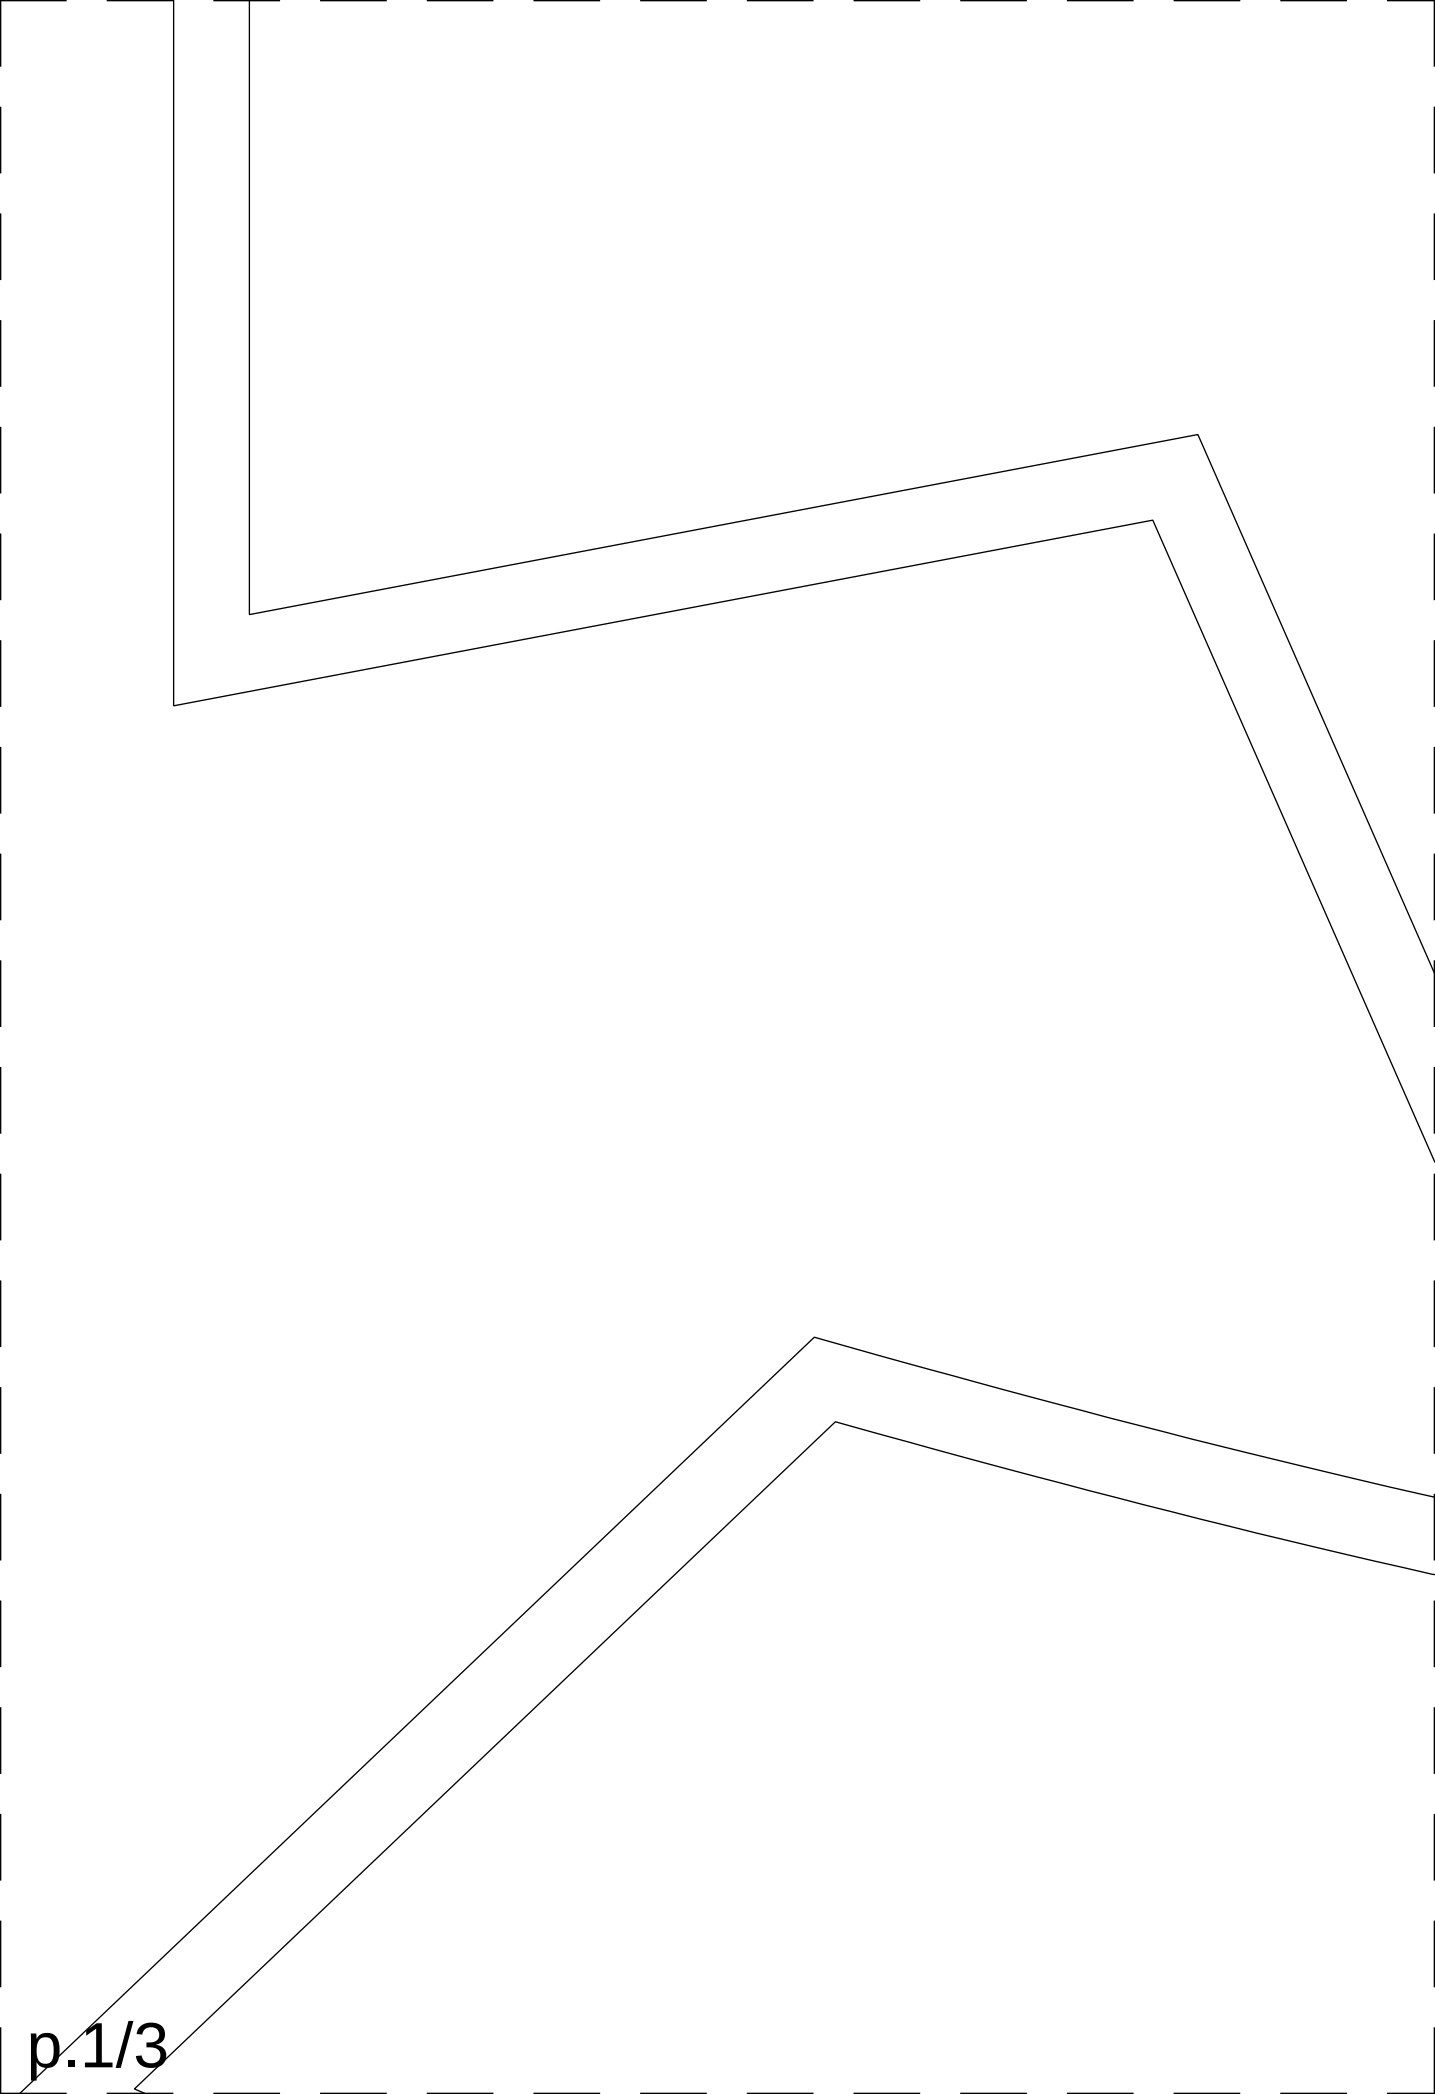


mod\5703

КАРМАН


Тип ПОЛОЖИТЕЛЬНО, Кн. Дел. = (1, 0)

*=165=84=92


— ДОДЕБЕР—

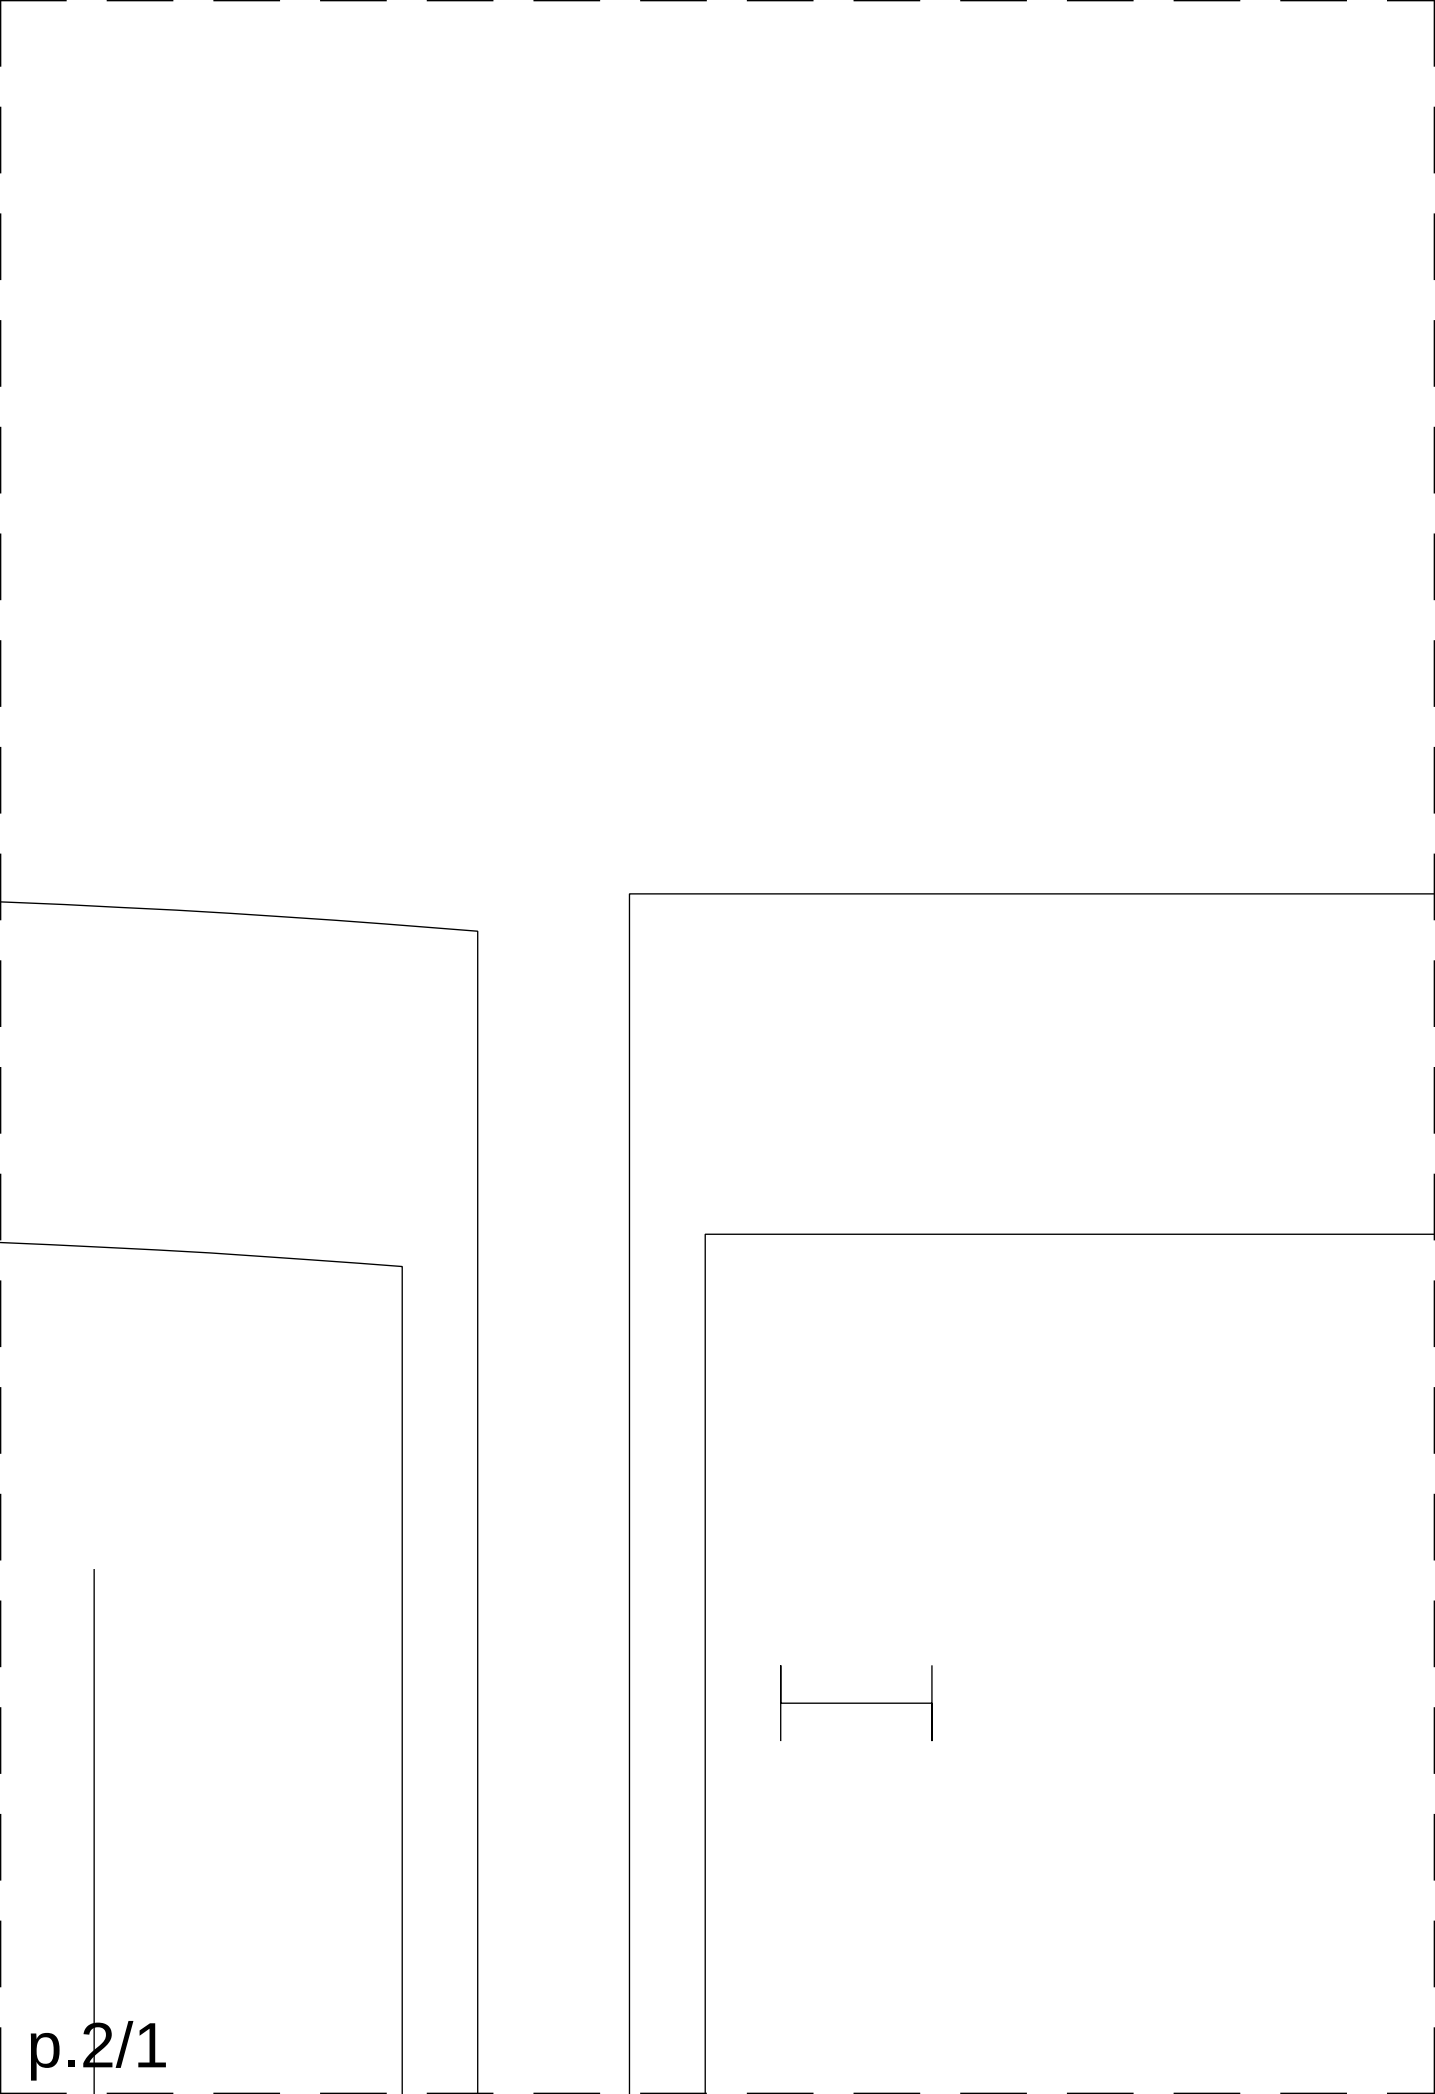




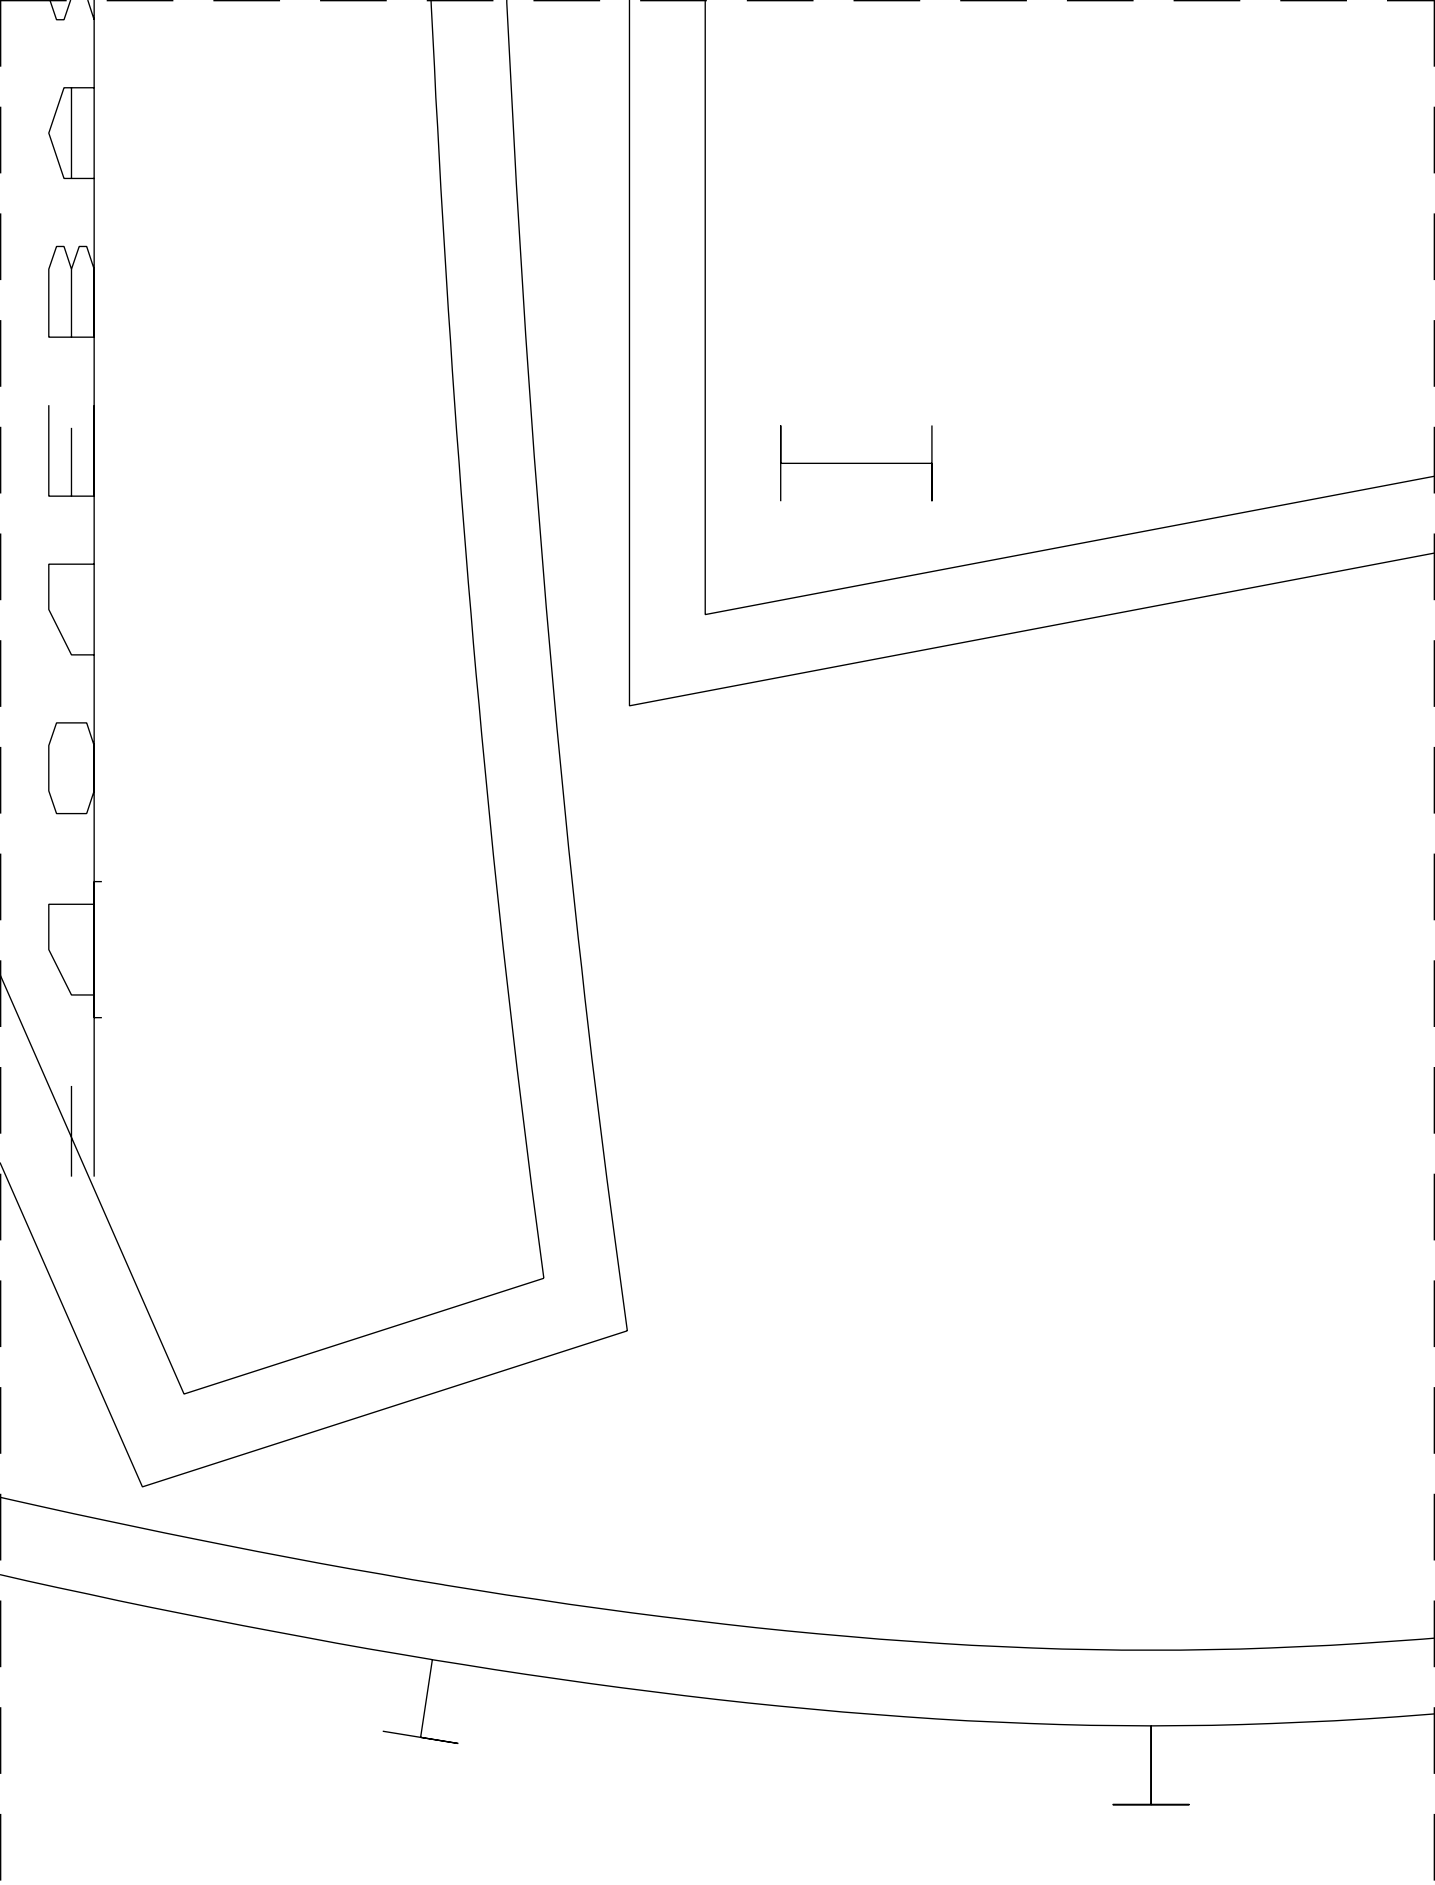

$$\langle 0' | = \langle 1 | \theta \cdot U$$

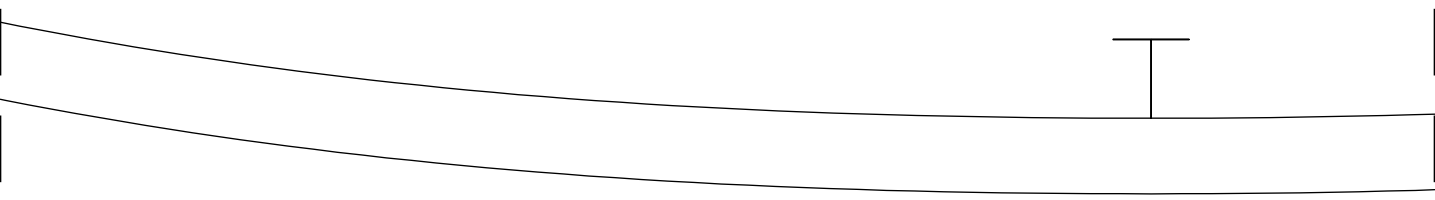

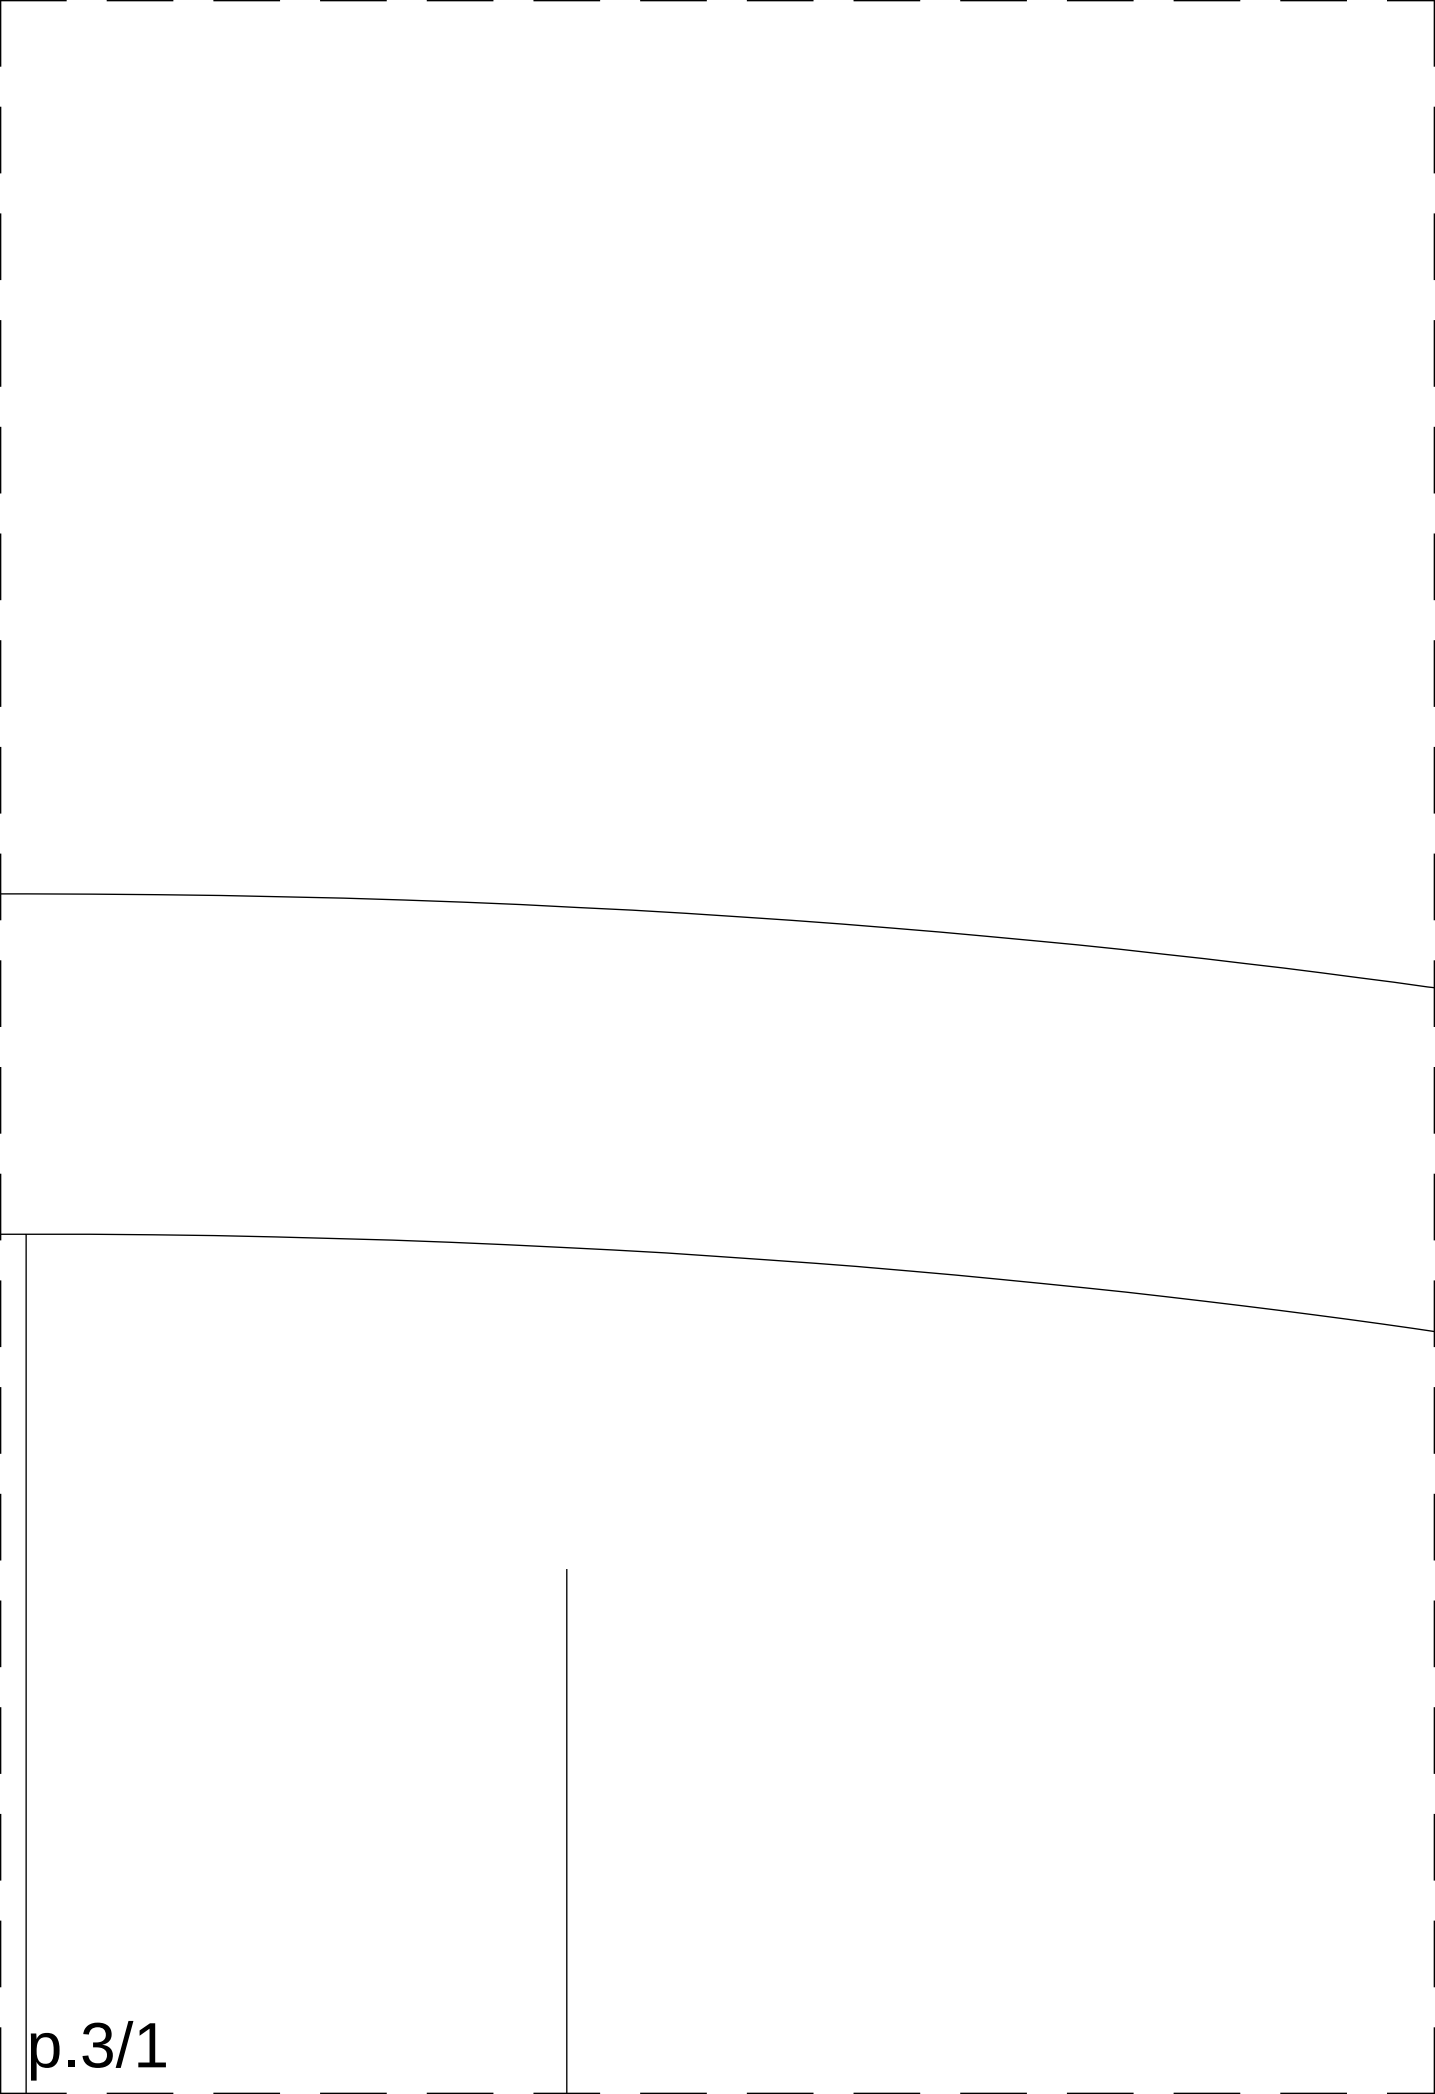

mod\5703

ПОЛОЧКА


Тип Полотна ВЕРХ, Кл.Дет. = (1,1)

*=165=84=92

ДОДЕКАЭДР -

$$* = 165 = 84 = 92$$

ТНН ПОЛОТНАБЕРХ, К

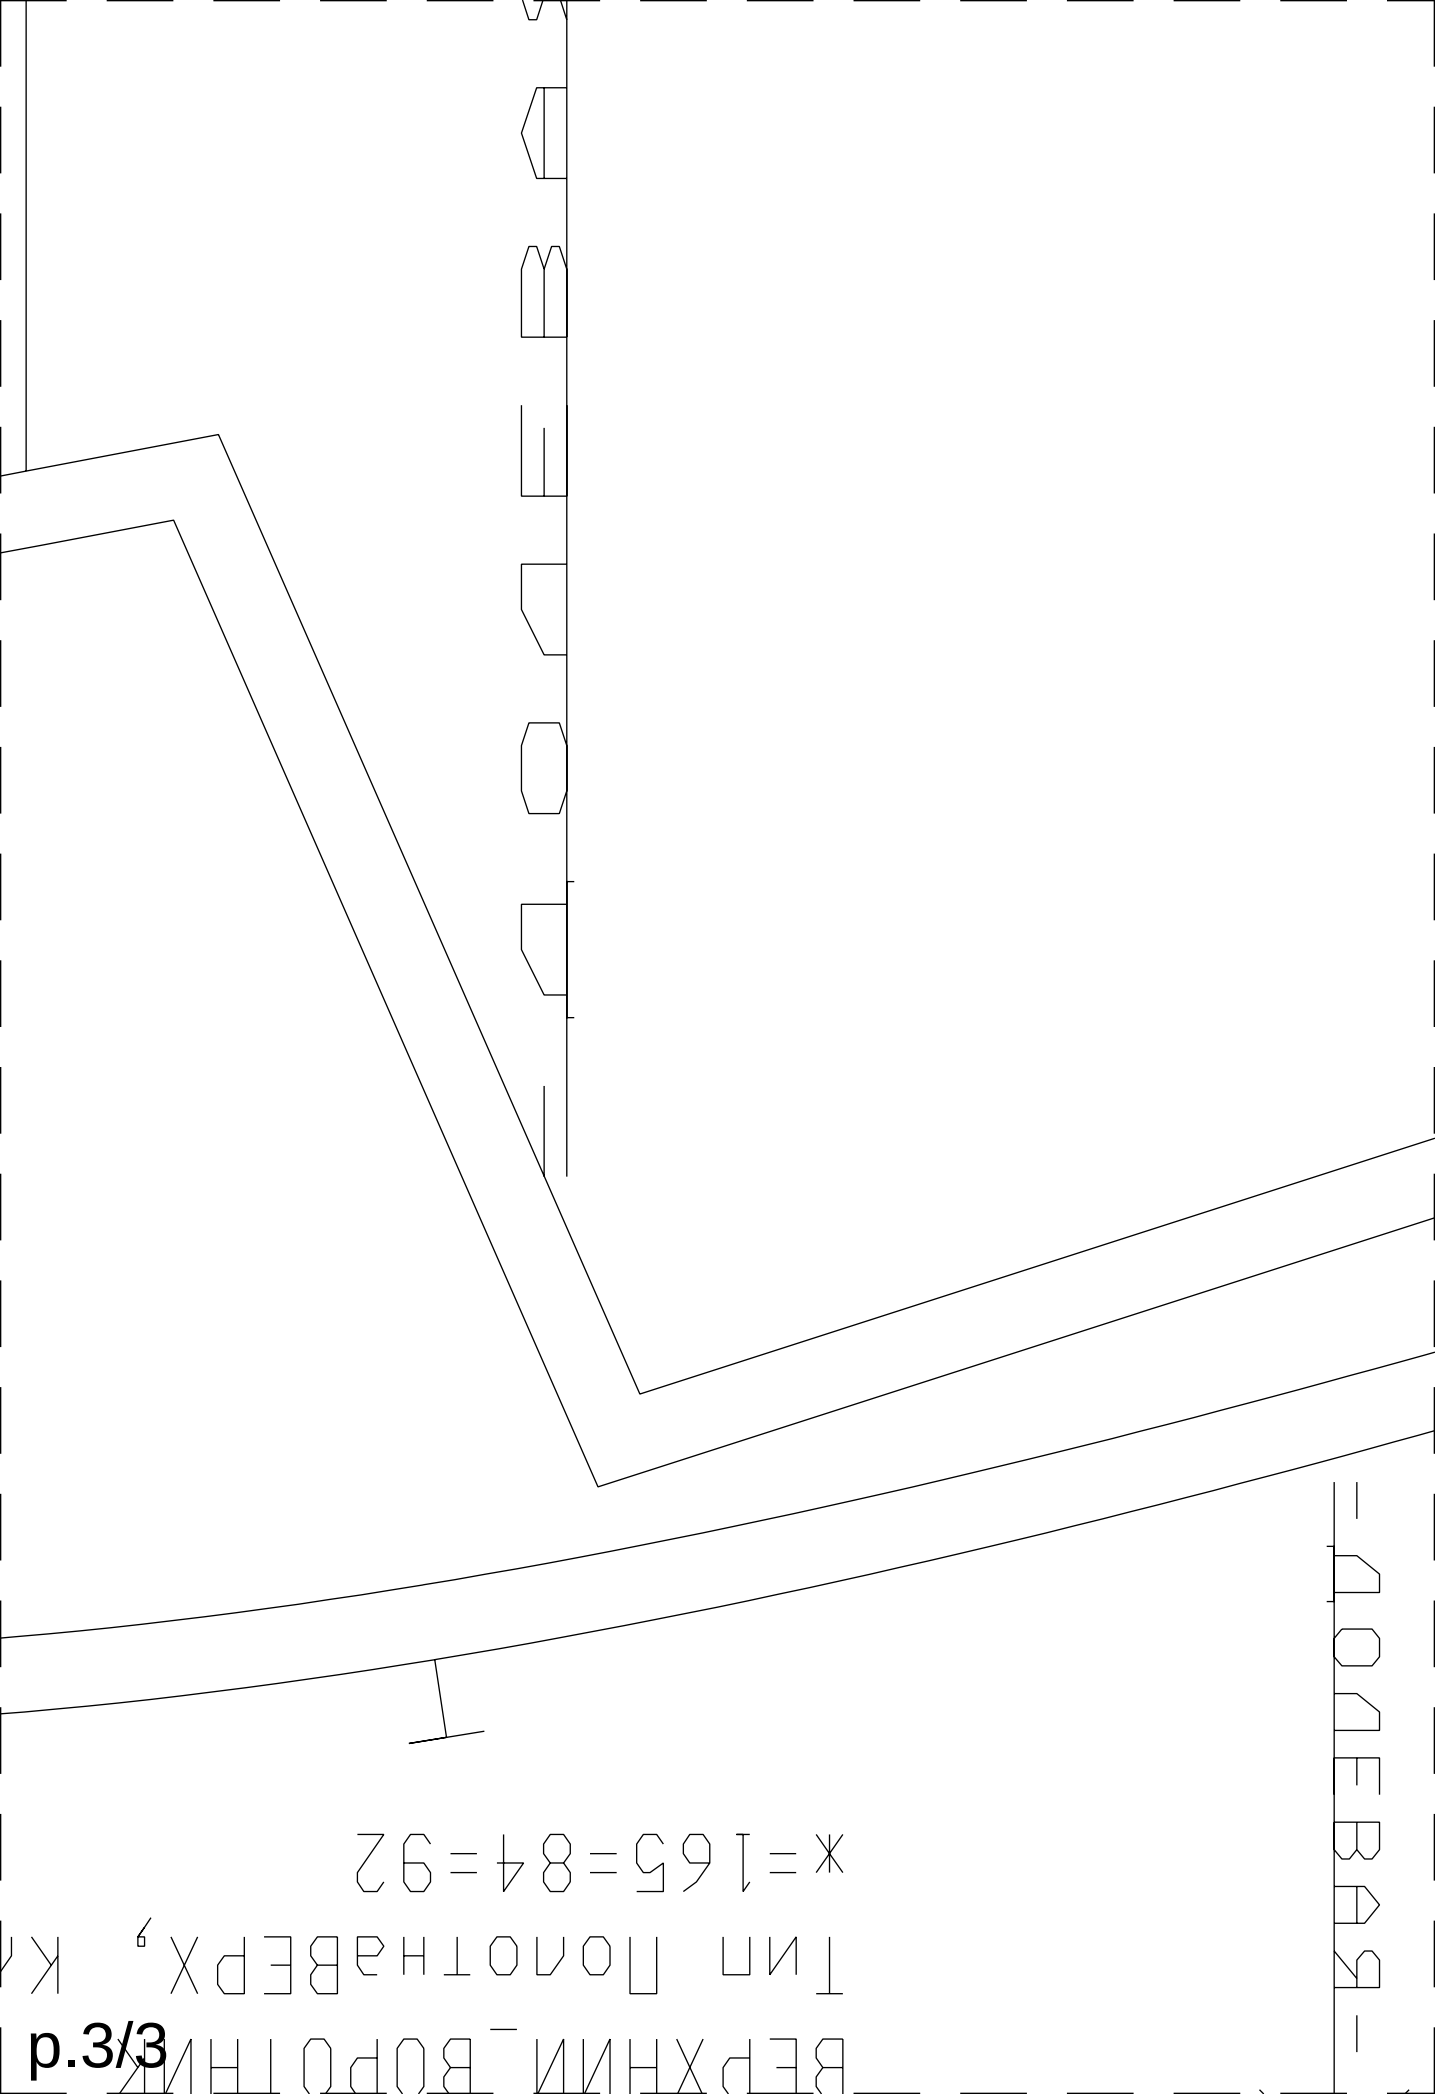

ΣΟΖΣ\ρoш


mod\5703


КЛАПАН


Тип Полотна ВЕРХ, Кл. Дет. =(1,5

ж=165-84=92

-ПОПЕРЕД-

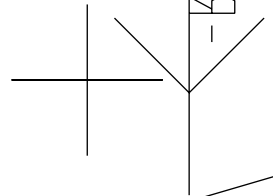

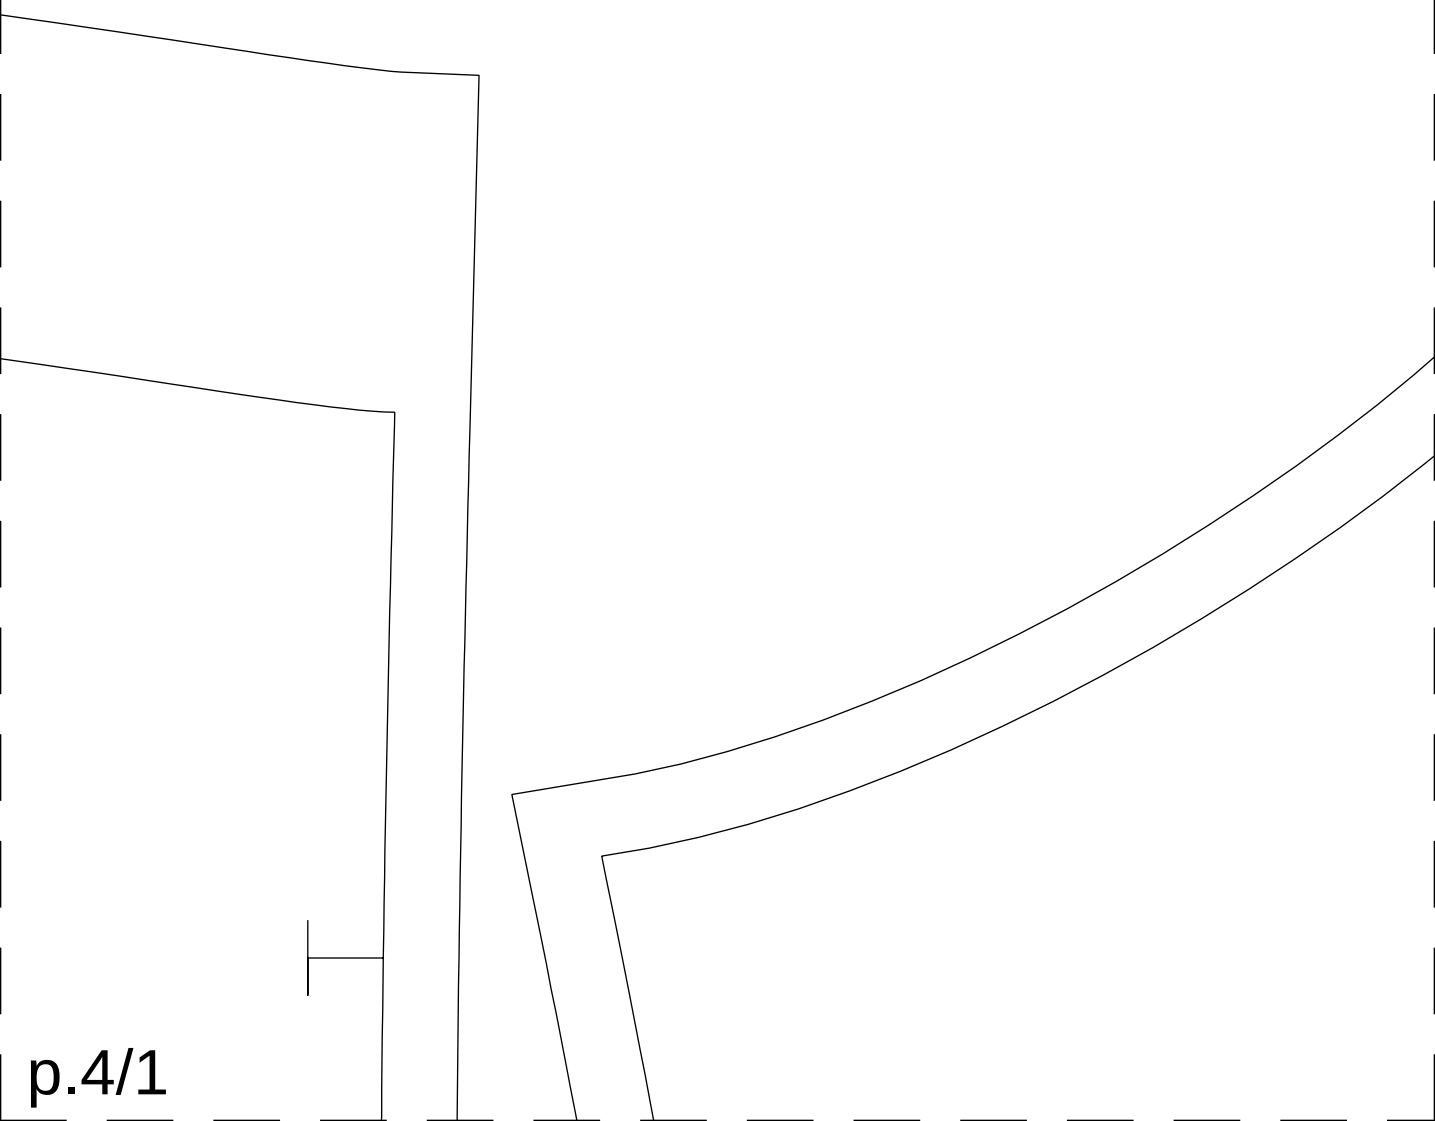

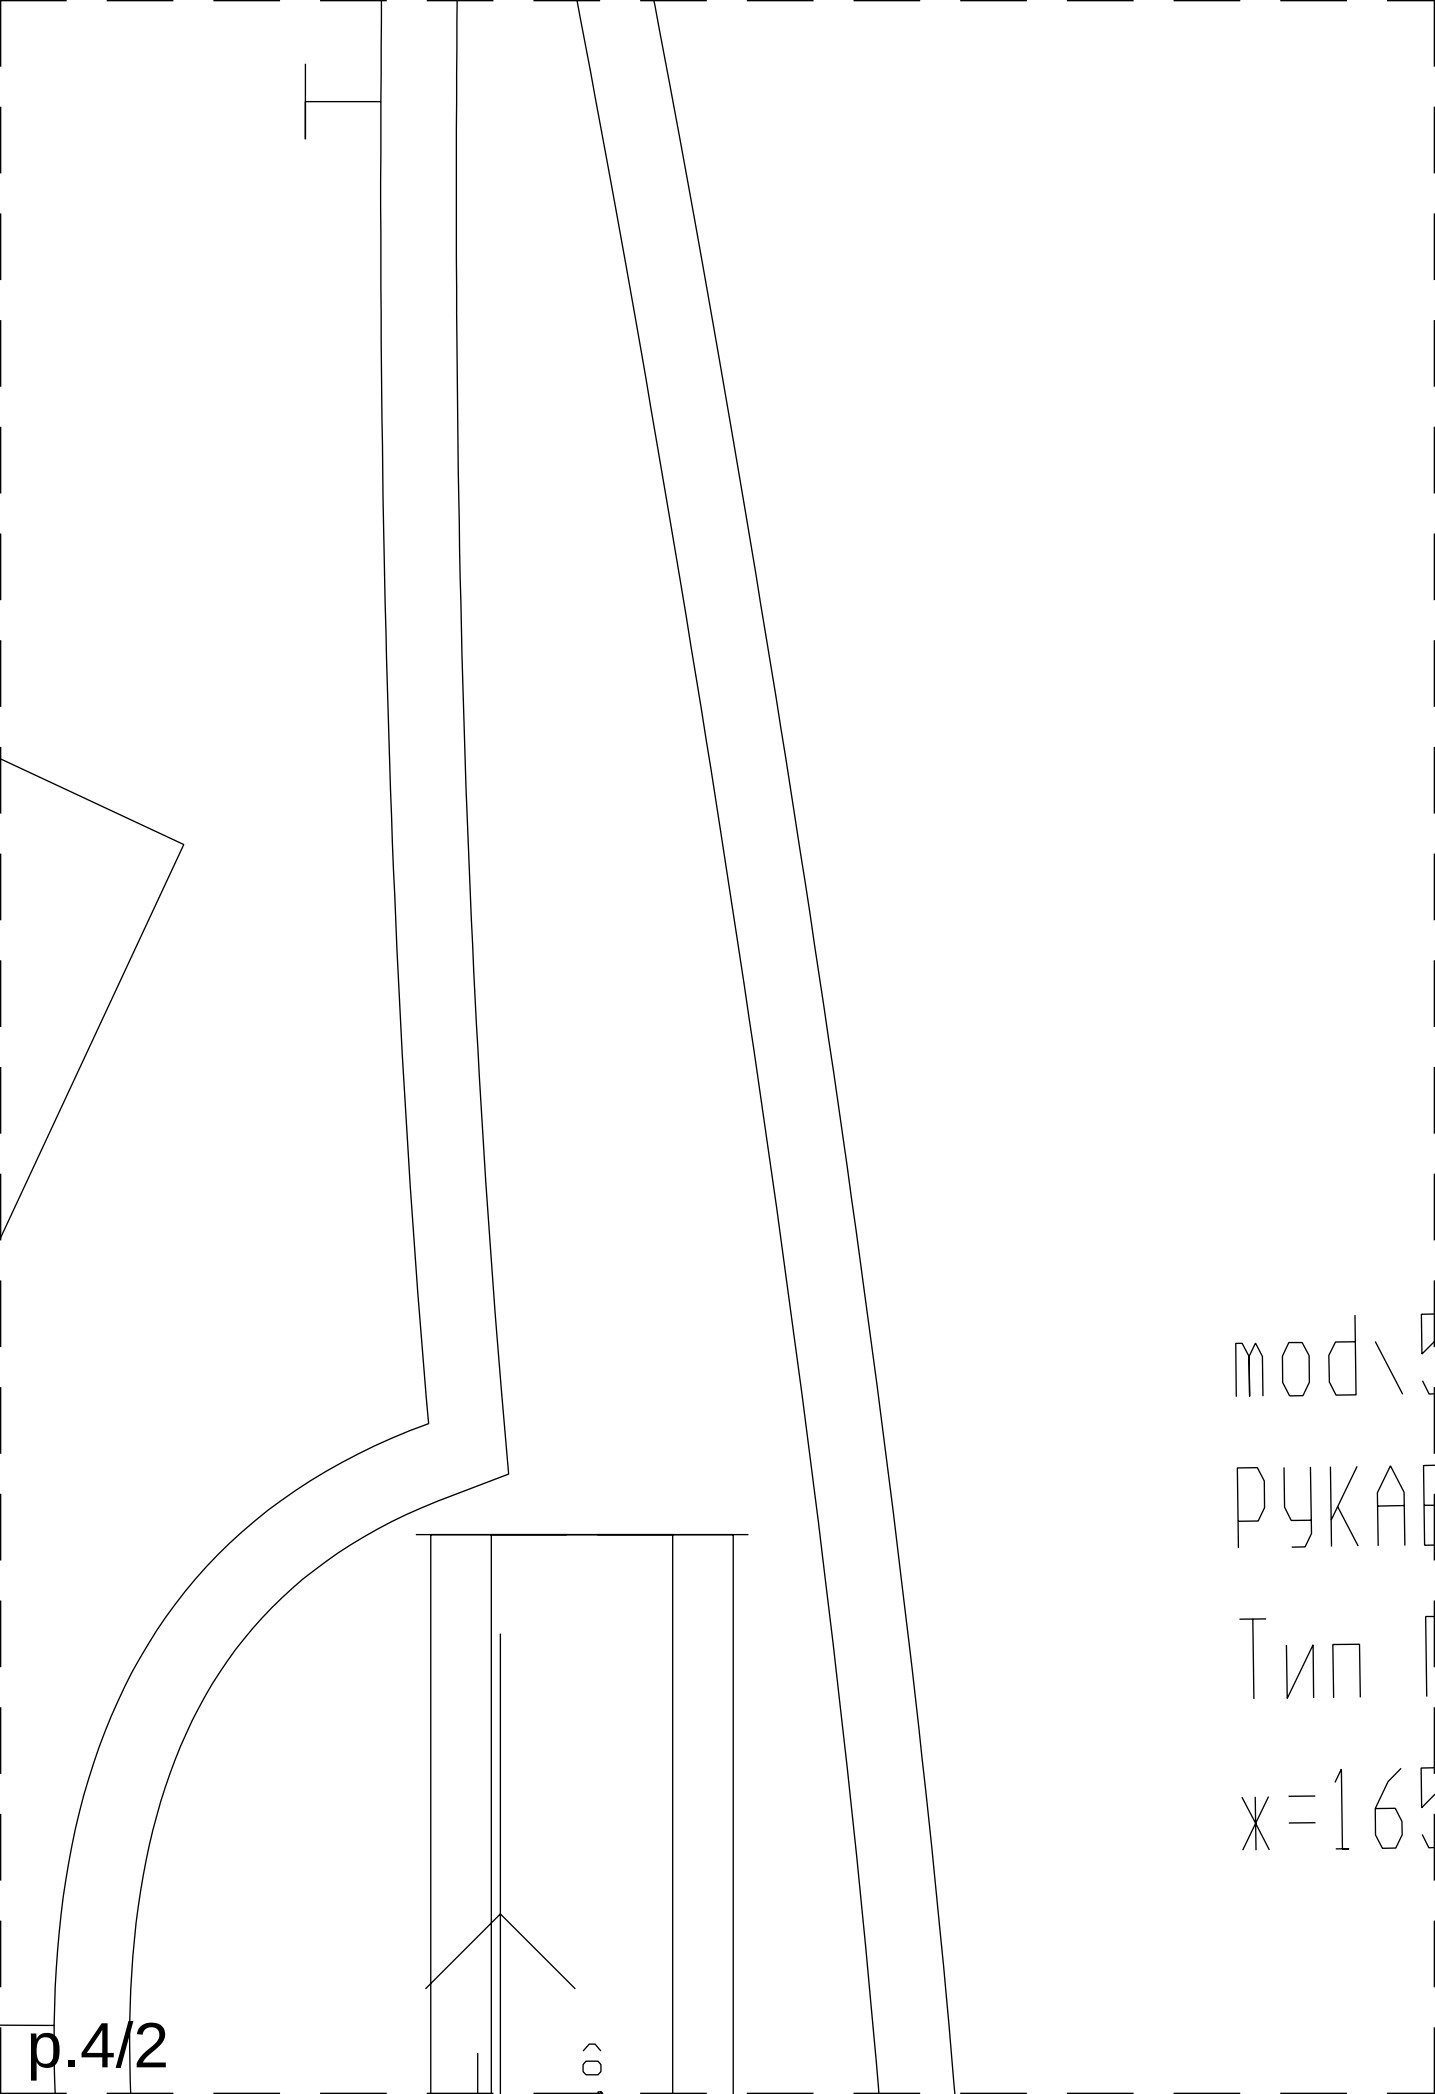



mod\5
РУКАВ
Тип
Ж=165

p.4/2

0

— ПОДПИСЬ	
mod\5703 ШЛЕВКА Тип ПодотнаВЕРХ, Кл. Дет. = (1) ж=165=84=92	

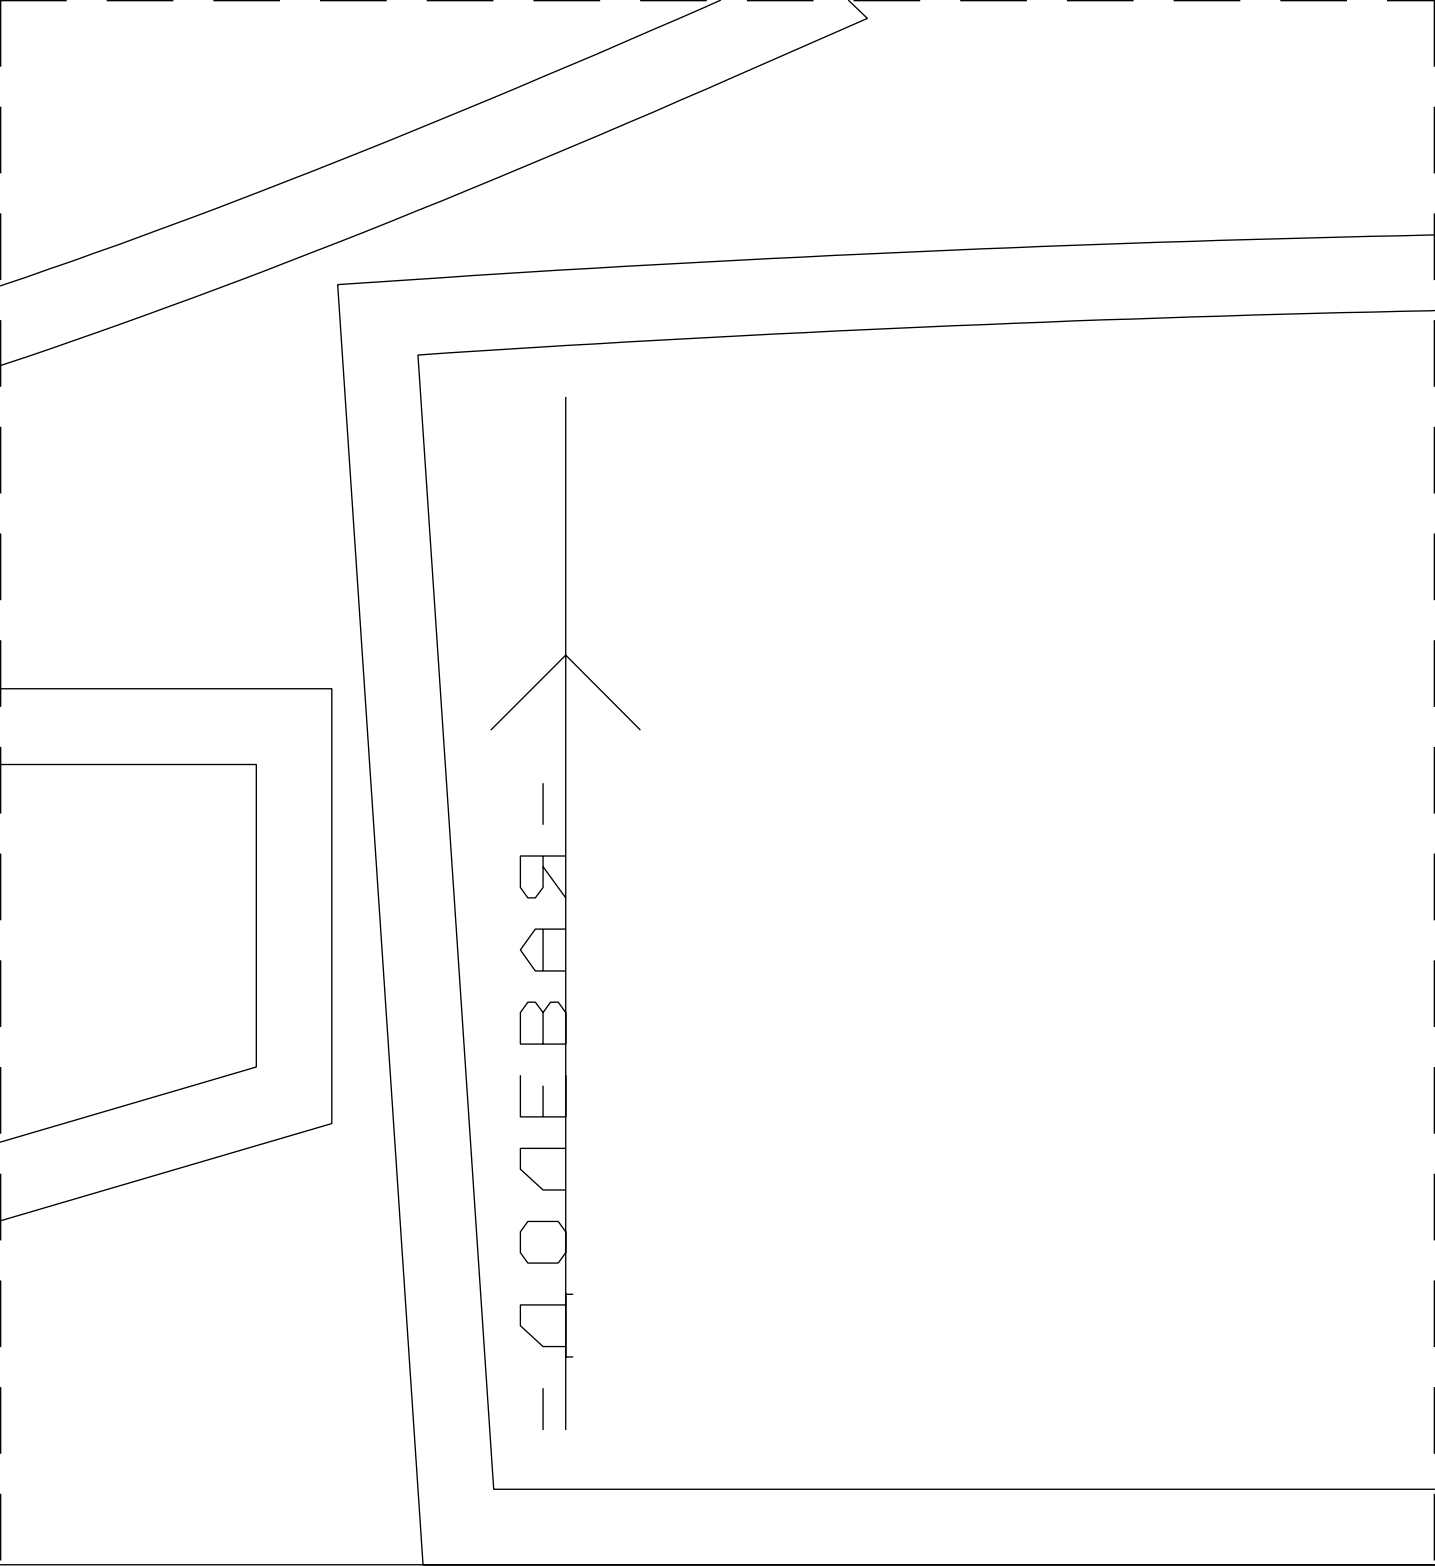

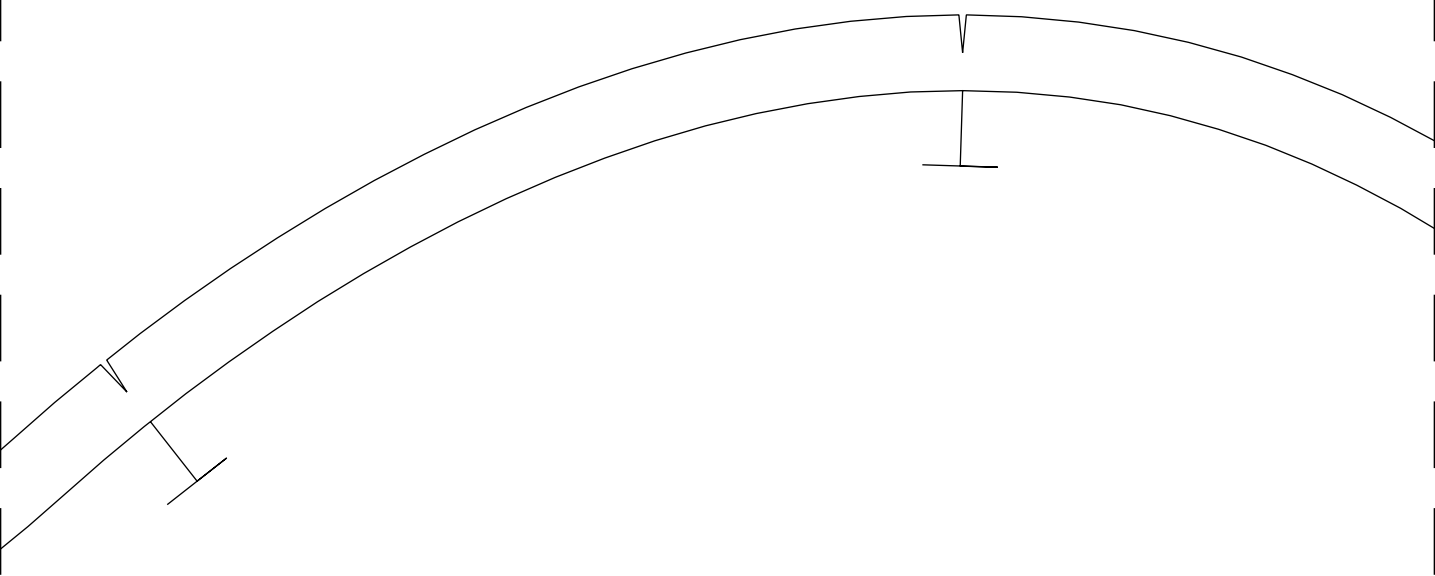

5703

}

ПолотнаВЕРХ, Кл.Дет. = (1,1)

5=84=92

5=84=92

ПОВОТНЕРХ, Кн. Det. = (1, 1)

КЕТН


5703


mod\5703


ПОРС

Тип Полотн

ж=165=84=9

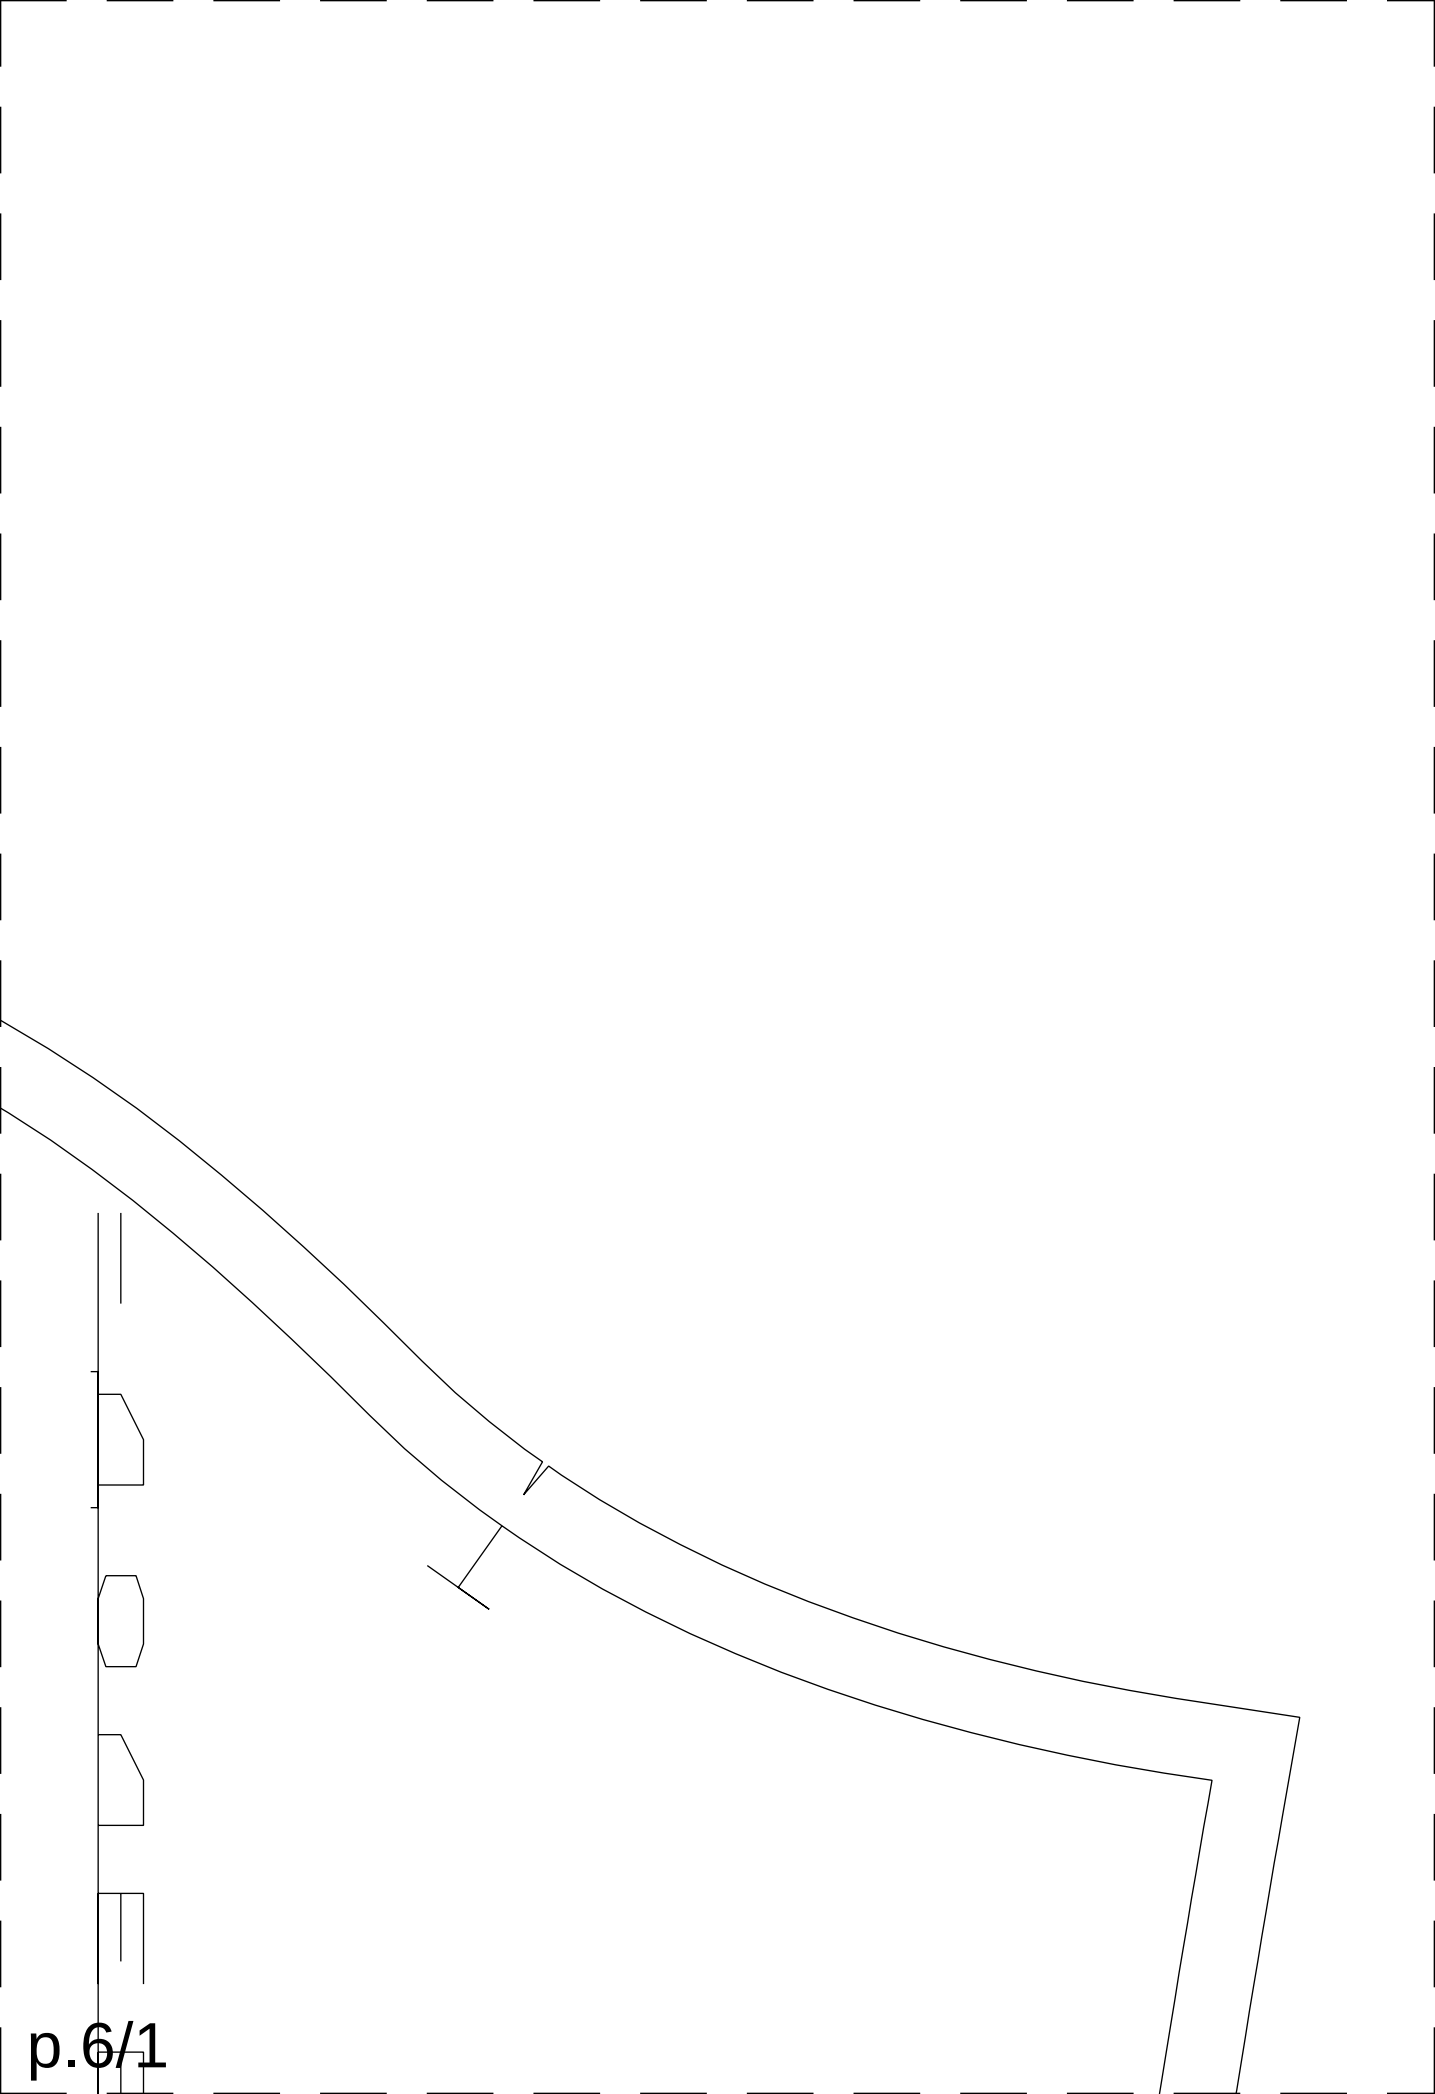

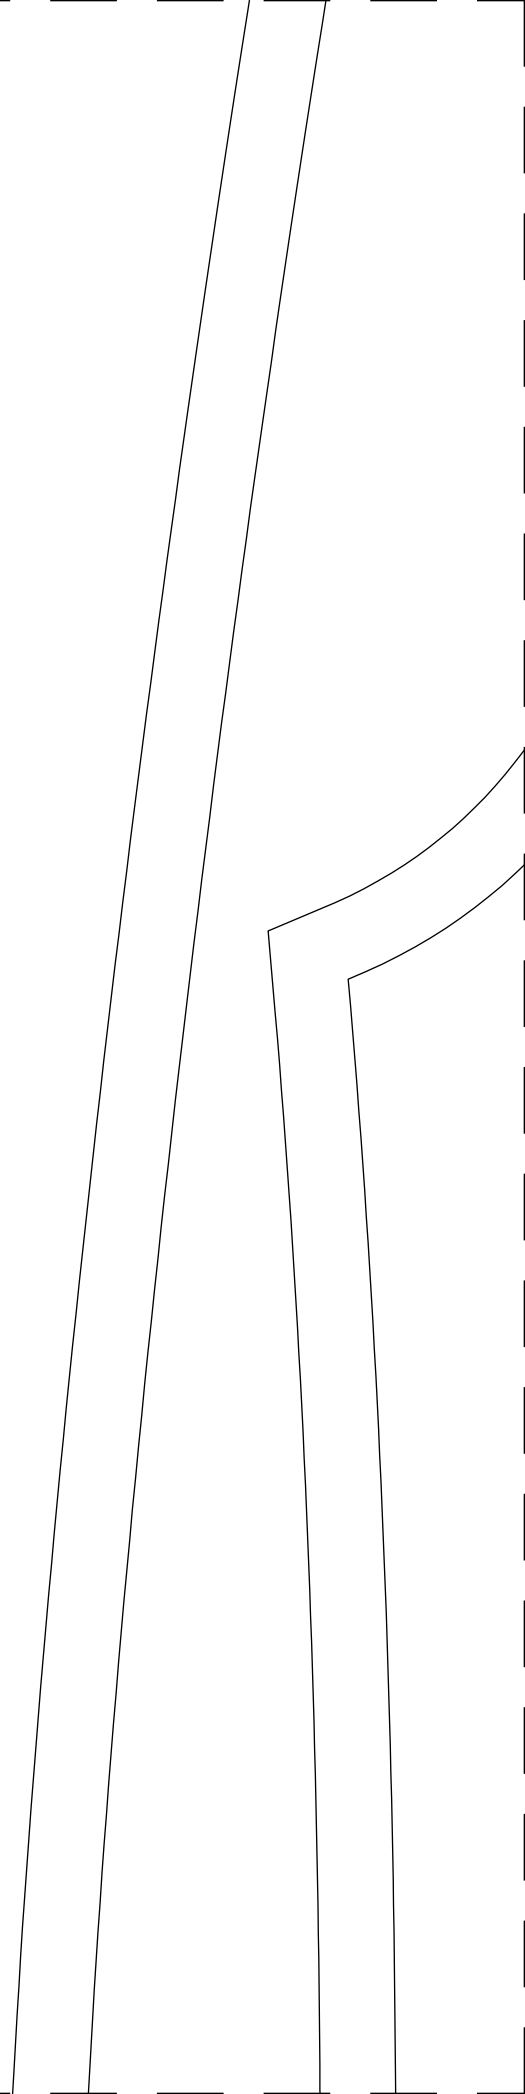


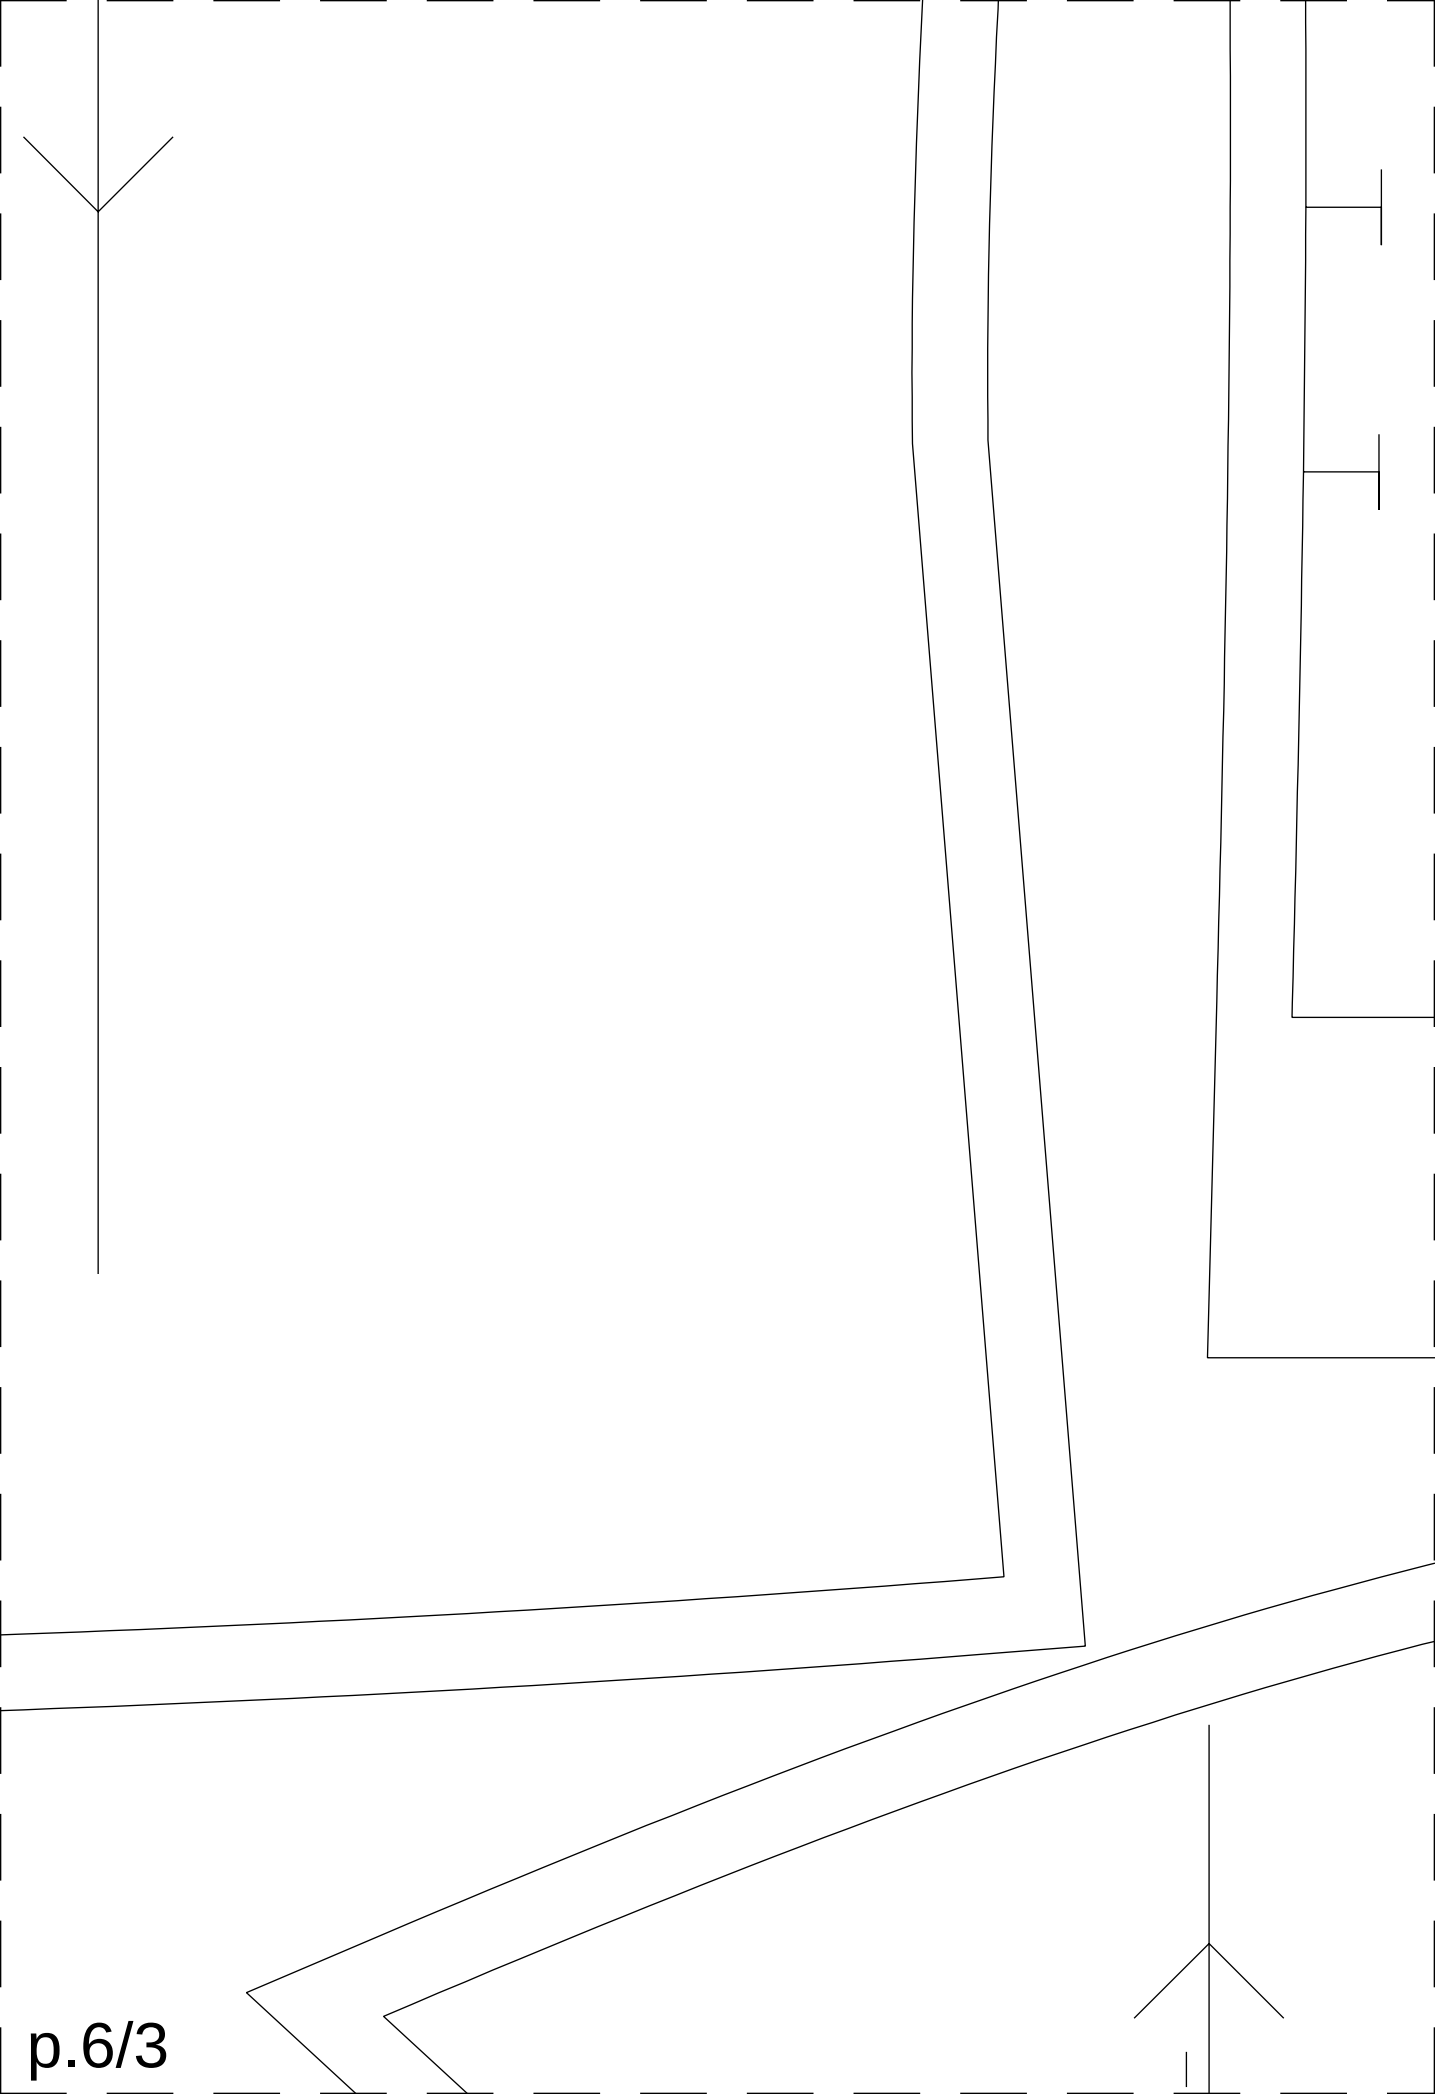

— ДОДЕКАГОН —

⊕ $\downarrow = \times$
UII
KHVW
row

на ВЕРХ, Кл. Дет. $= \langle 1, 0 \rangle$
2

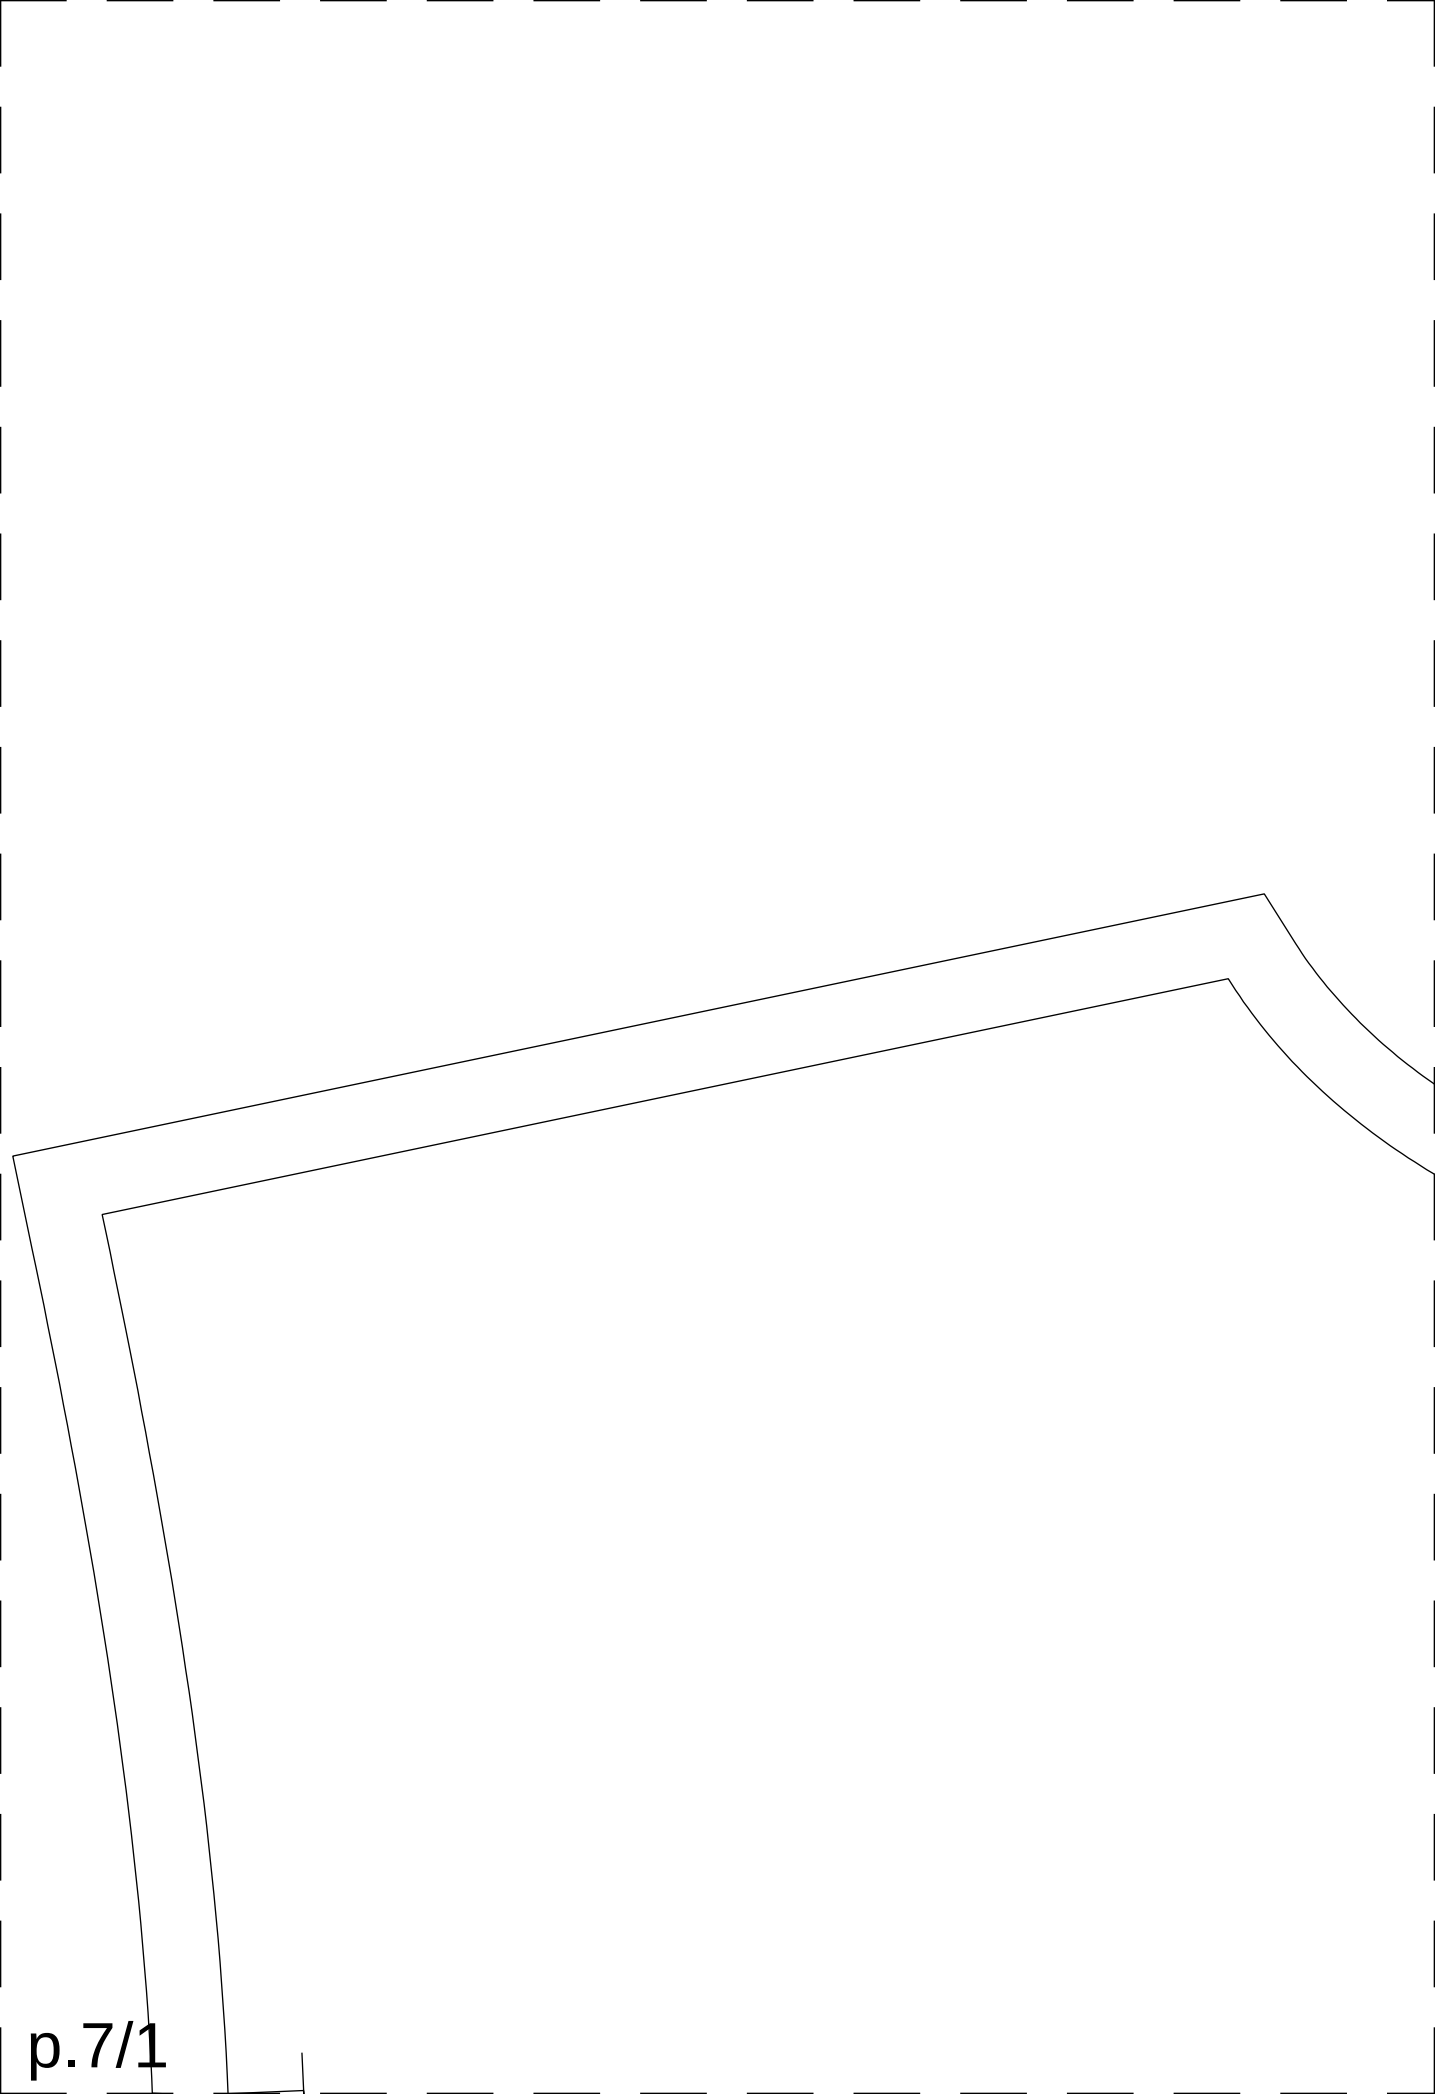


mod\5703

СПИНКА

Тип Полотна ВЕРХ,


ж=165=84=92

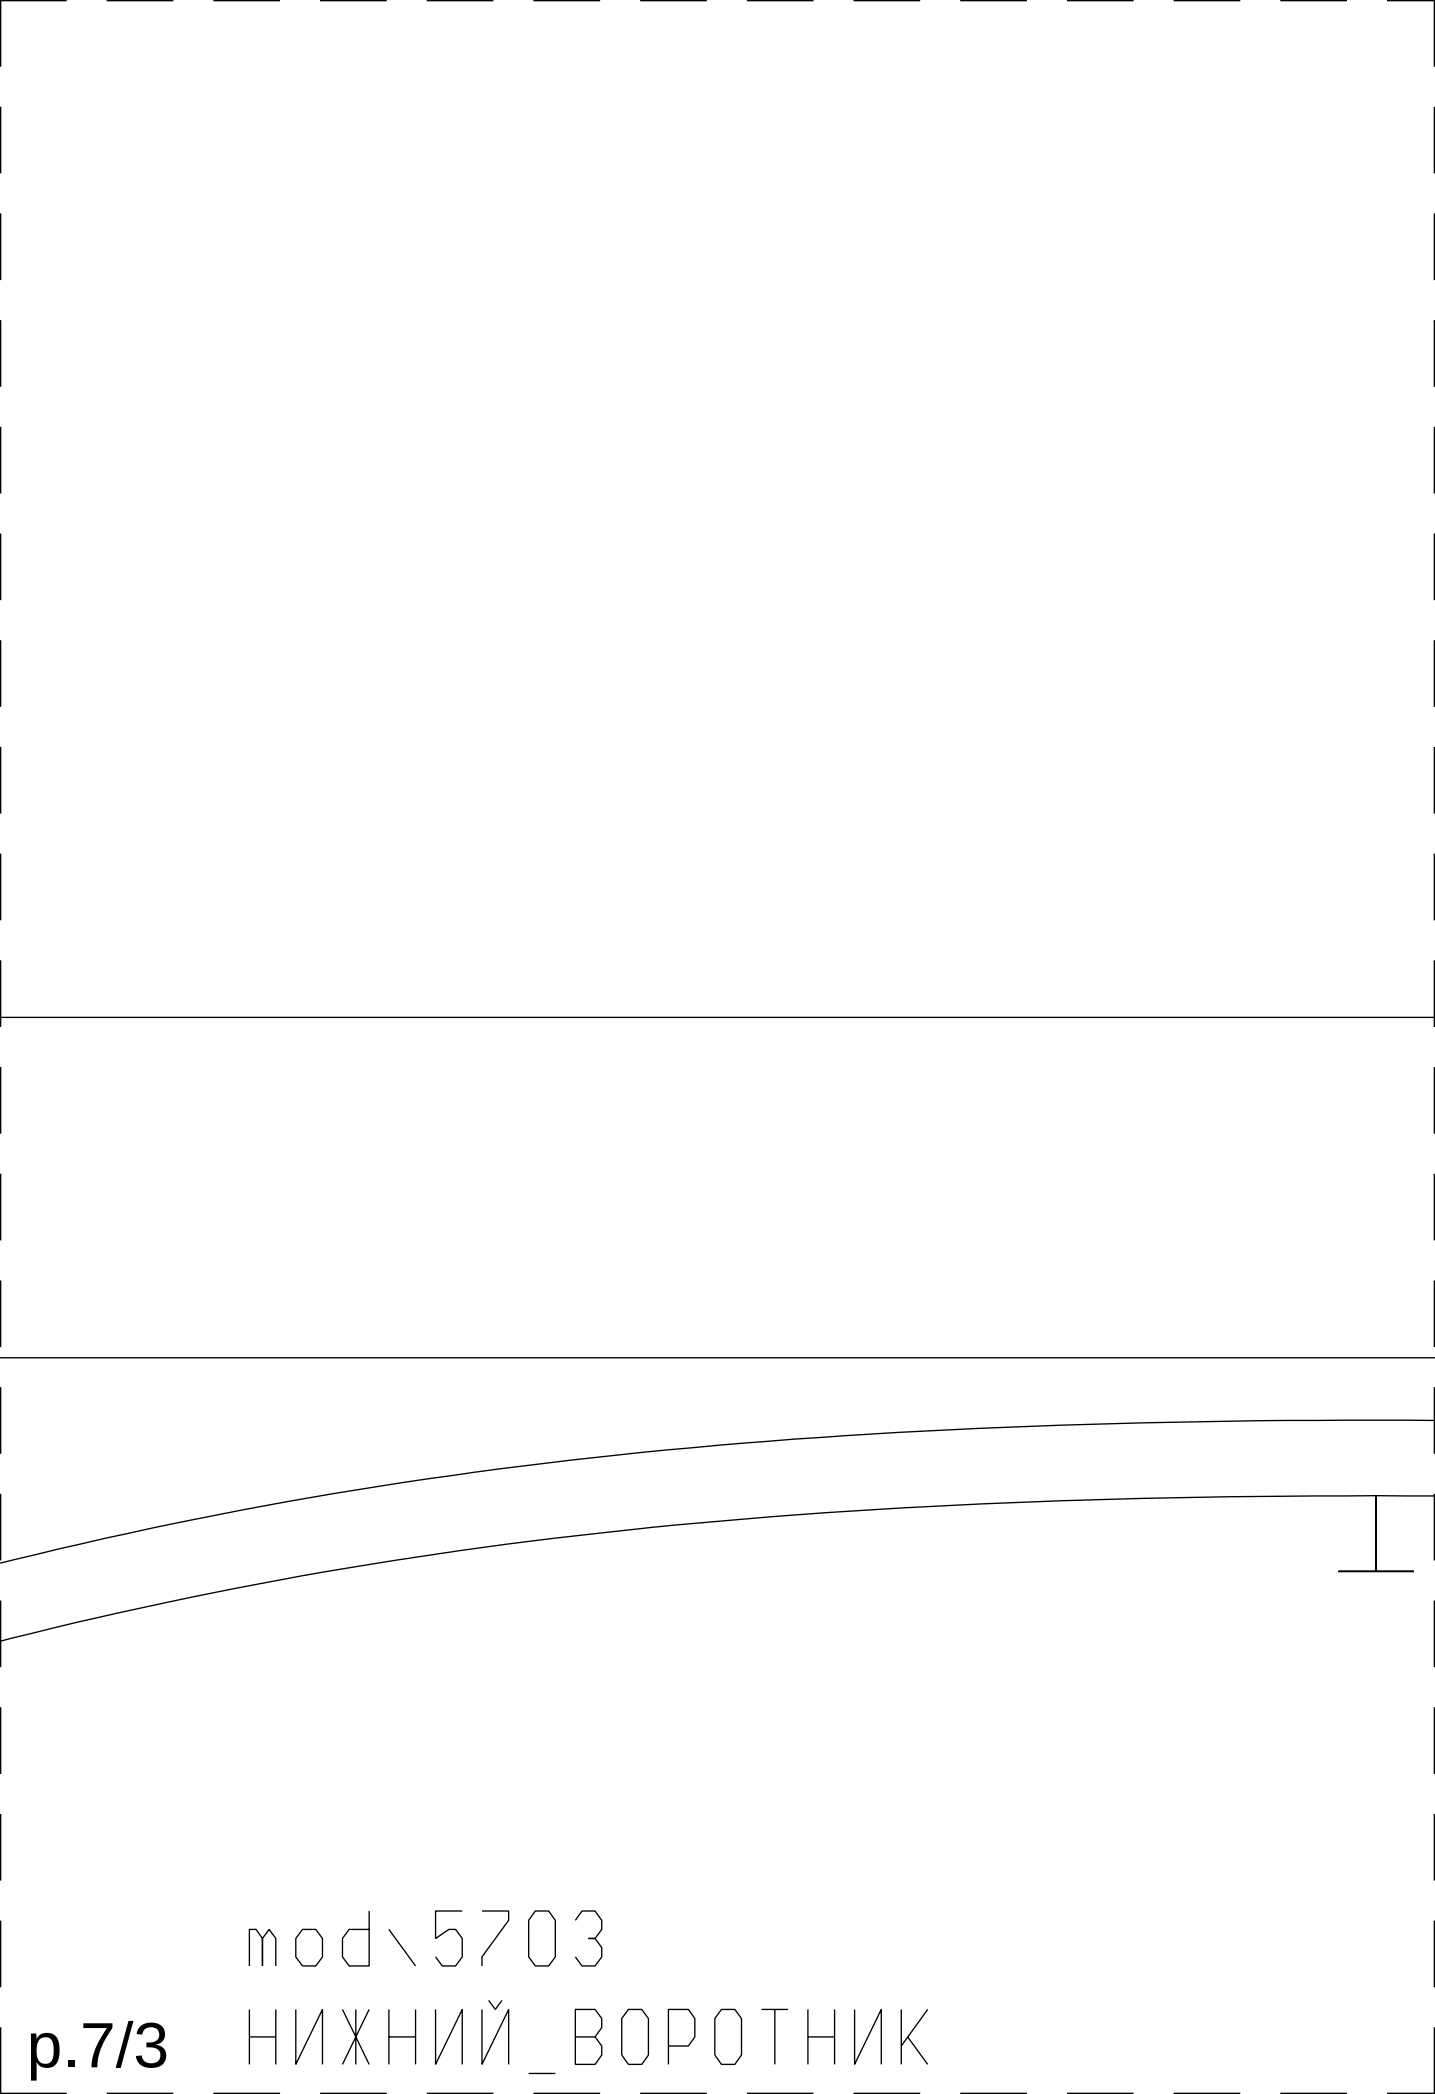


mod\5703


НИЖНИЙ_ВОРОТНИК

Тип Полотна ВЕРХ, Кл. Дет. =
ж=165=84=92

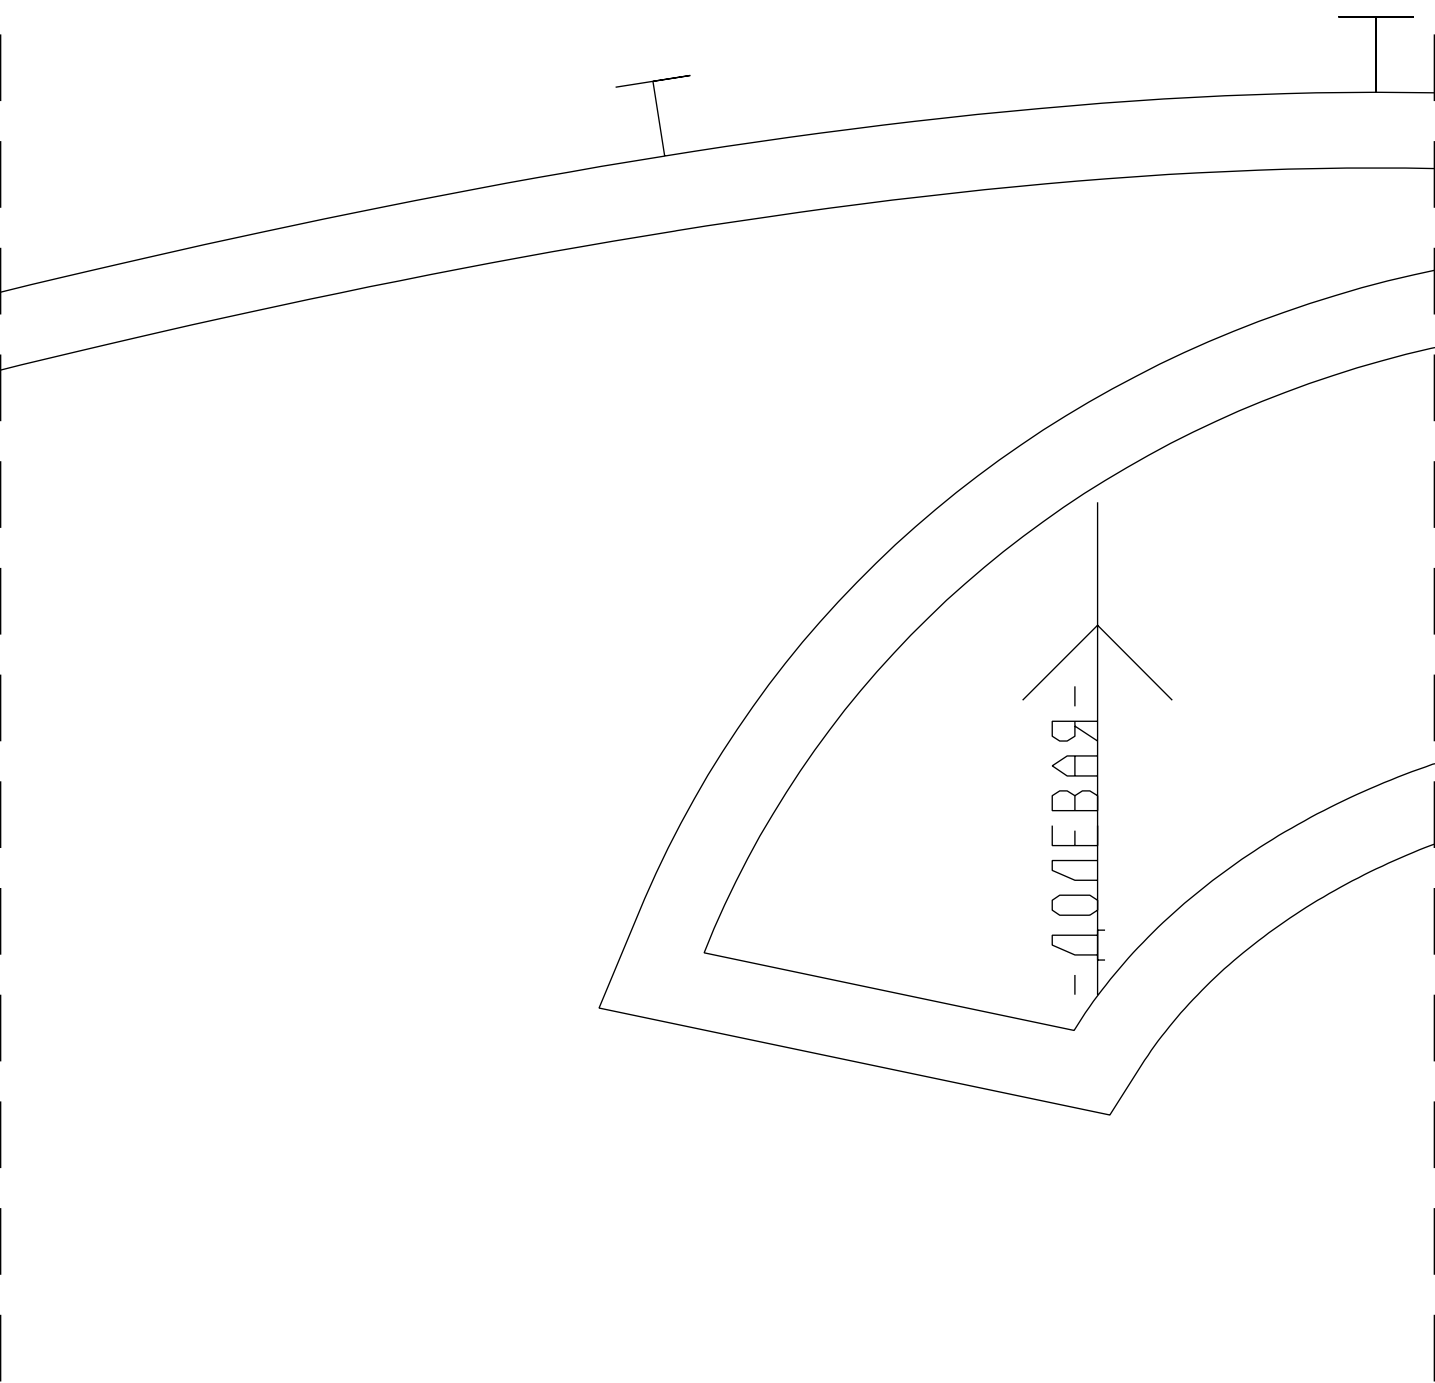


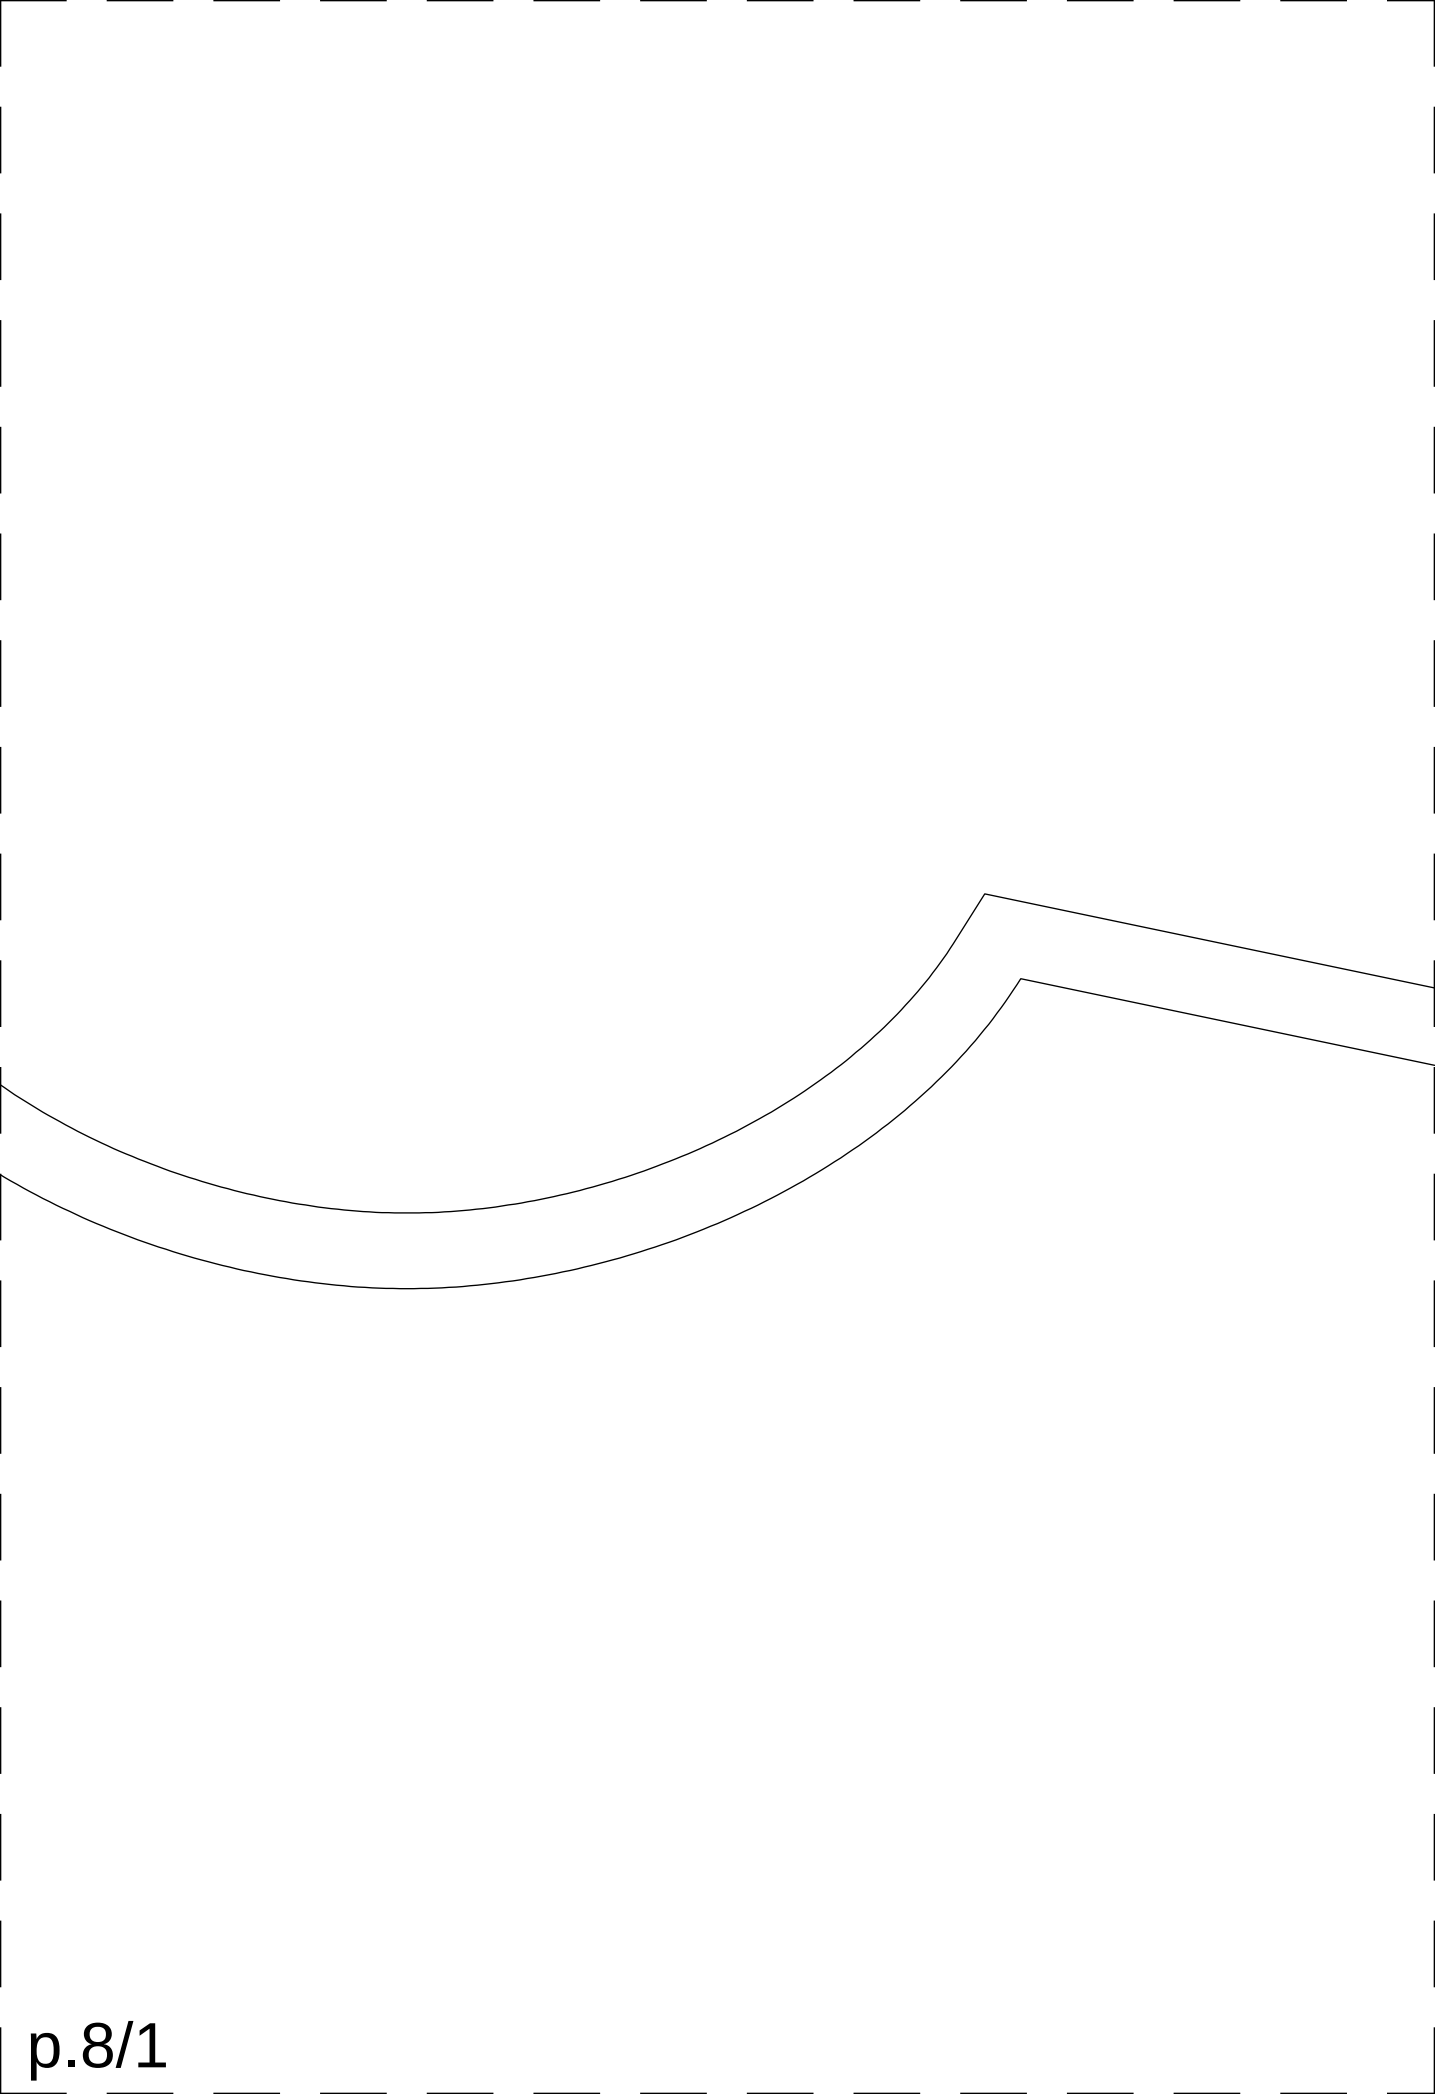



$$\text{Kn. Det.} = \langle 1, 0 \rangle$$

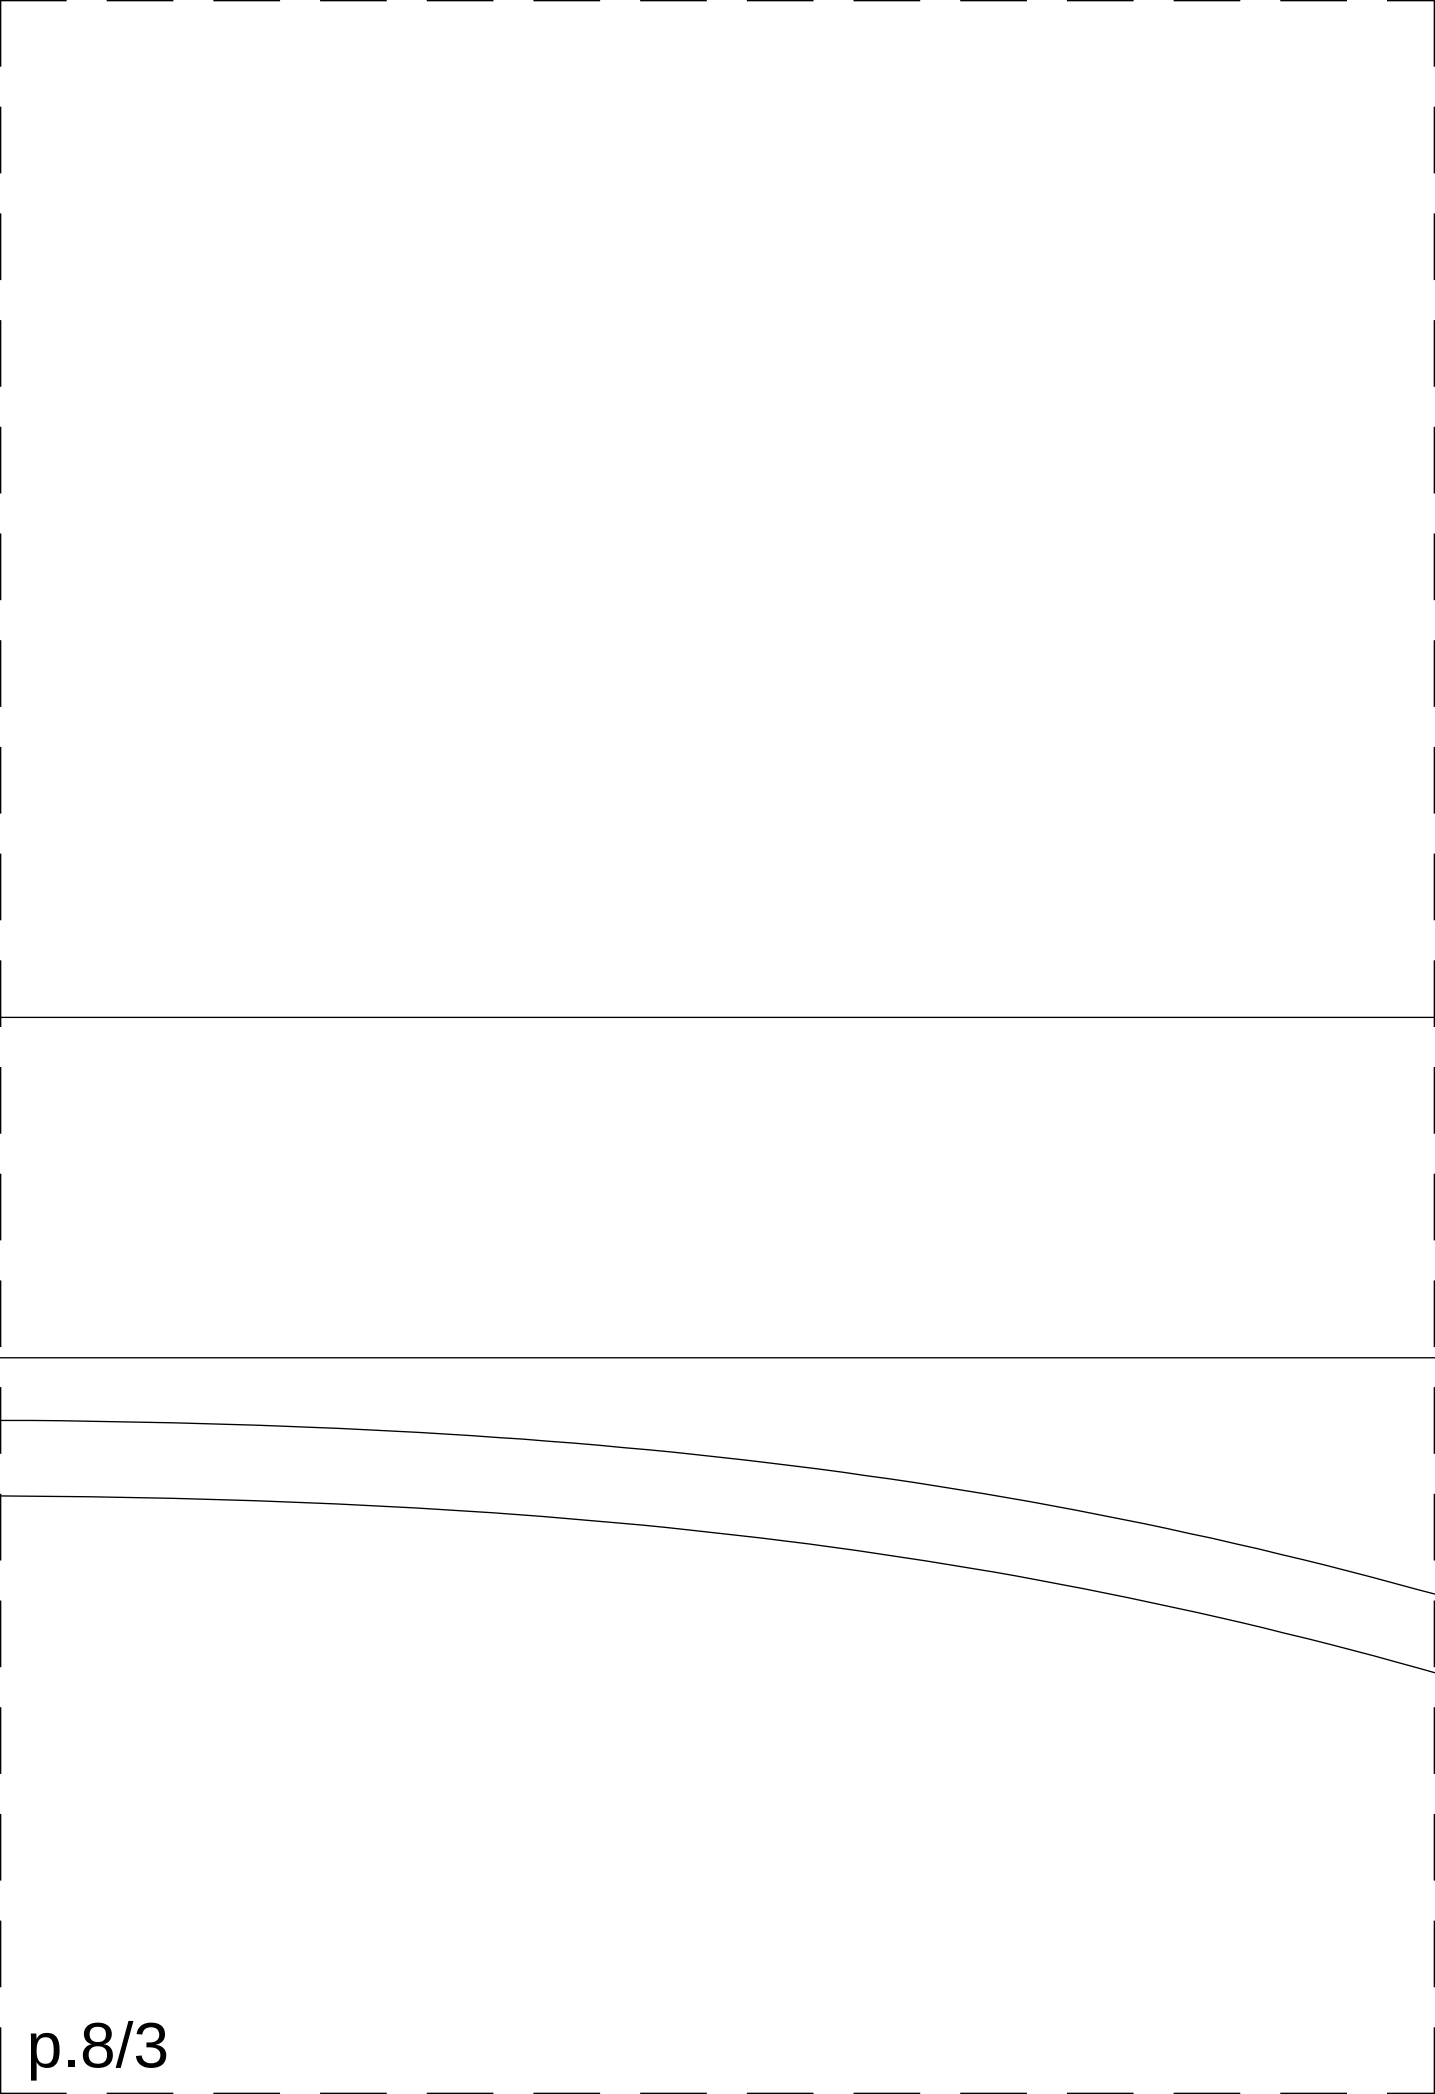



$\langle 1, 0 \rangle$

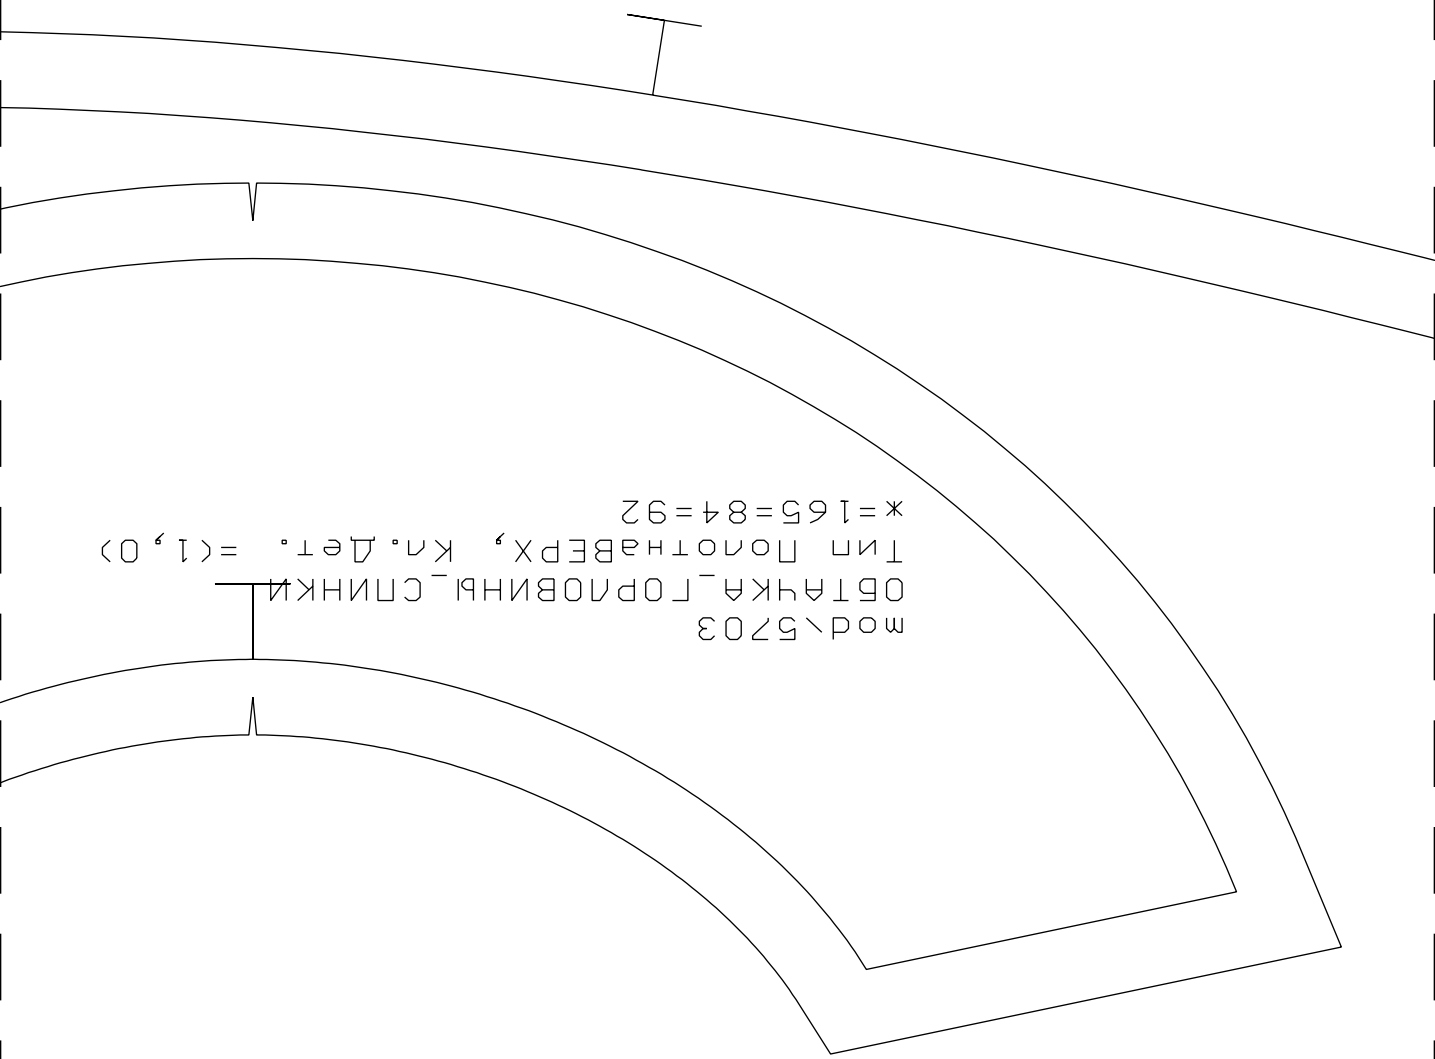

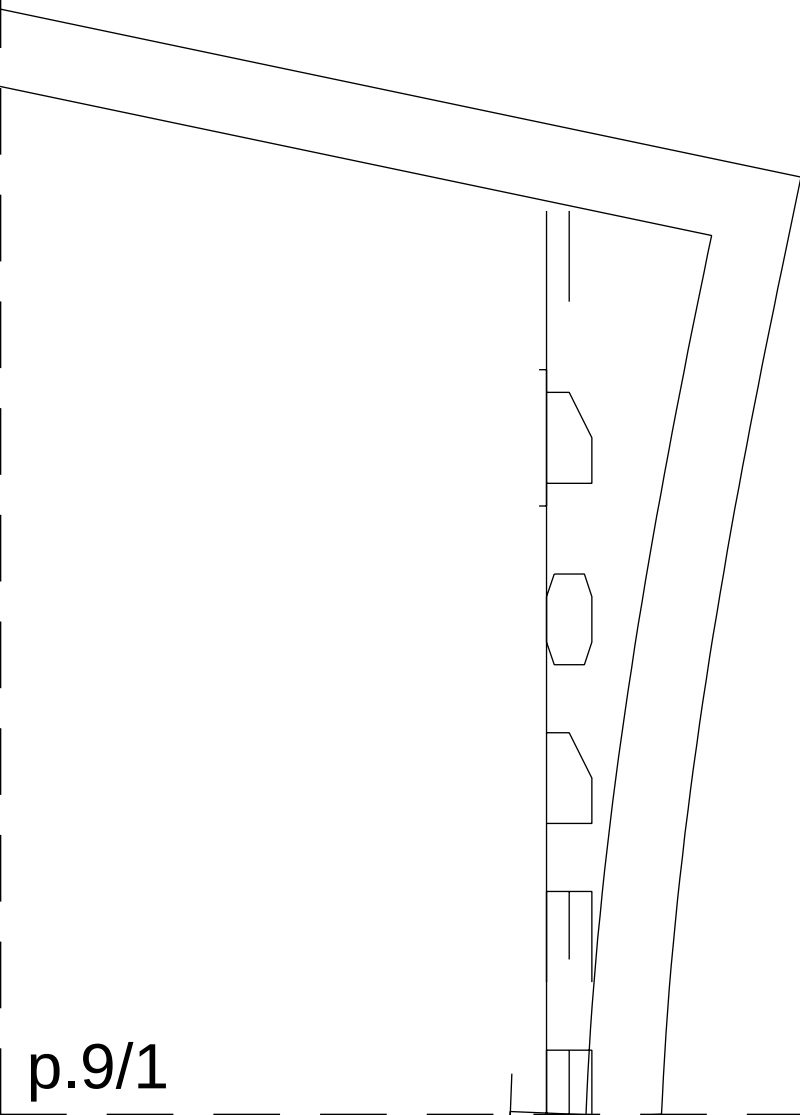

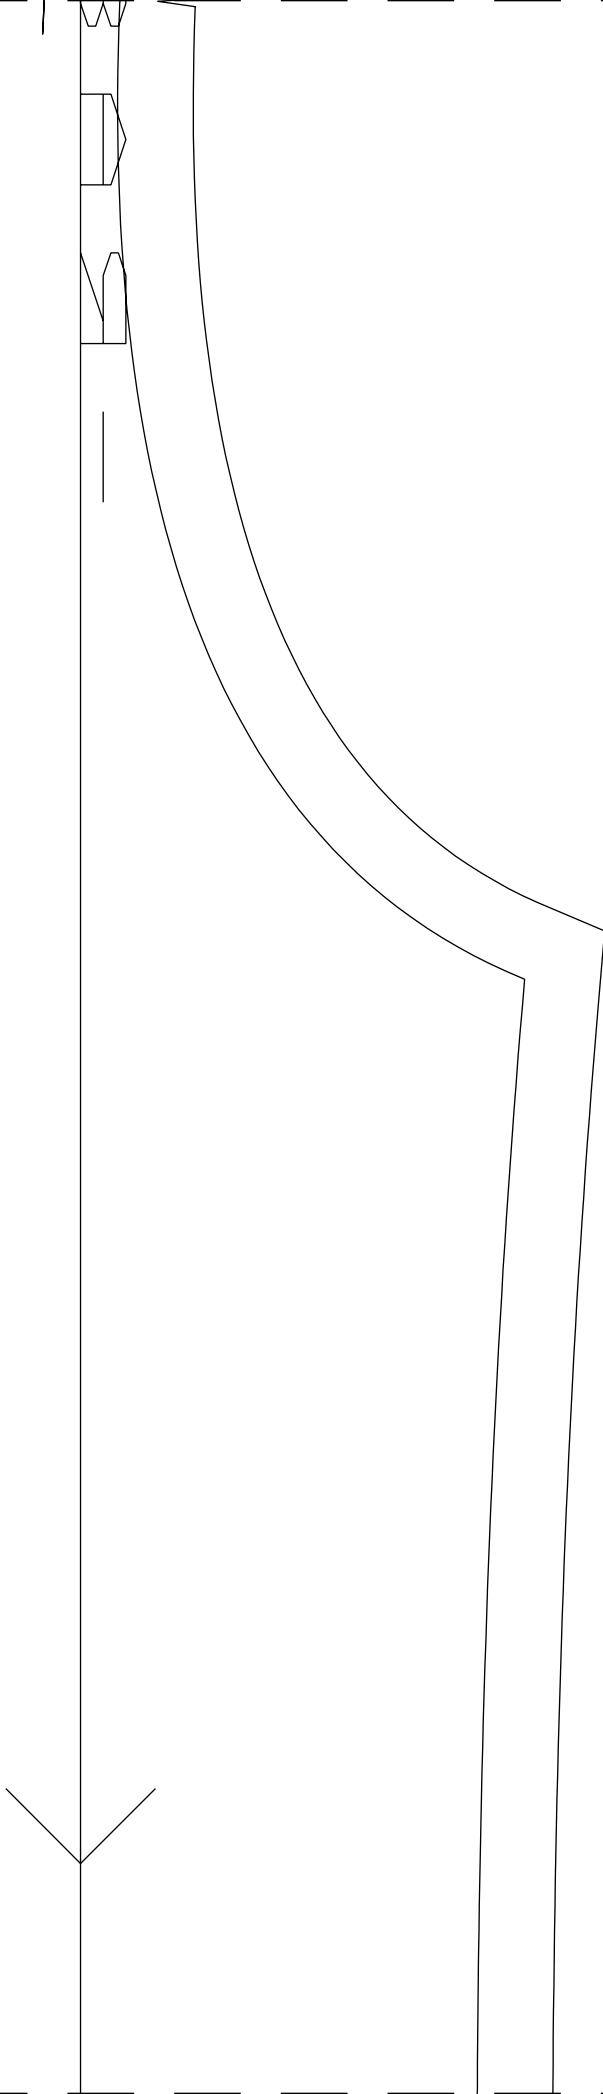

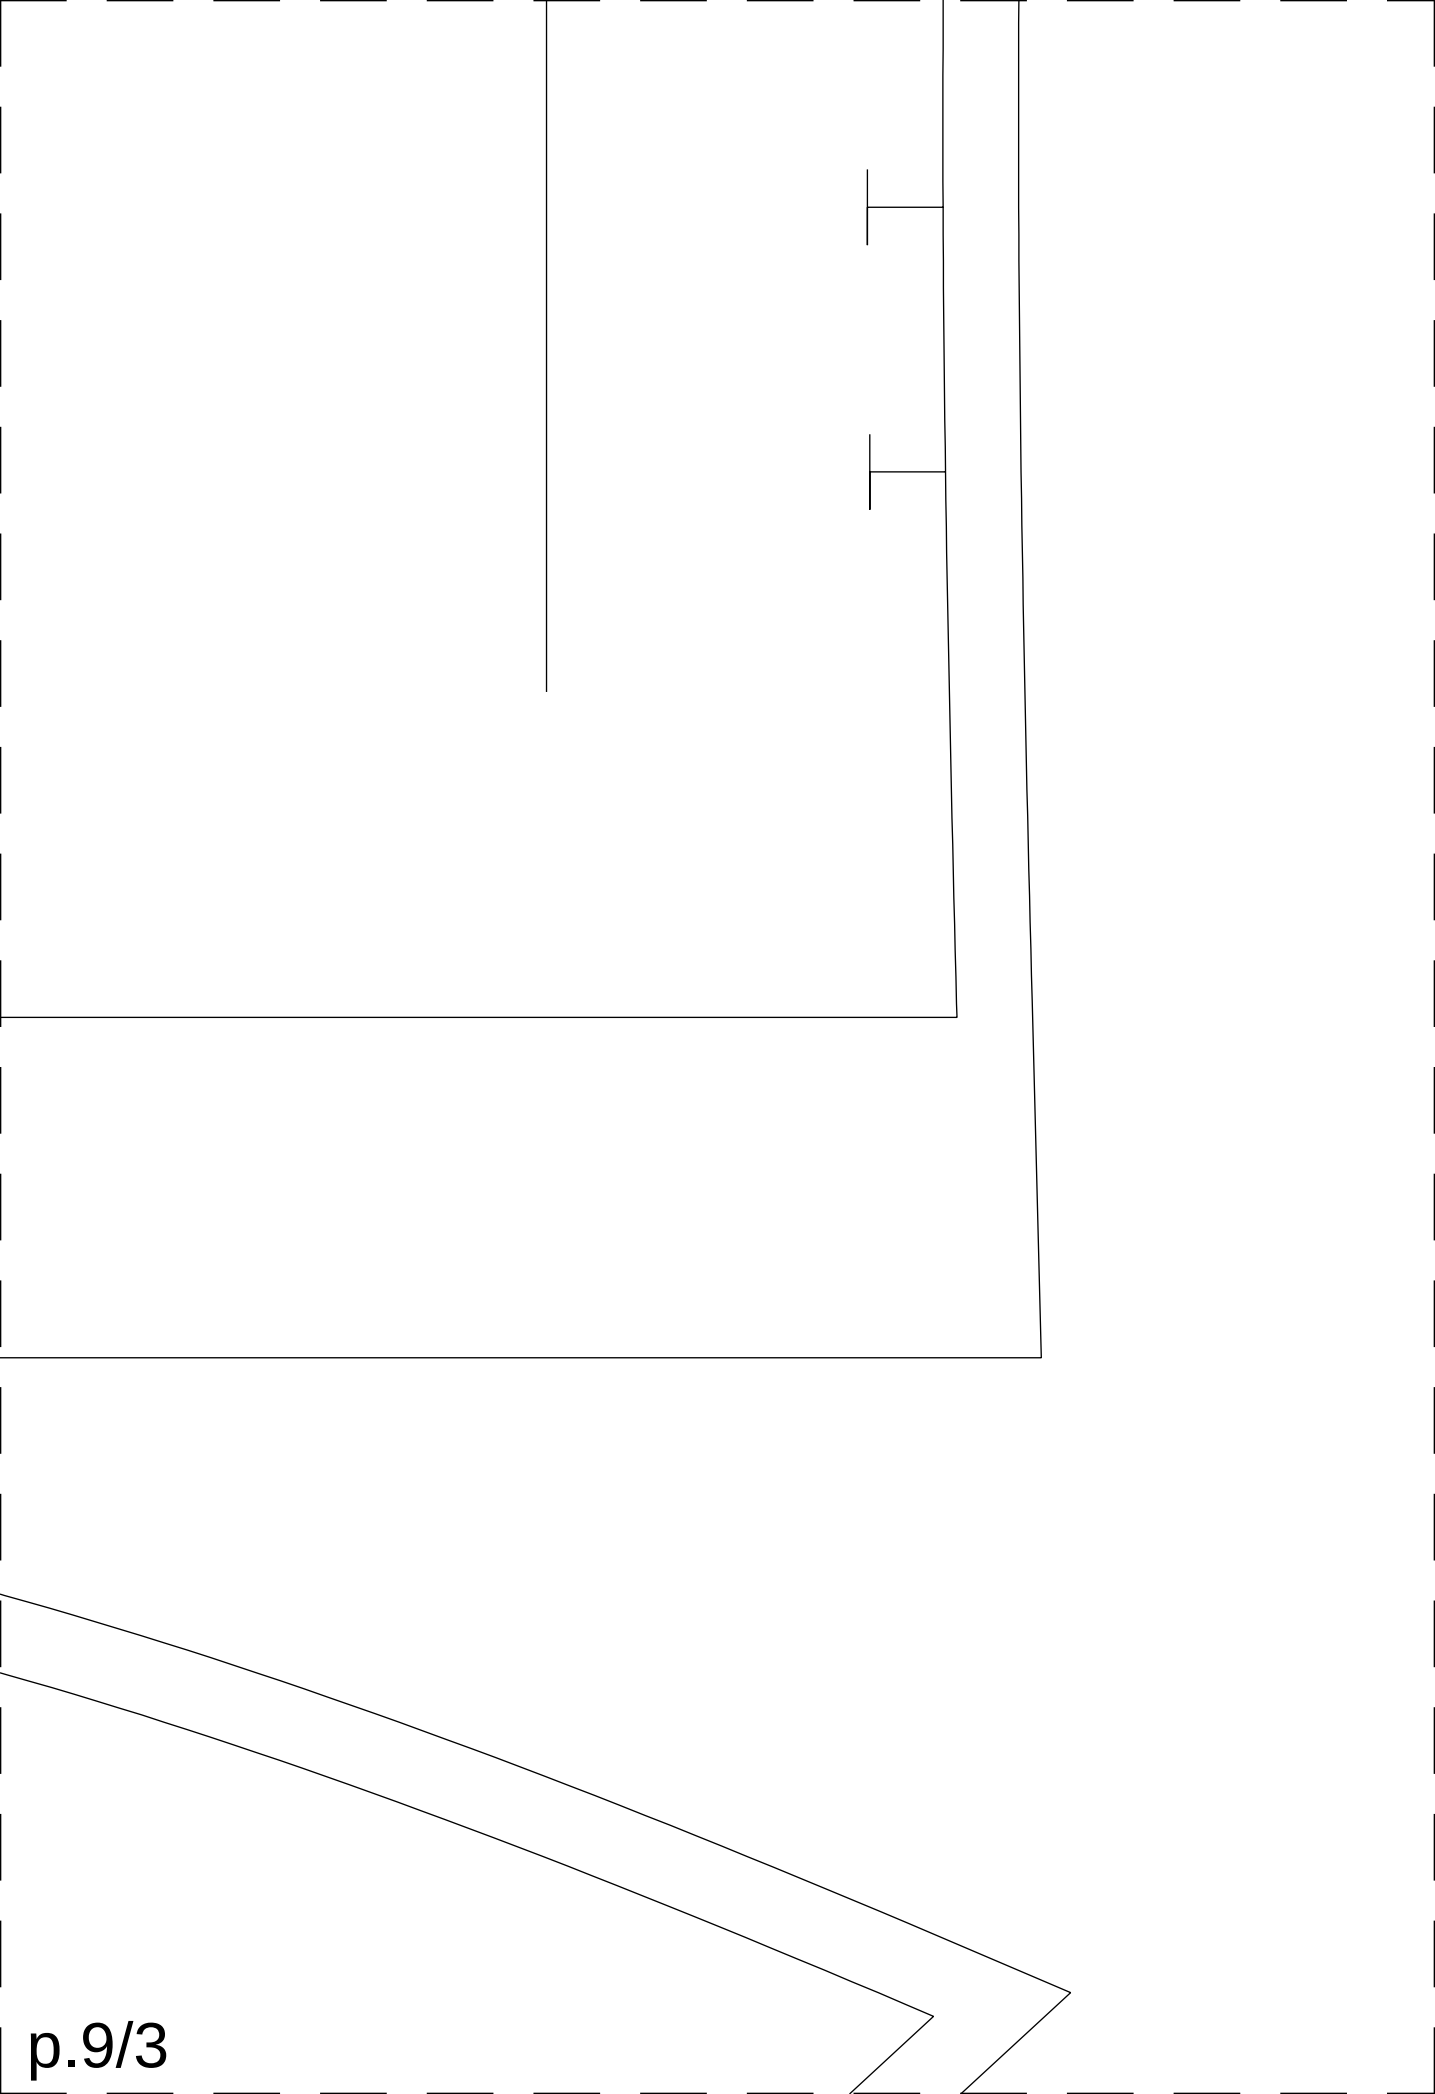

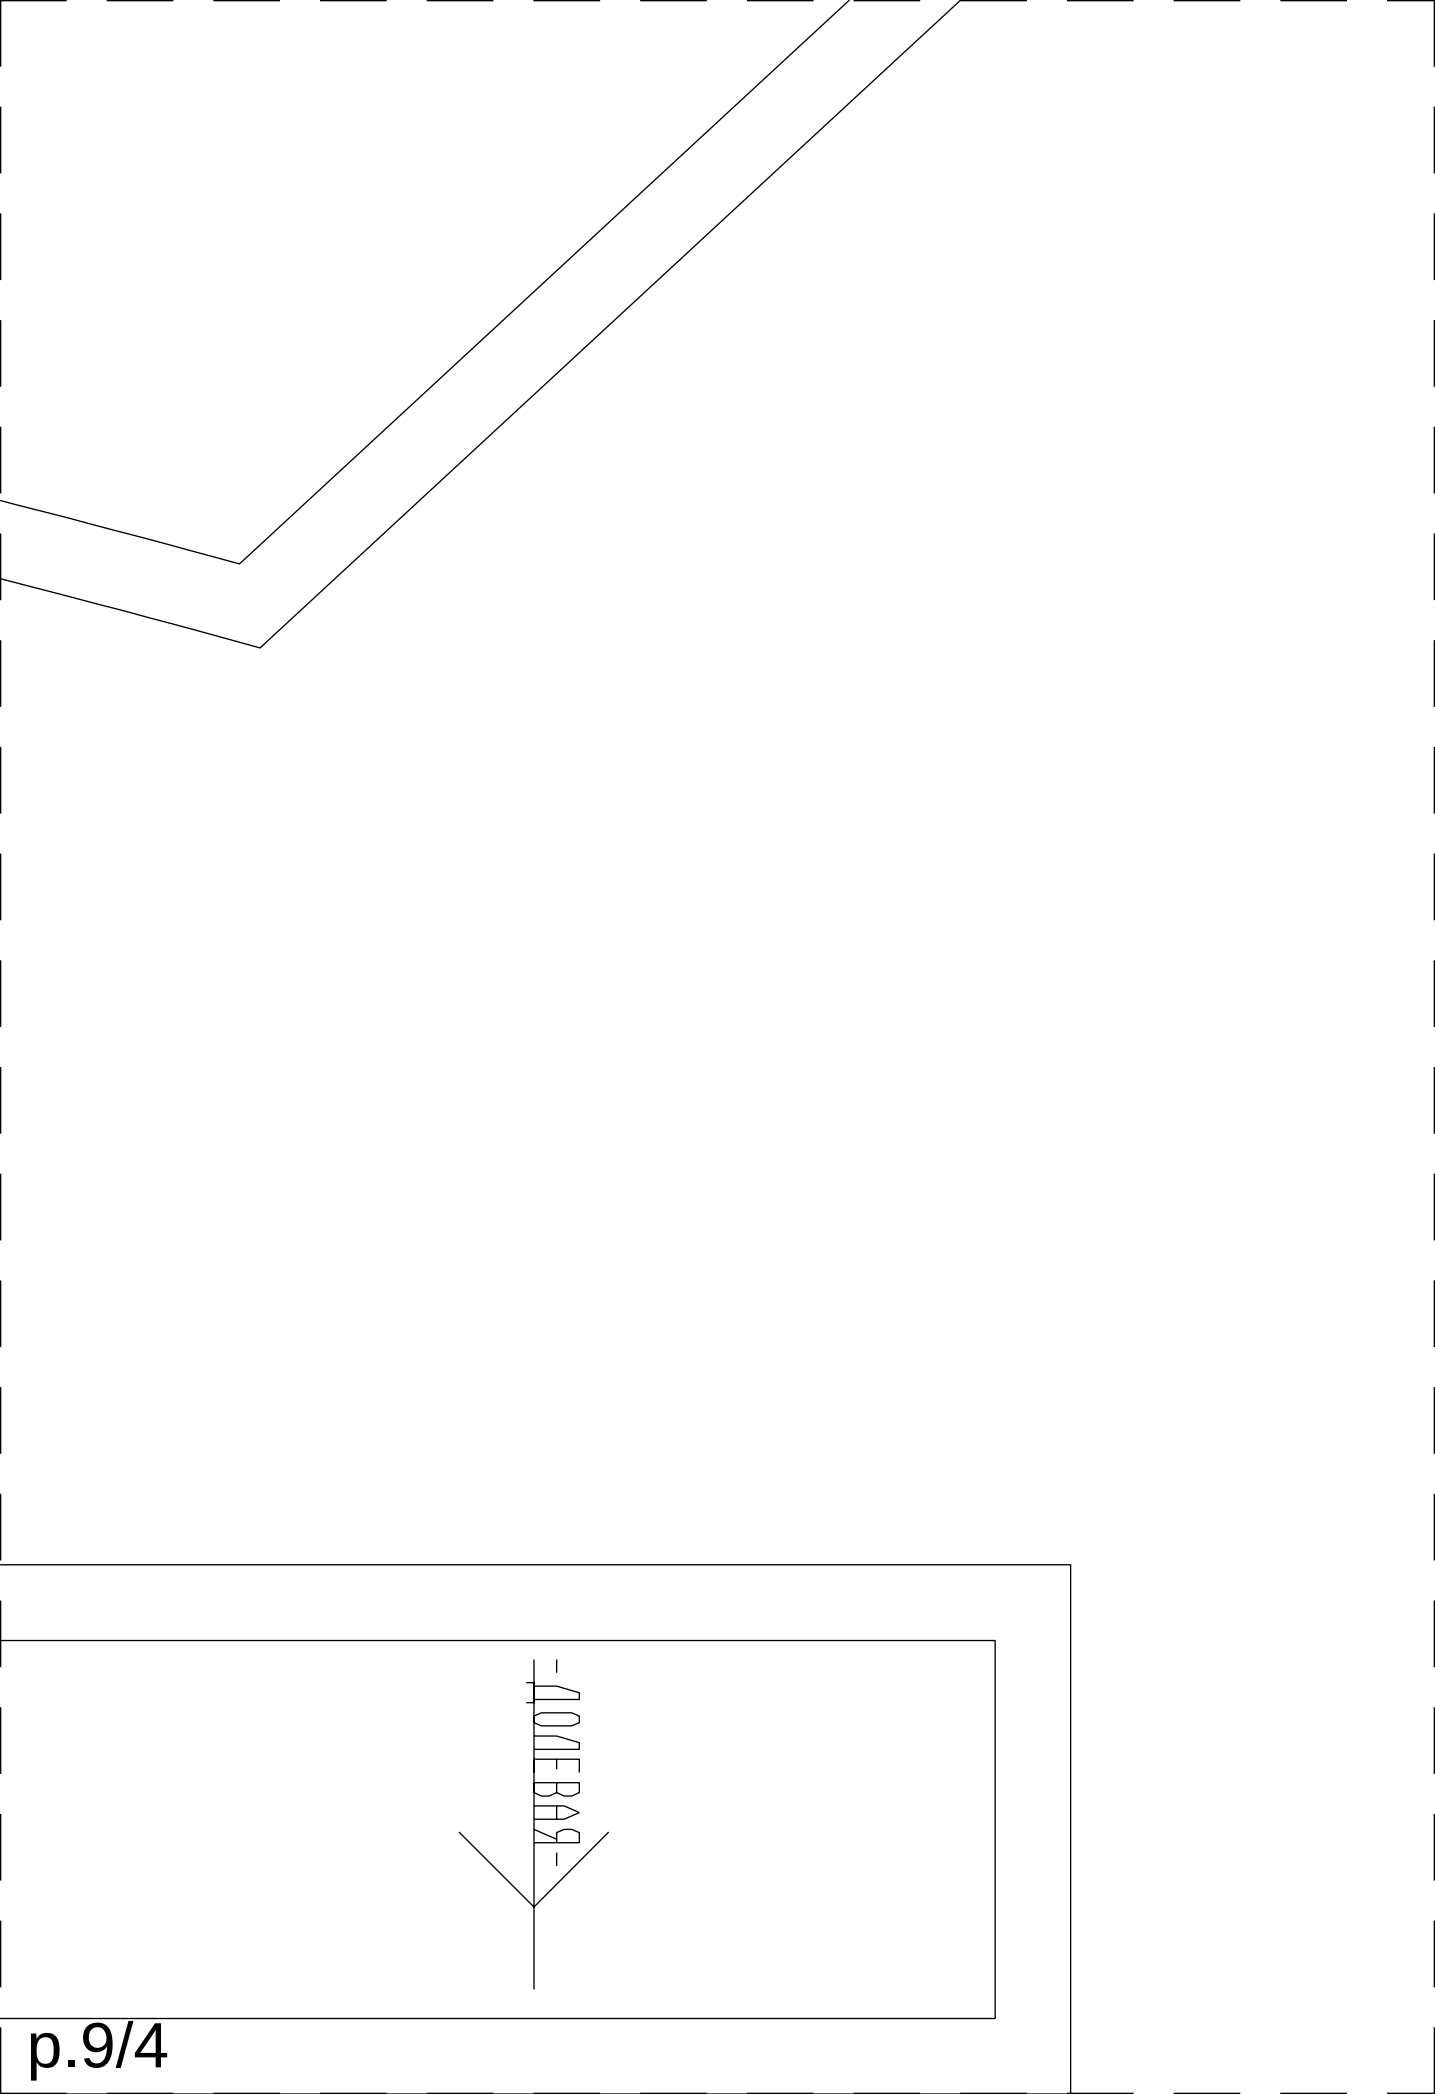

101EBA9

Maneken = ver. 0

rz_1=165 rz_16=84 rz_18=64 rz_19=92