



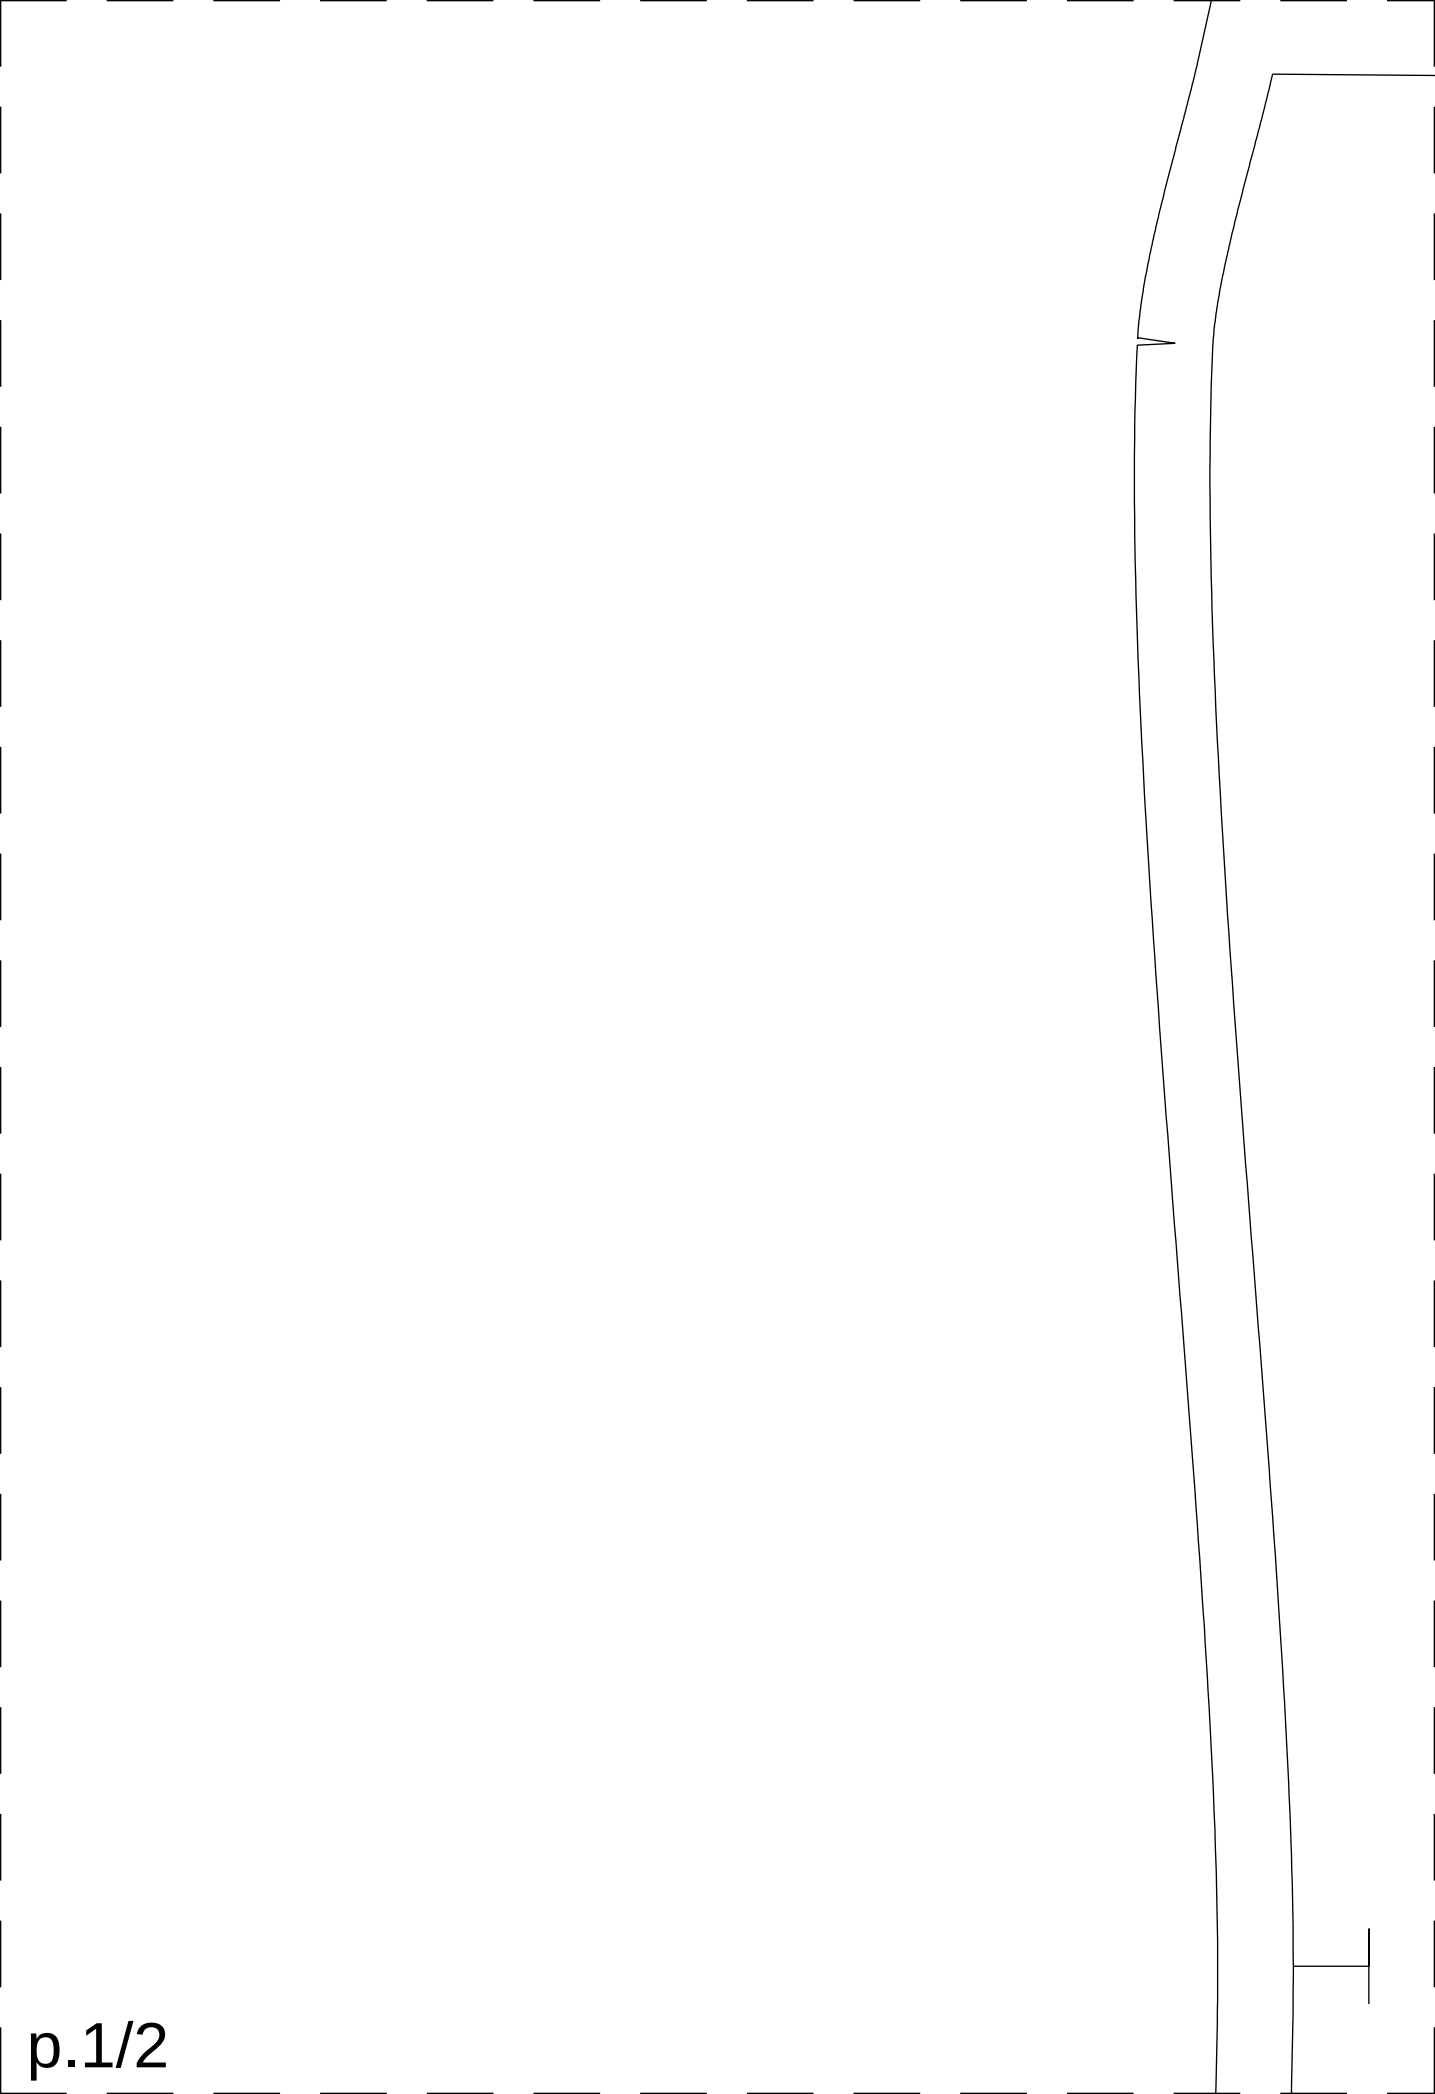

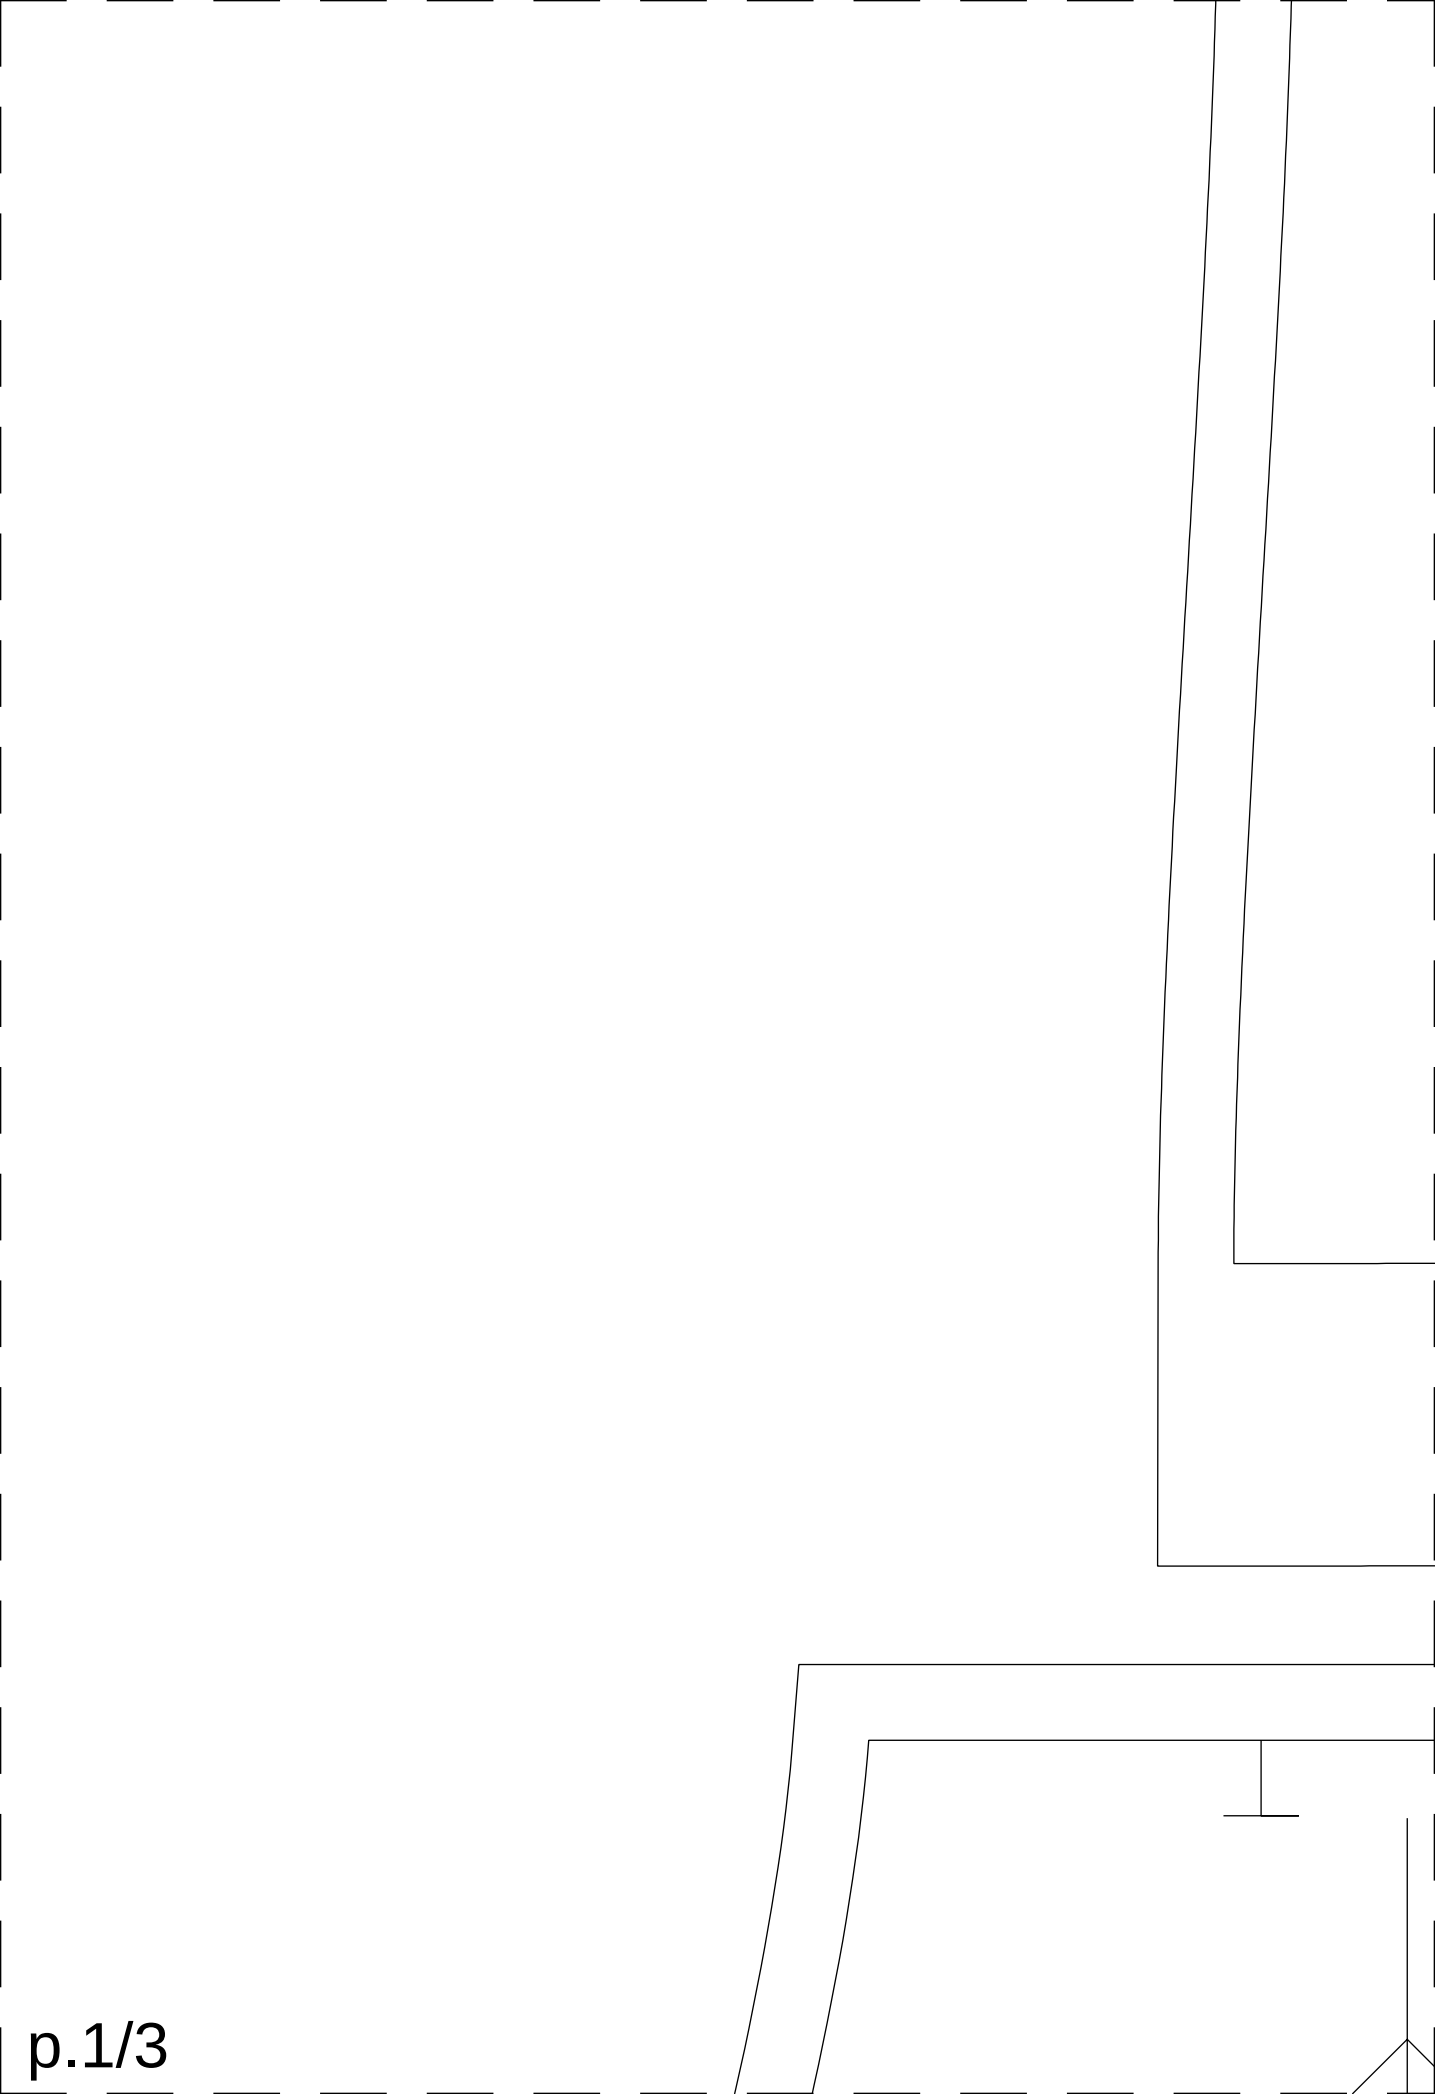

— ПОПЕРЕВЯ—

mod\5707


МАНЖЕТА

— Тип Полотна ВЕРХ, Кл. Дет. = (1,1)

ж=165=84=92


(1,1)=1

ИЖ

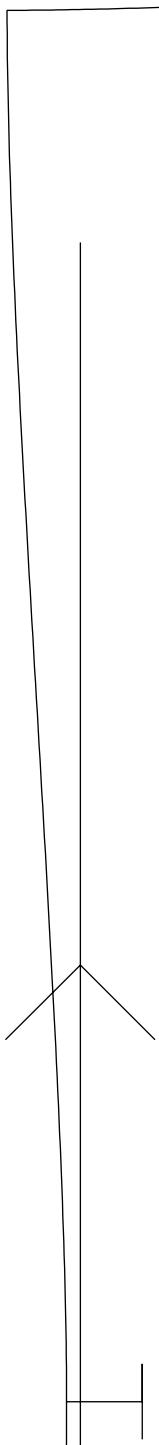


mod\5707

БОКОВАЯ_ЧАСТЬ_СПИHKИ

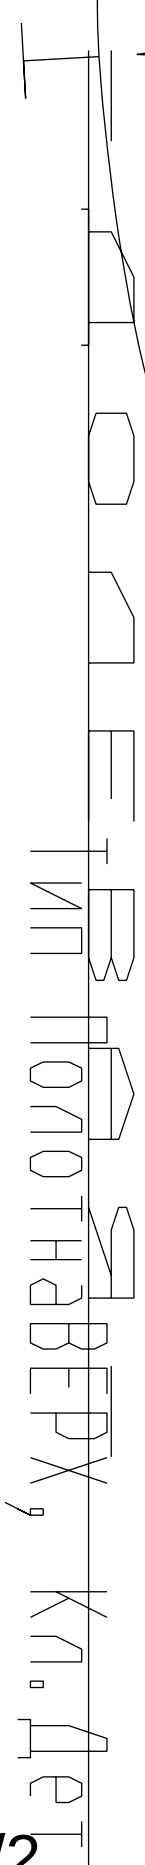


*=165=84=92

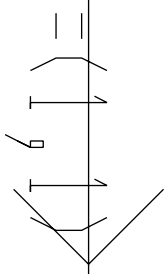

mod\5707


ЦЕНТРАЛЬНАЯ ЧАСТЬ СПИ

Тип ПолотнаВЕРХ, Кл. Д

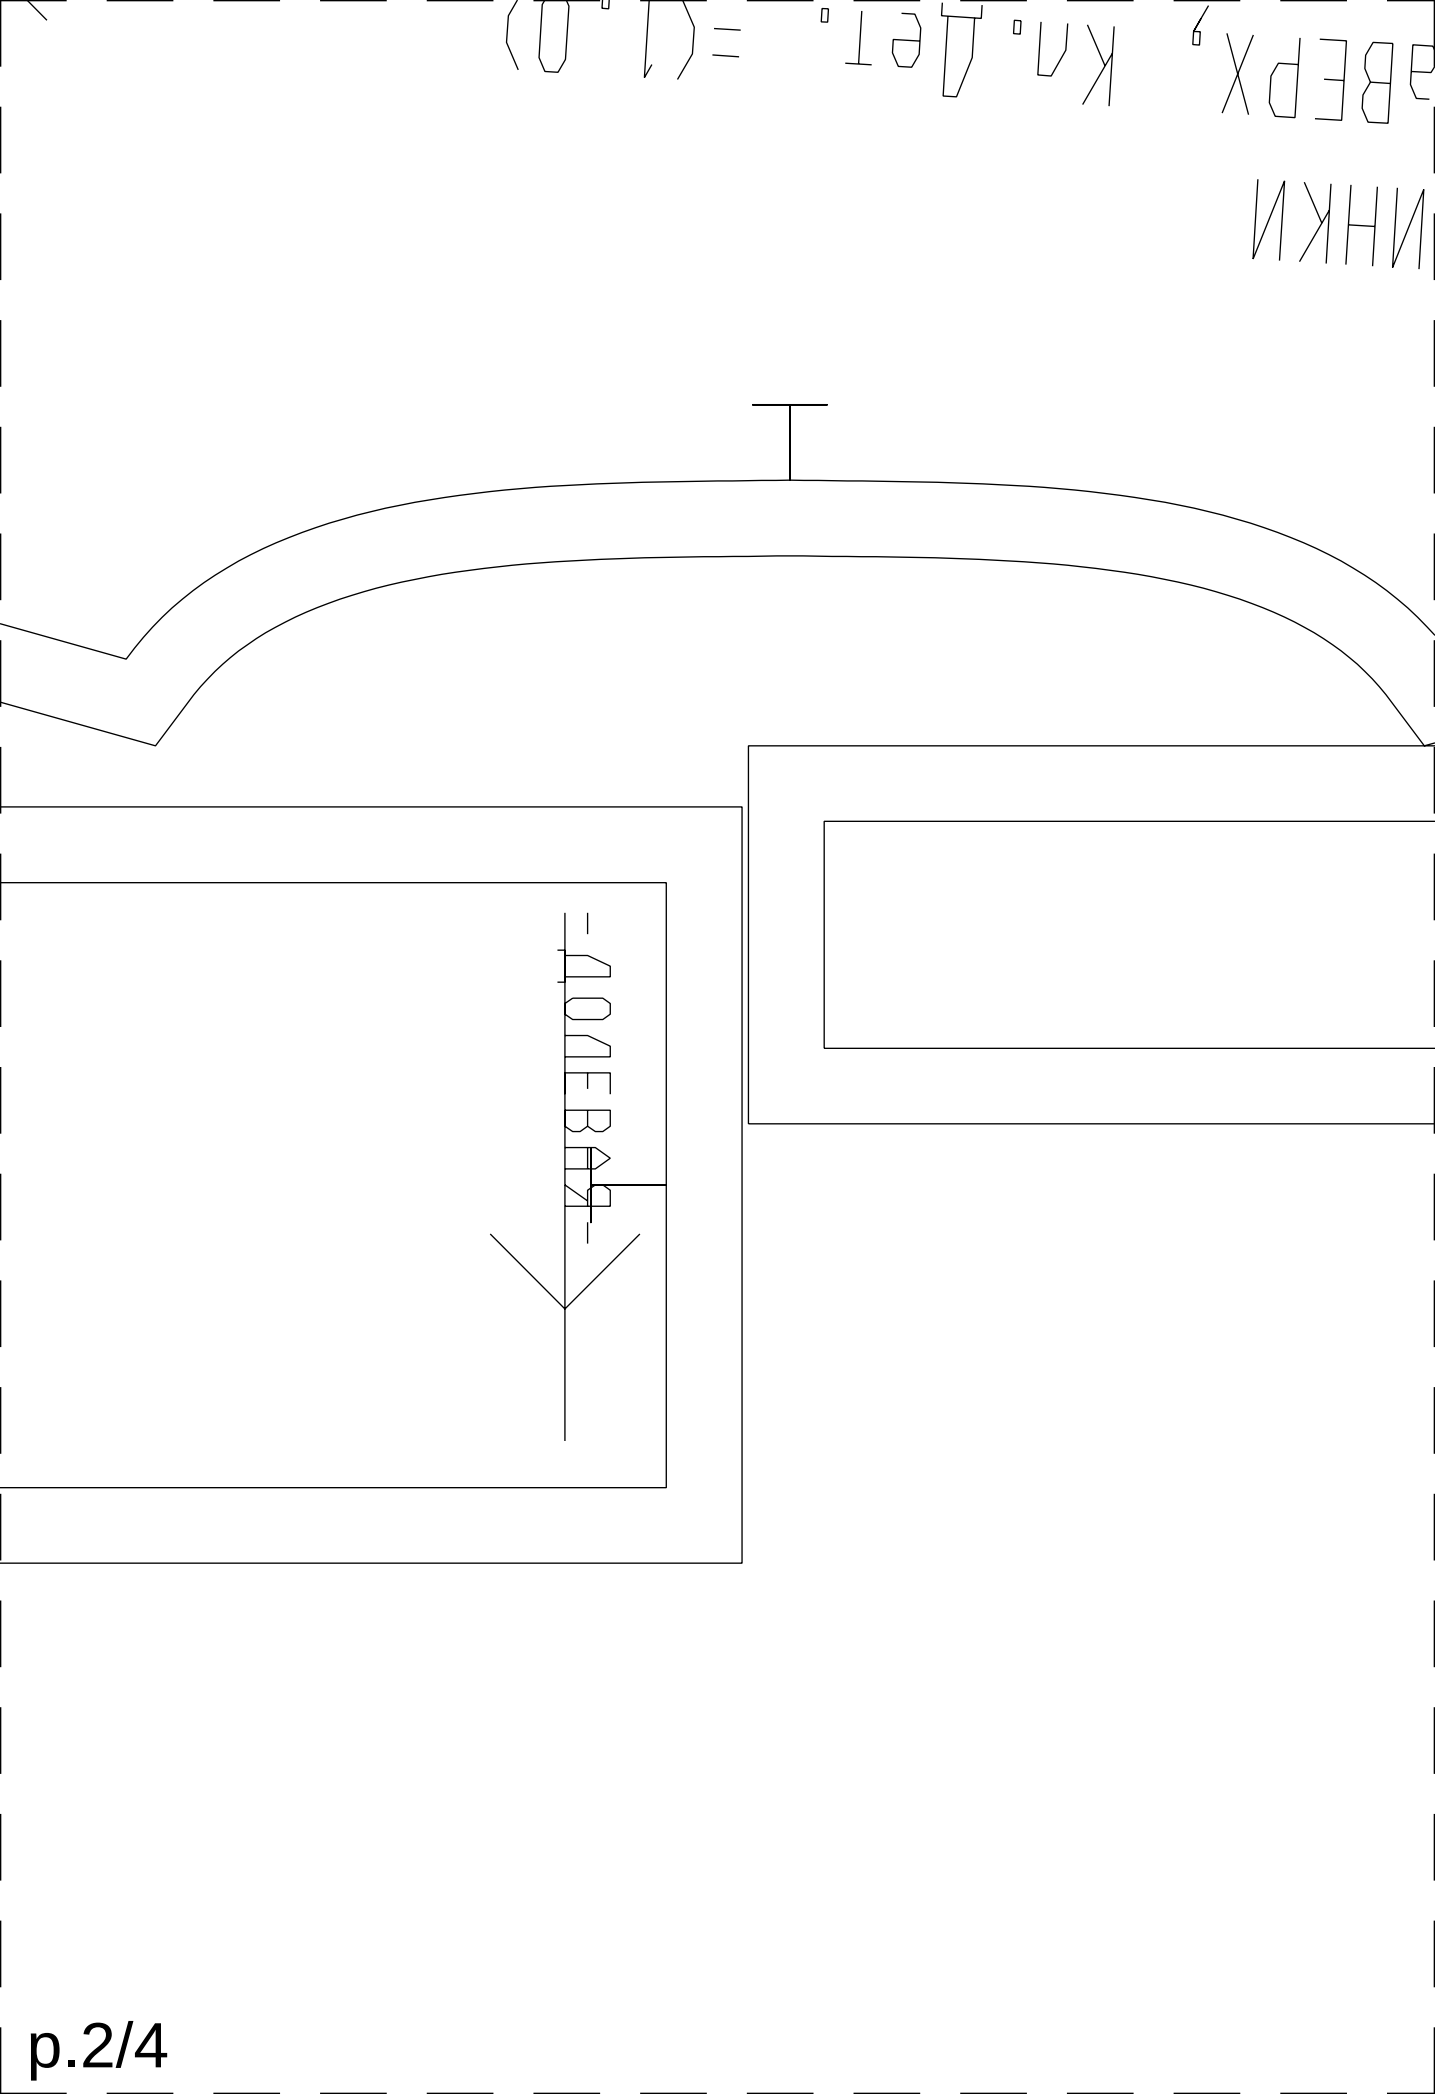

ИНЖИ

АВЕРХ, КН. ДЕТ. = (1.0)

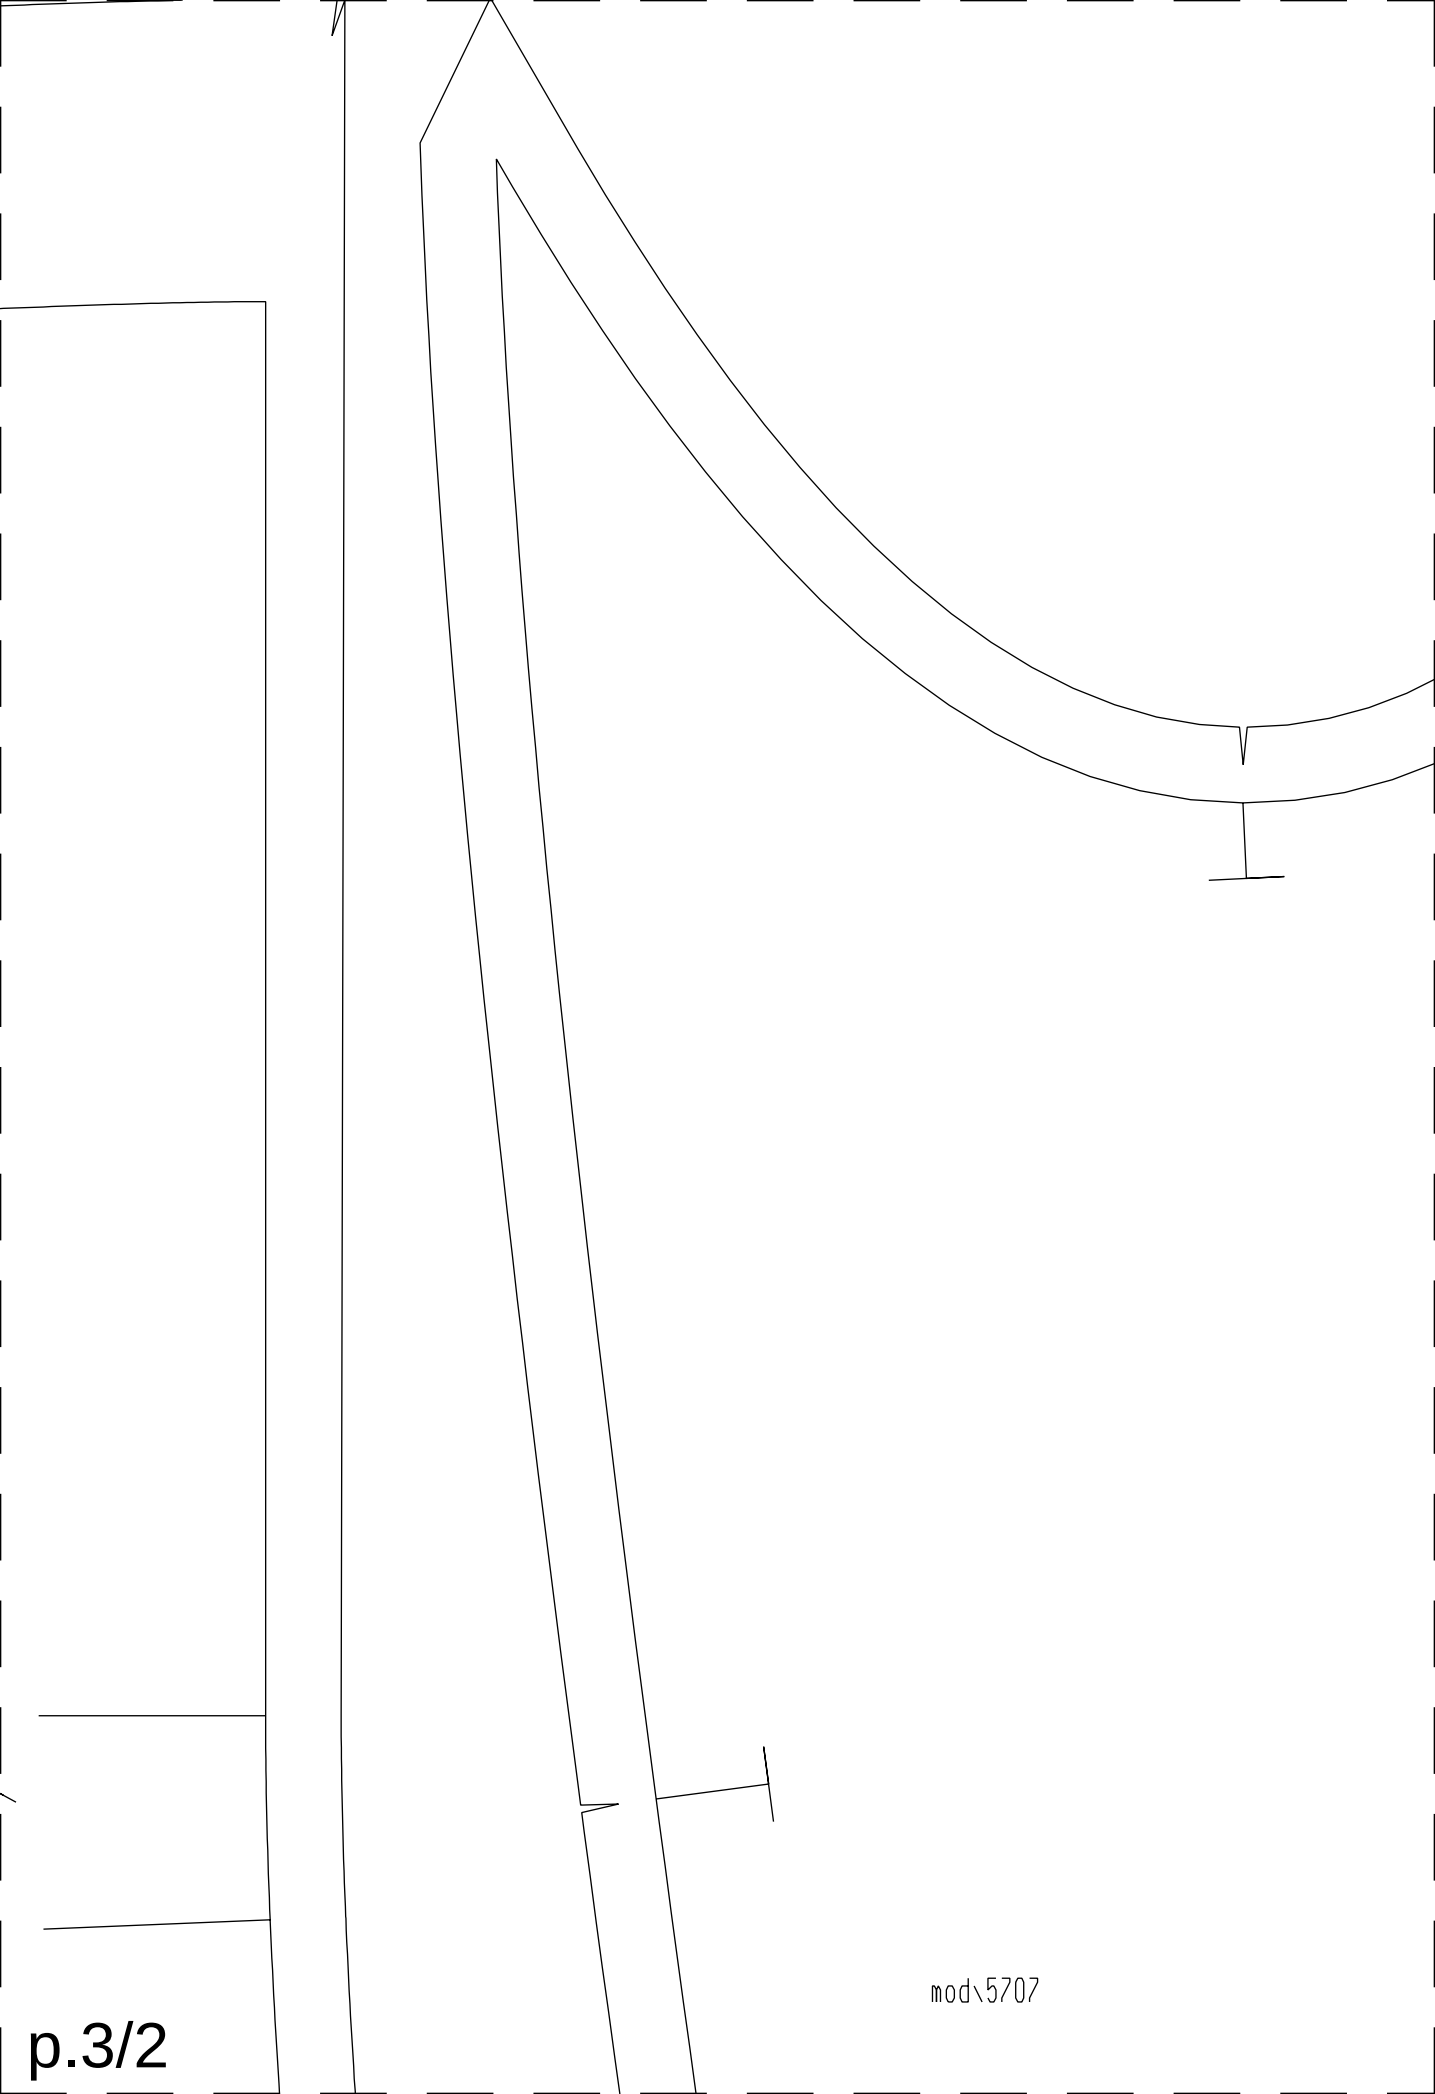

mod\5707

НИЖНЯЯ_ЧАСТЬ_РУКАВА


Тип ПолотнаВЕРХ, Кл.Дет. =(1,1)


ж=165-84=92

Ж=165-84=92




р.3/38=99Ж

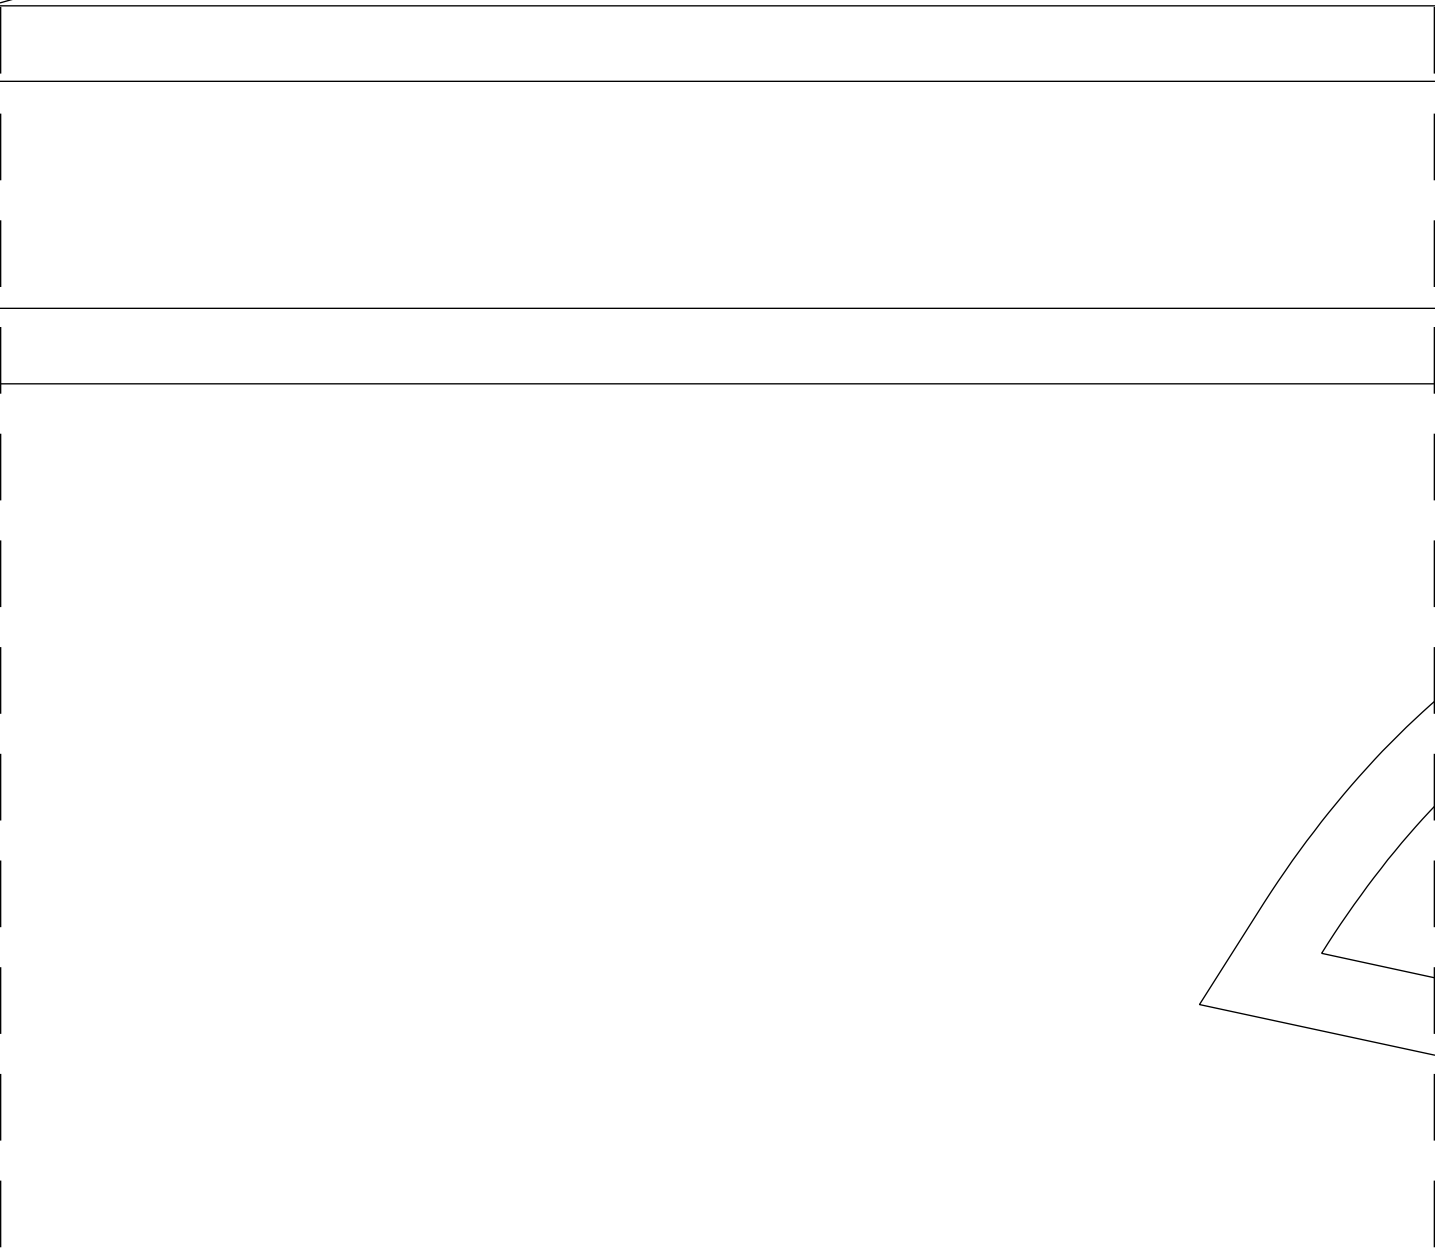


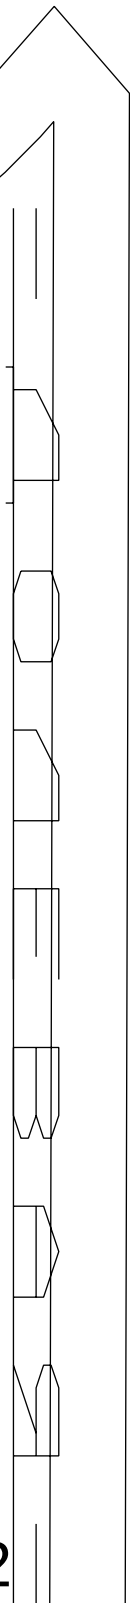

ПОЛОЧКИ

№, Кл.Дет. = (1,1)



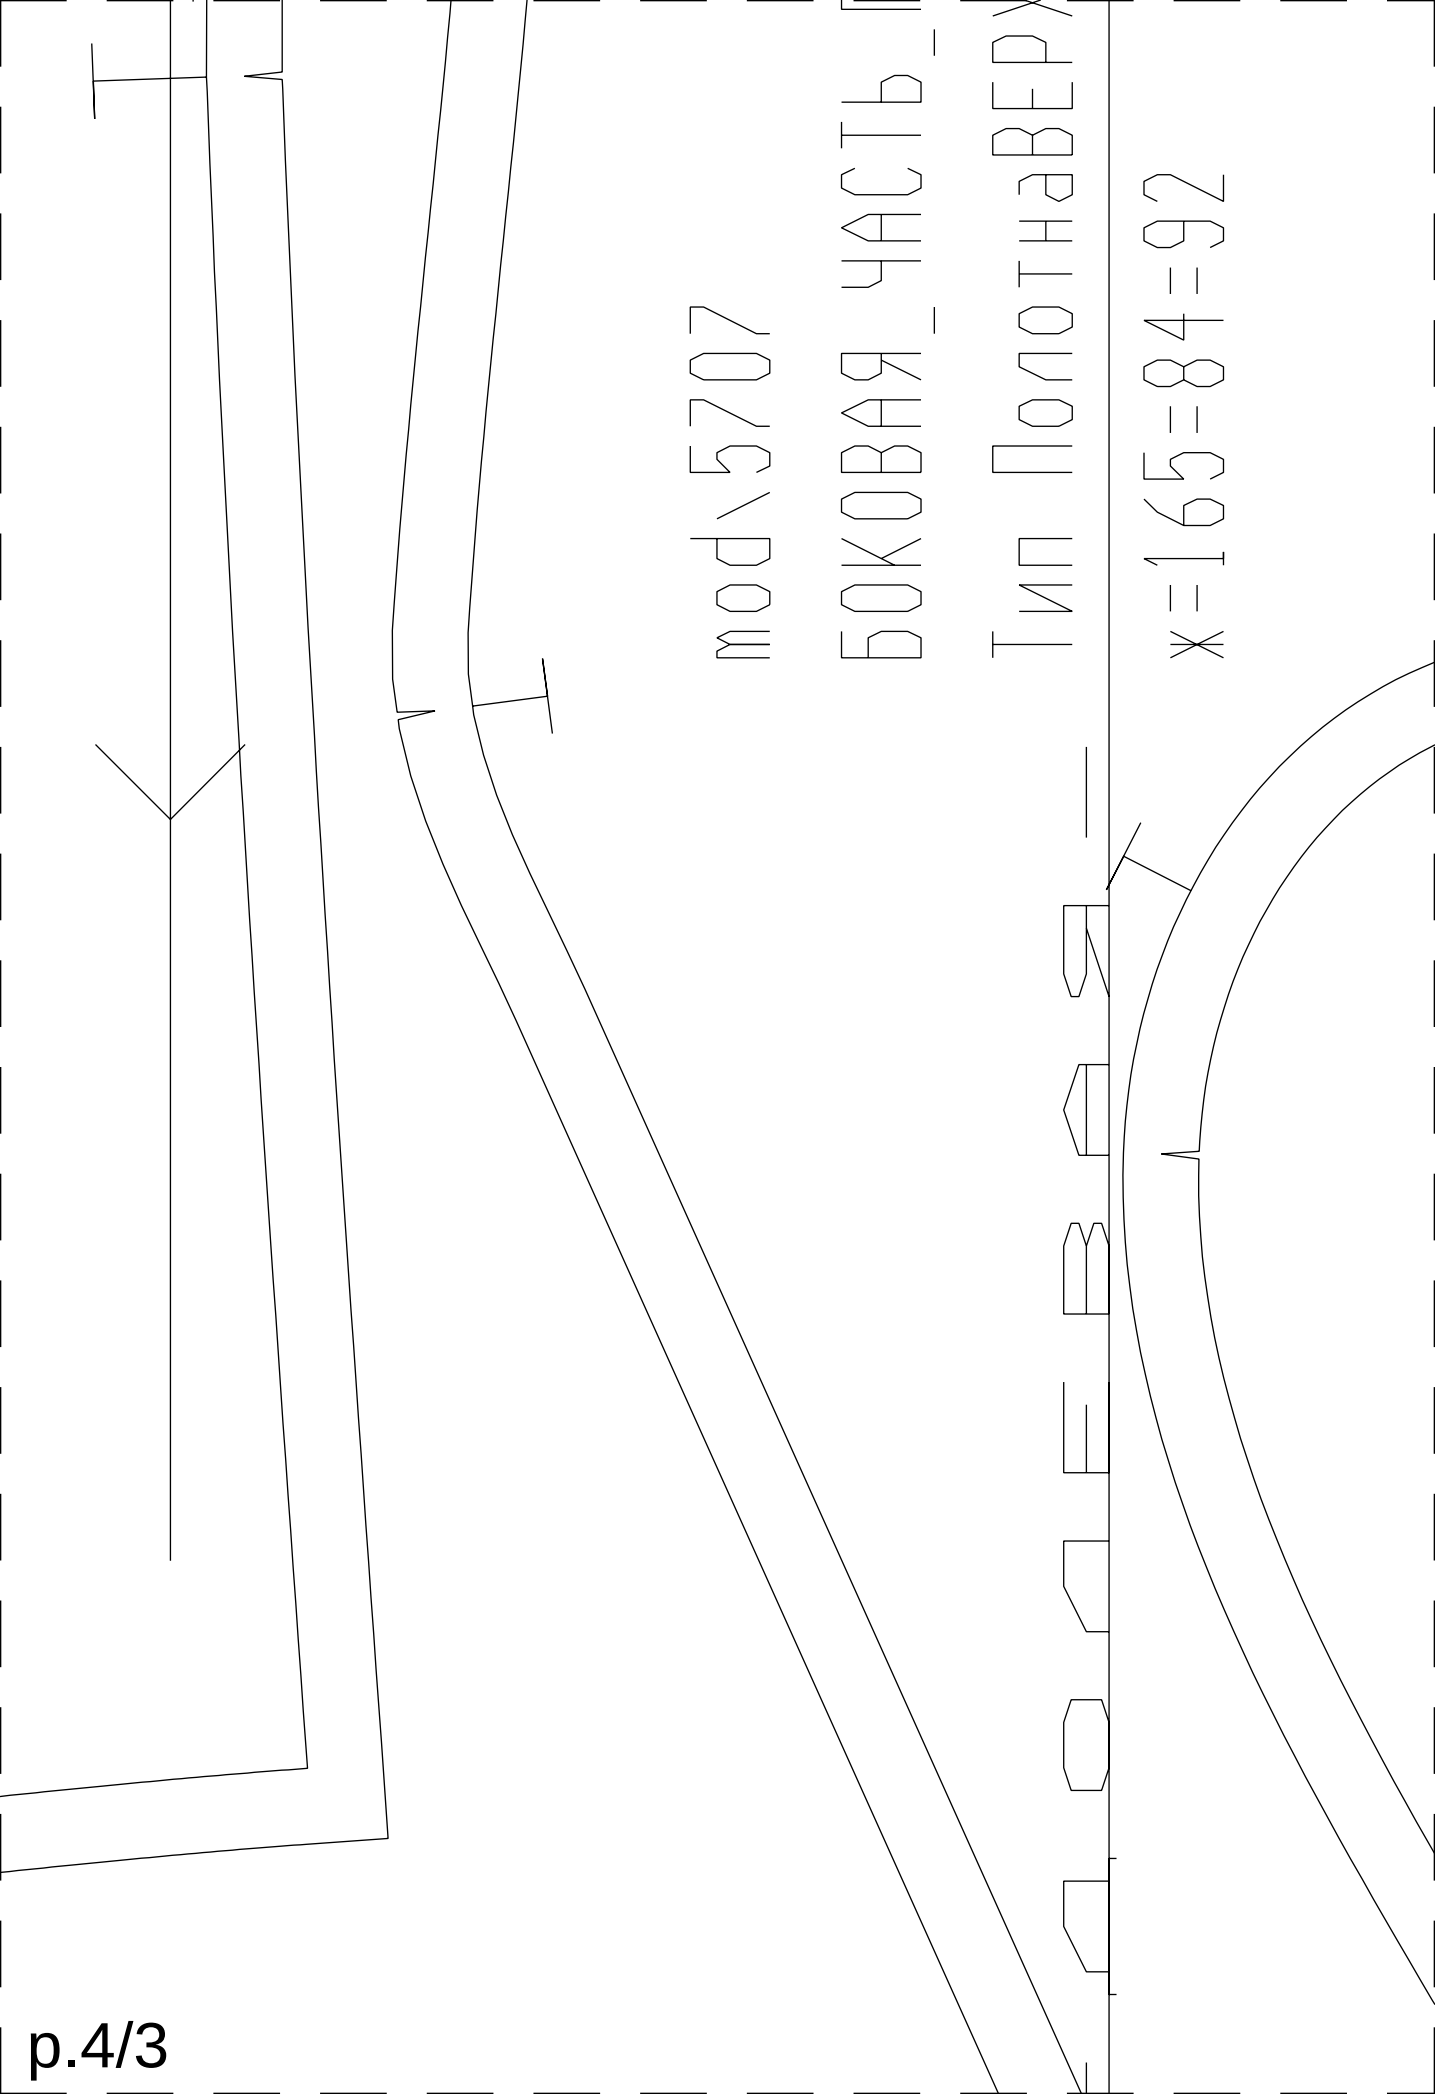

mod\5707

БОКОВАЯ ЧАСТЬ

Тип ПолотнаВерх

Ж=165=84=92

300 \ 5707
□□□
T□□□□□□
× = 165 = 84 =


-ДОПЕВА-

med.530

ВЫСТАВ. ПОСЛЕД. ЧИСЛА

1 см. 100 мм. 100 см. 100 м.

1000-1000

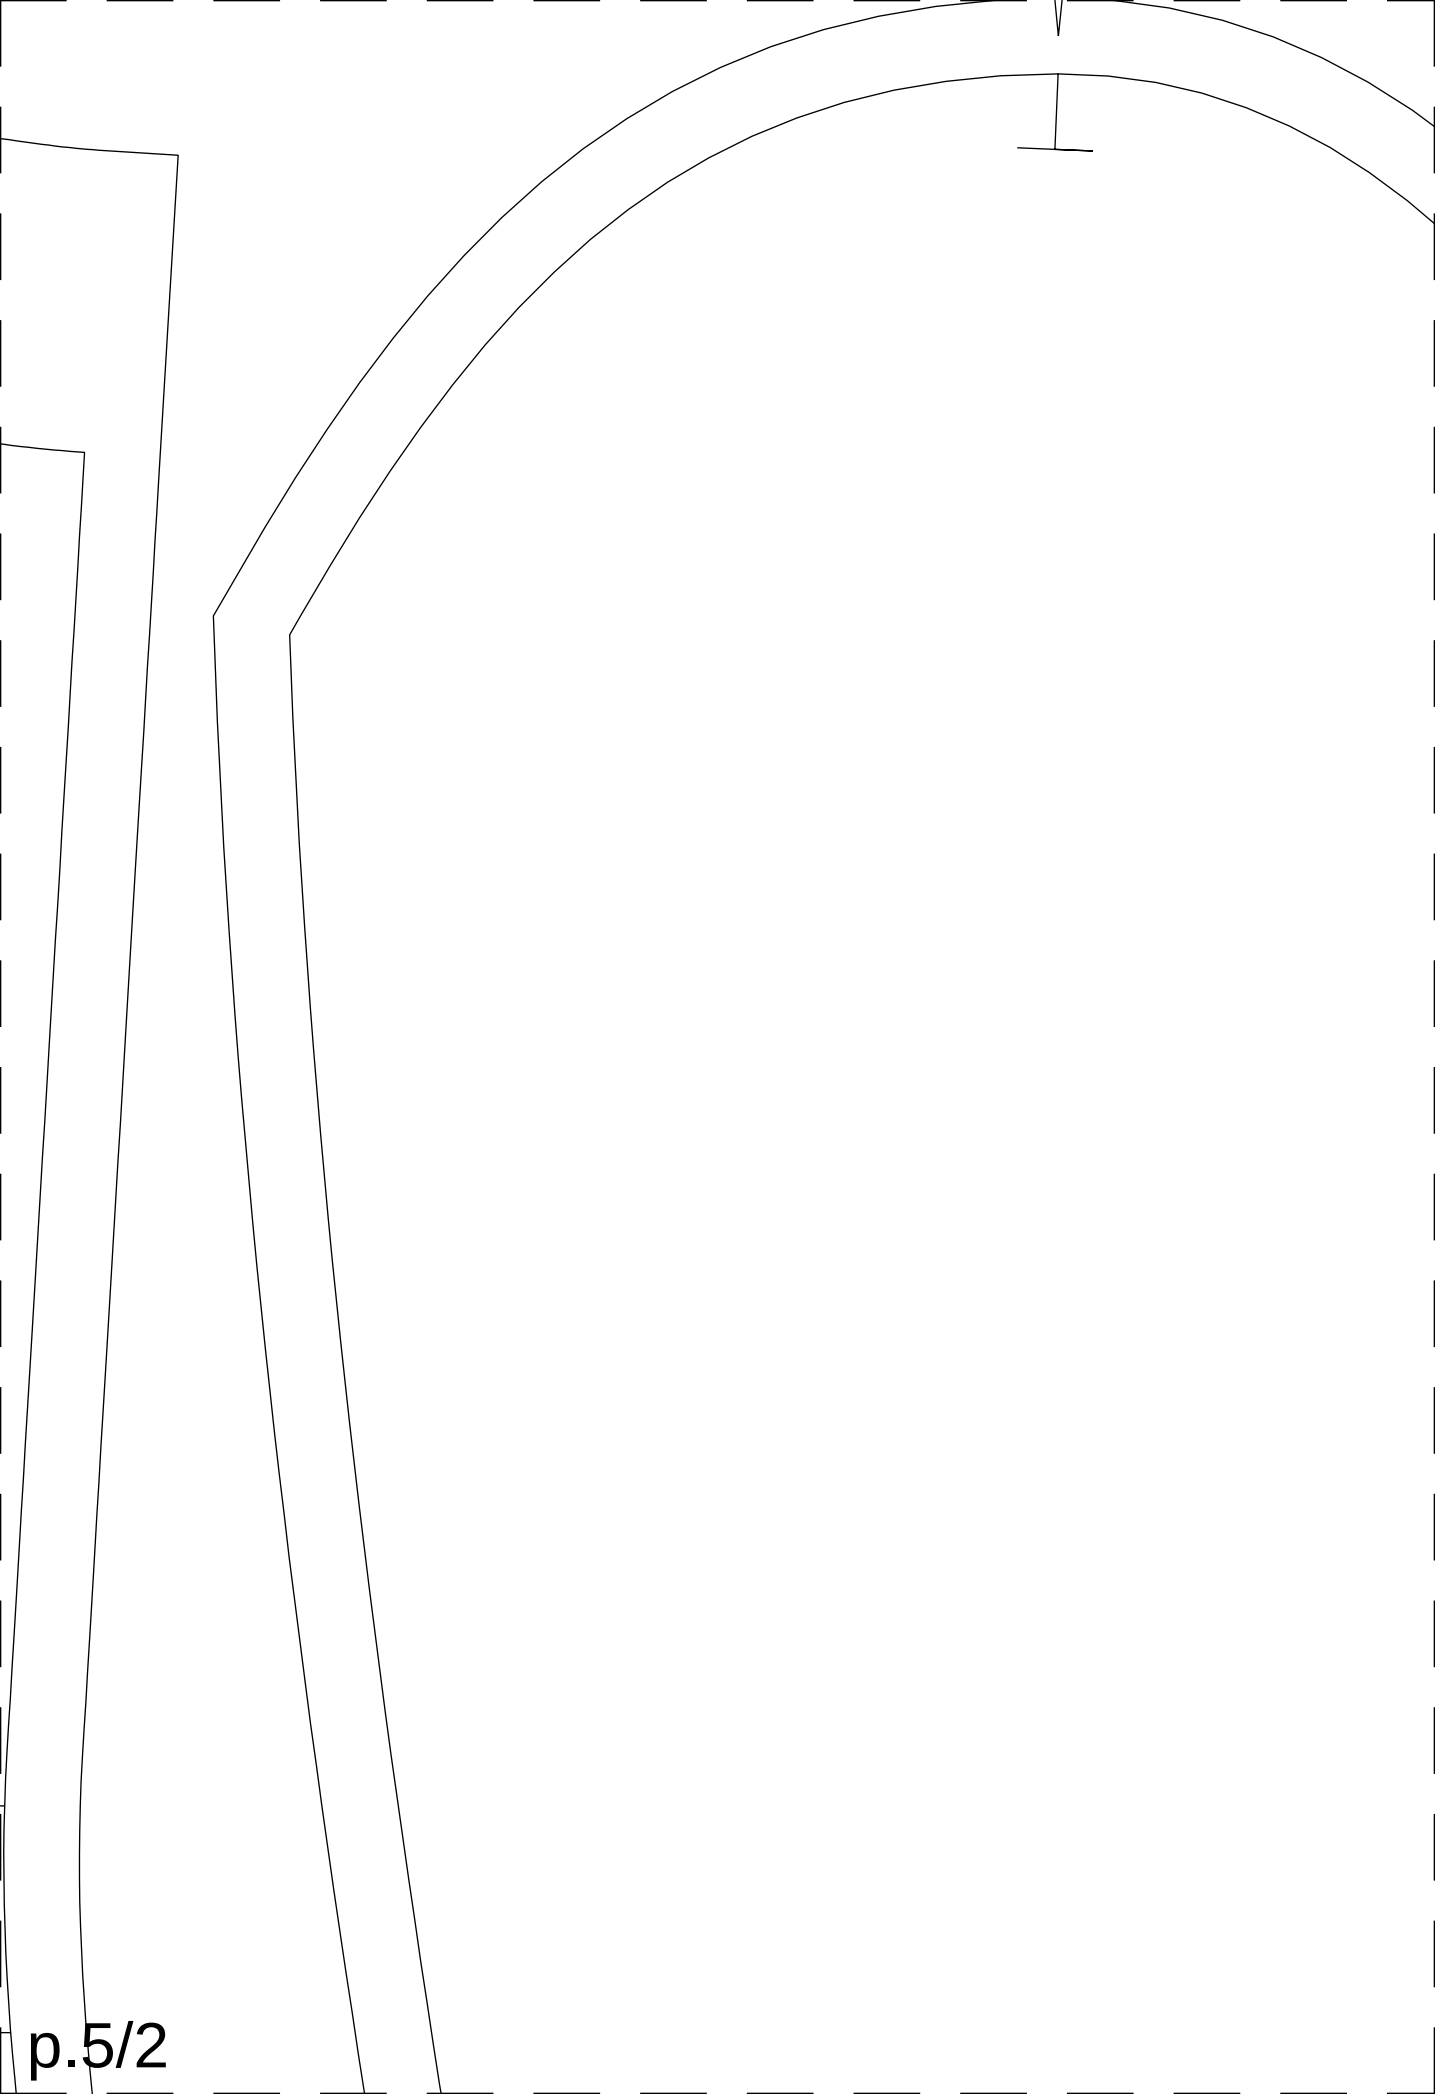


mod\5707

ВЕРХНЯЯ_ЧАСТЬ_РУКАВА


Тип ПлотнаВЕРХ, Кл.Дет. =(

$x=165-84=92$

На, Кл. Дет. = < 1, 0 >
92

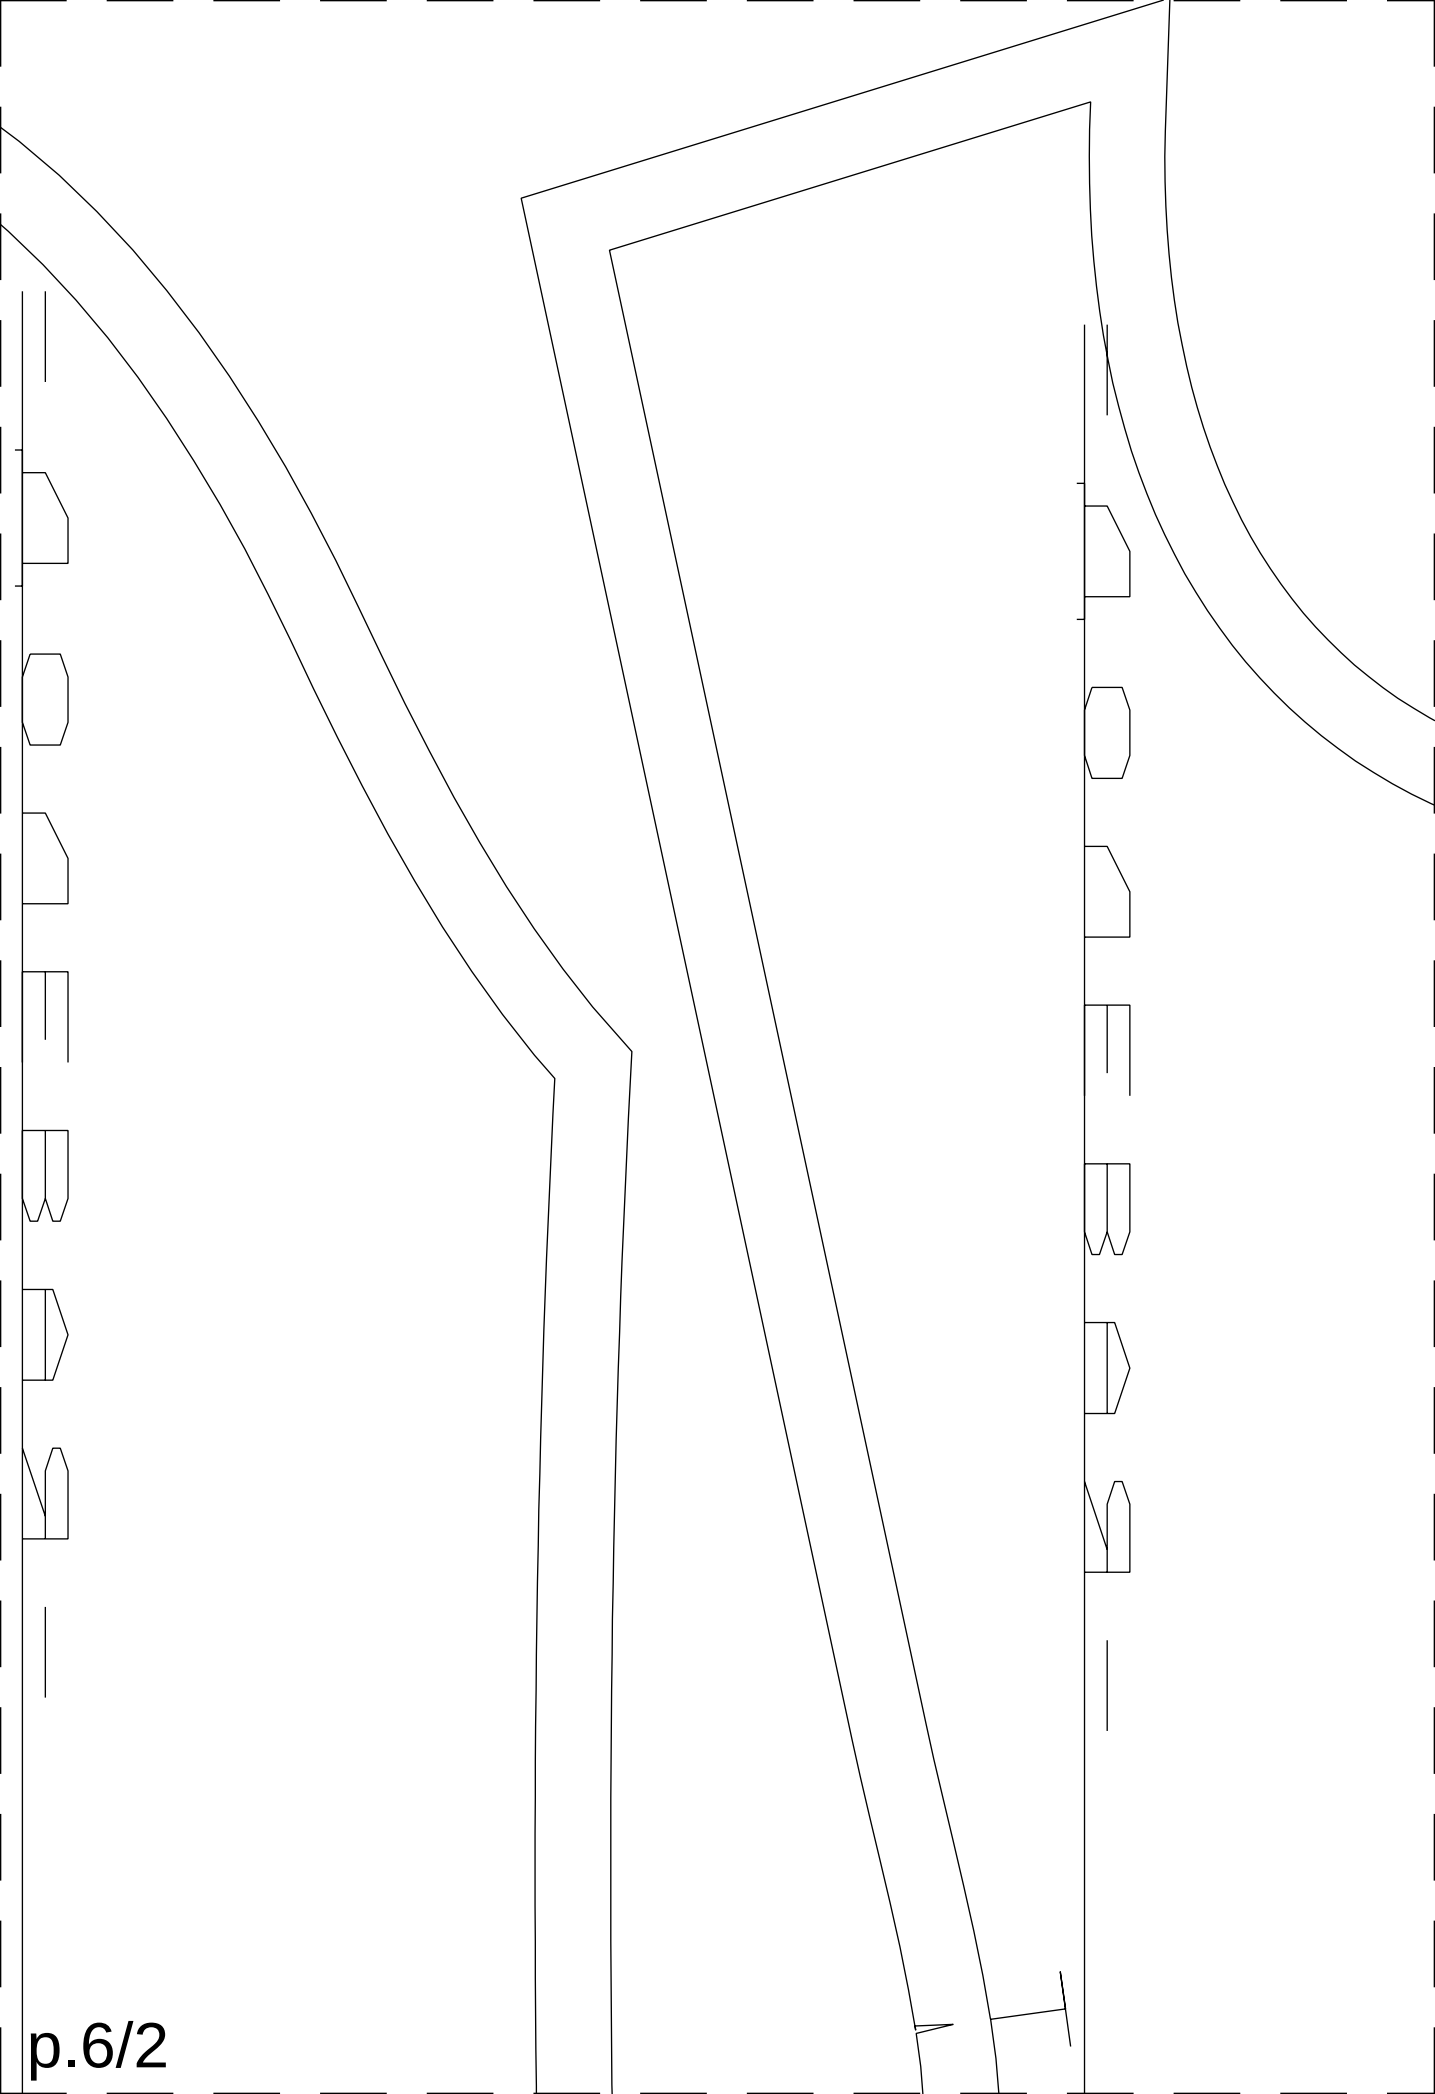

1, 1)

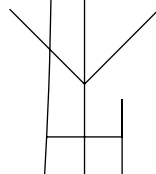

mod \ 5707
СТОЙКА

Тип Полотна ВЕРХ, Кл. Дет. = 1, 1
ж=1 65=84=92

mod\5707

ЦЕНТРАЛЬНАЯ

Тип Подотна


$\times=165=84=92$


ЧАСТЬ ПОЛОЧКИ



ЕРХ, $K_n \cdot \Delta e_T = (1, 1)$

I



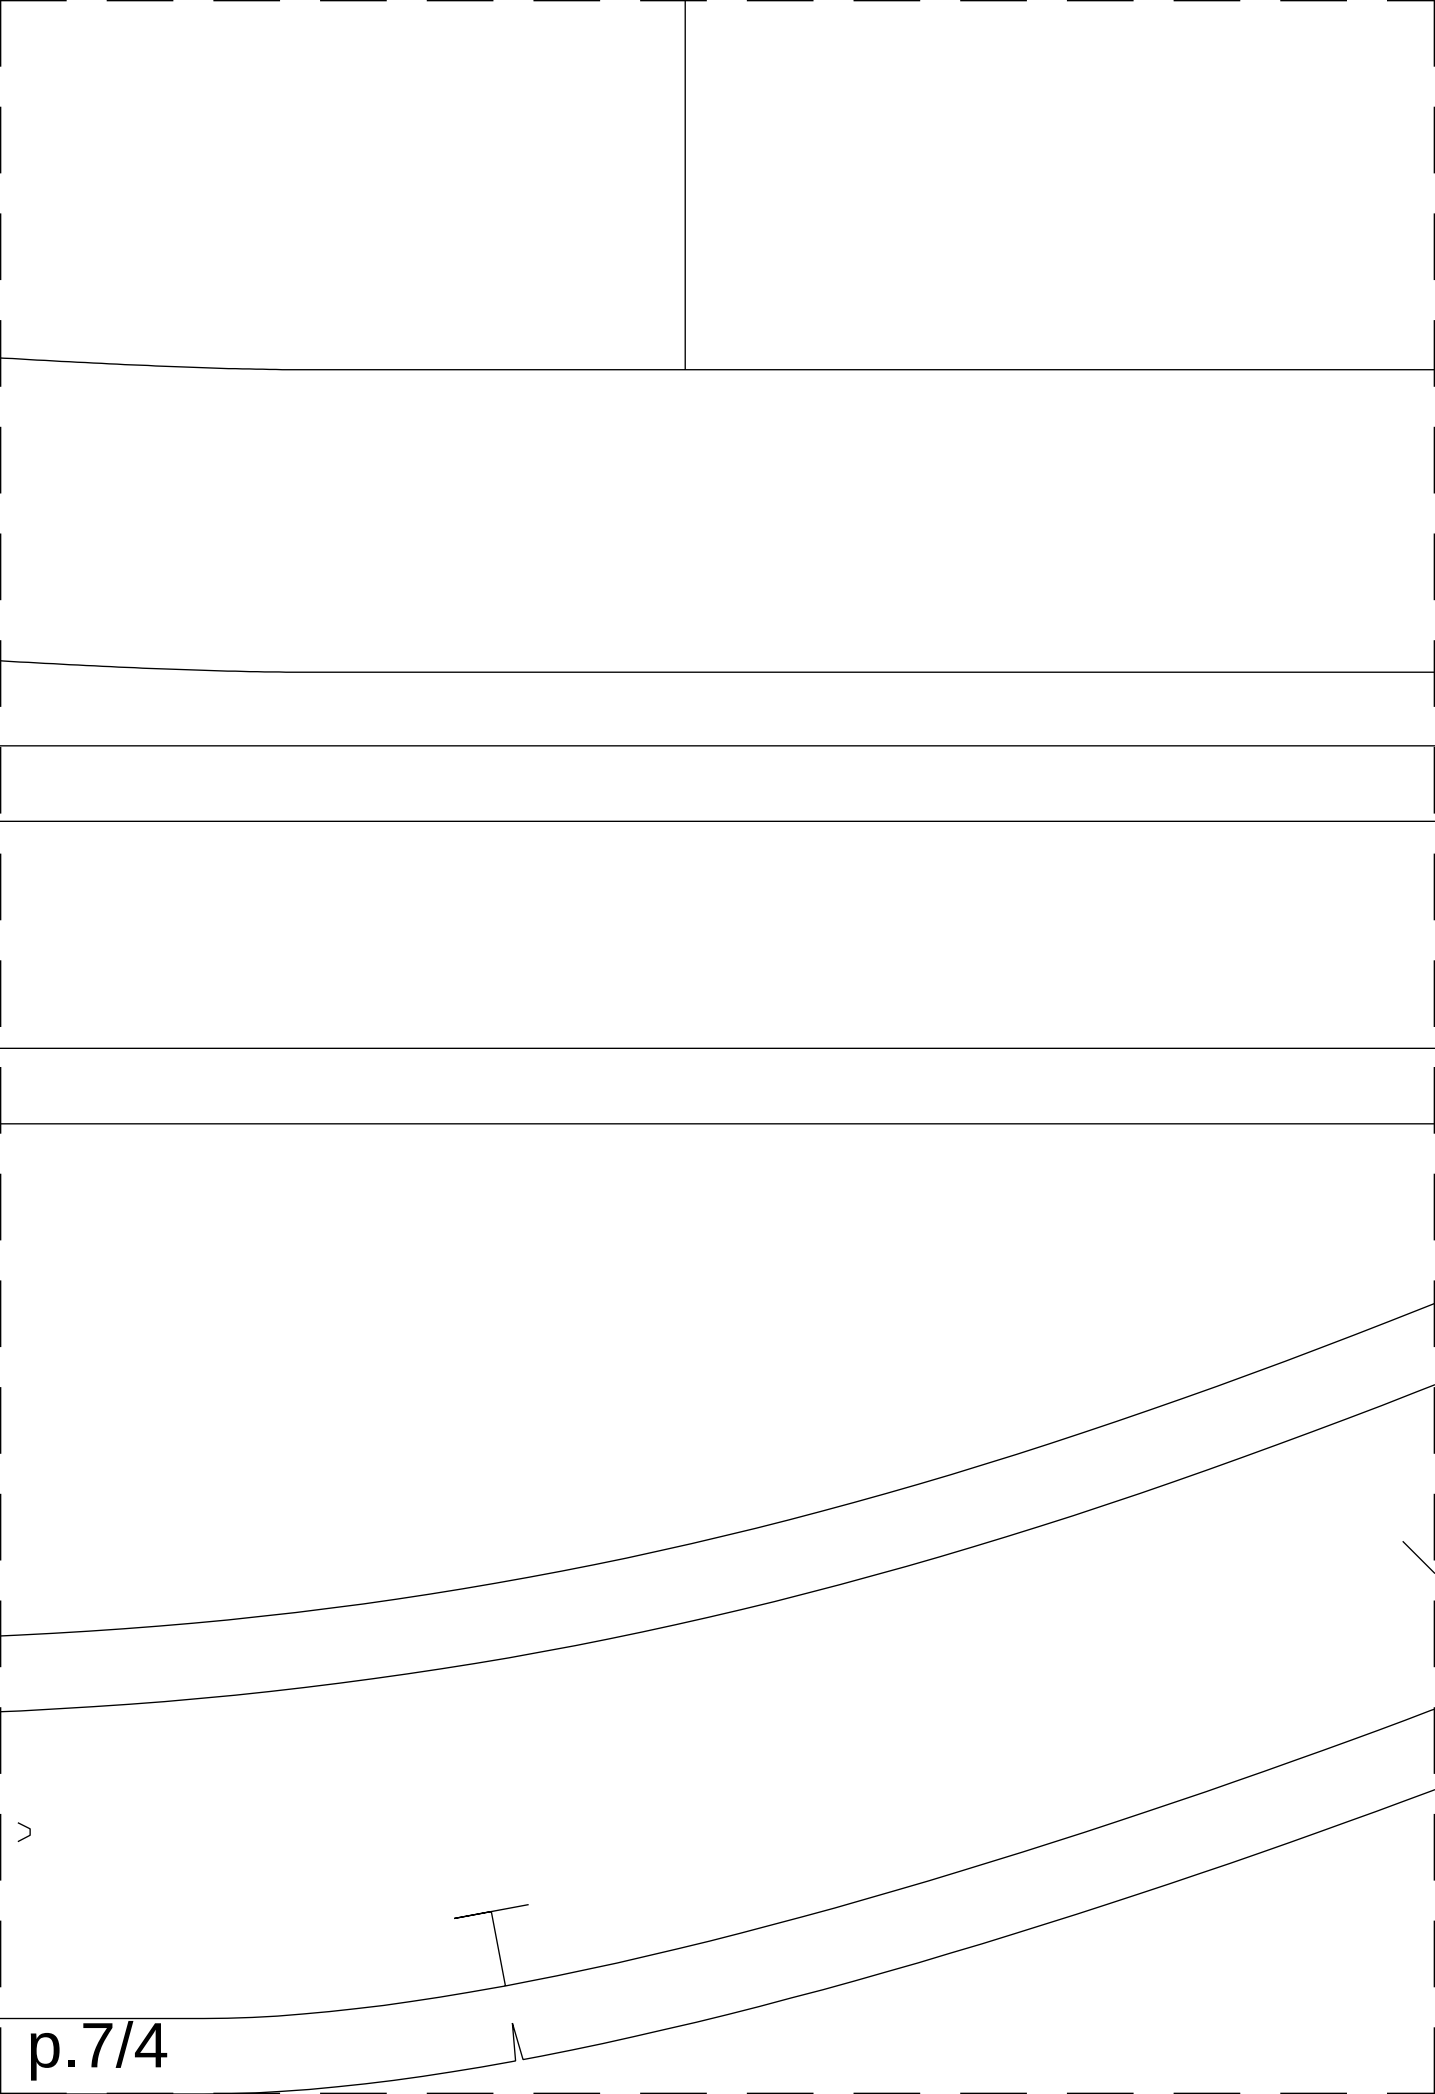

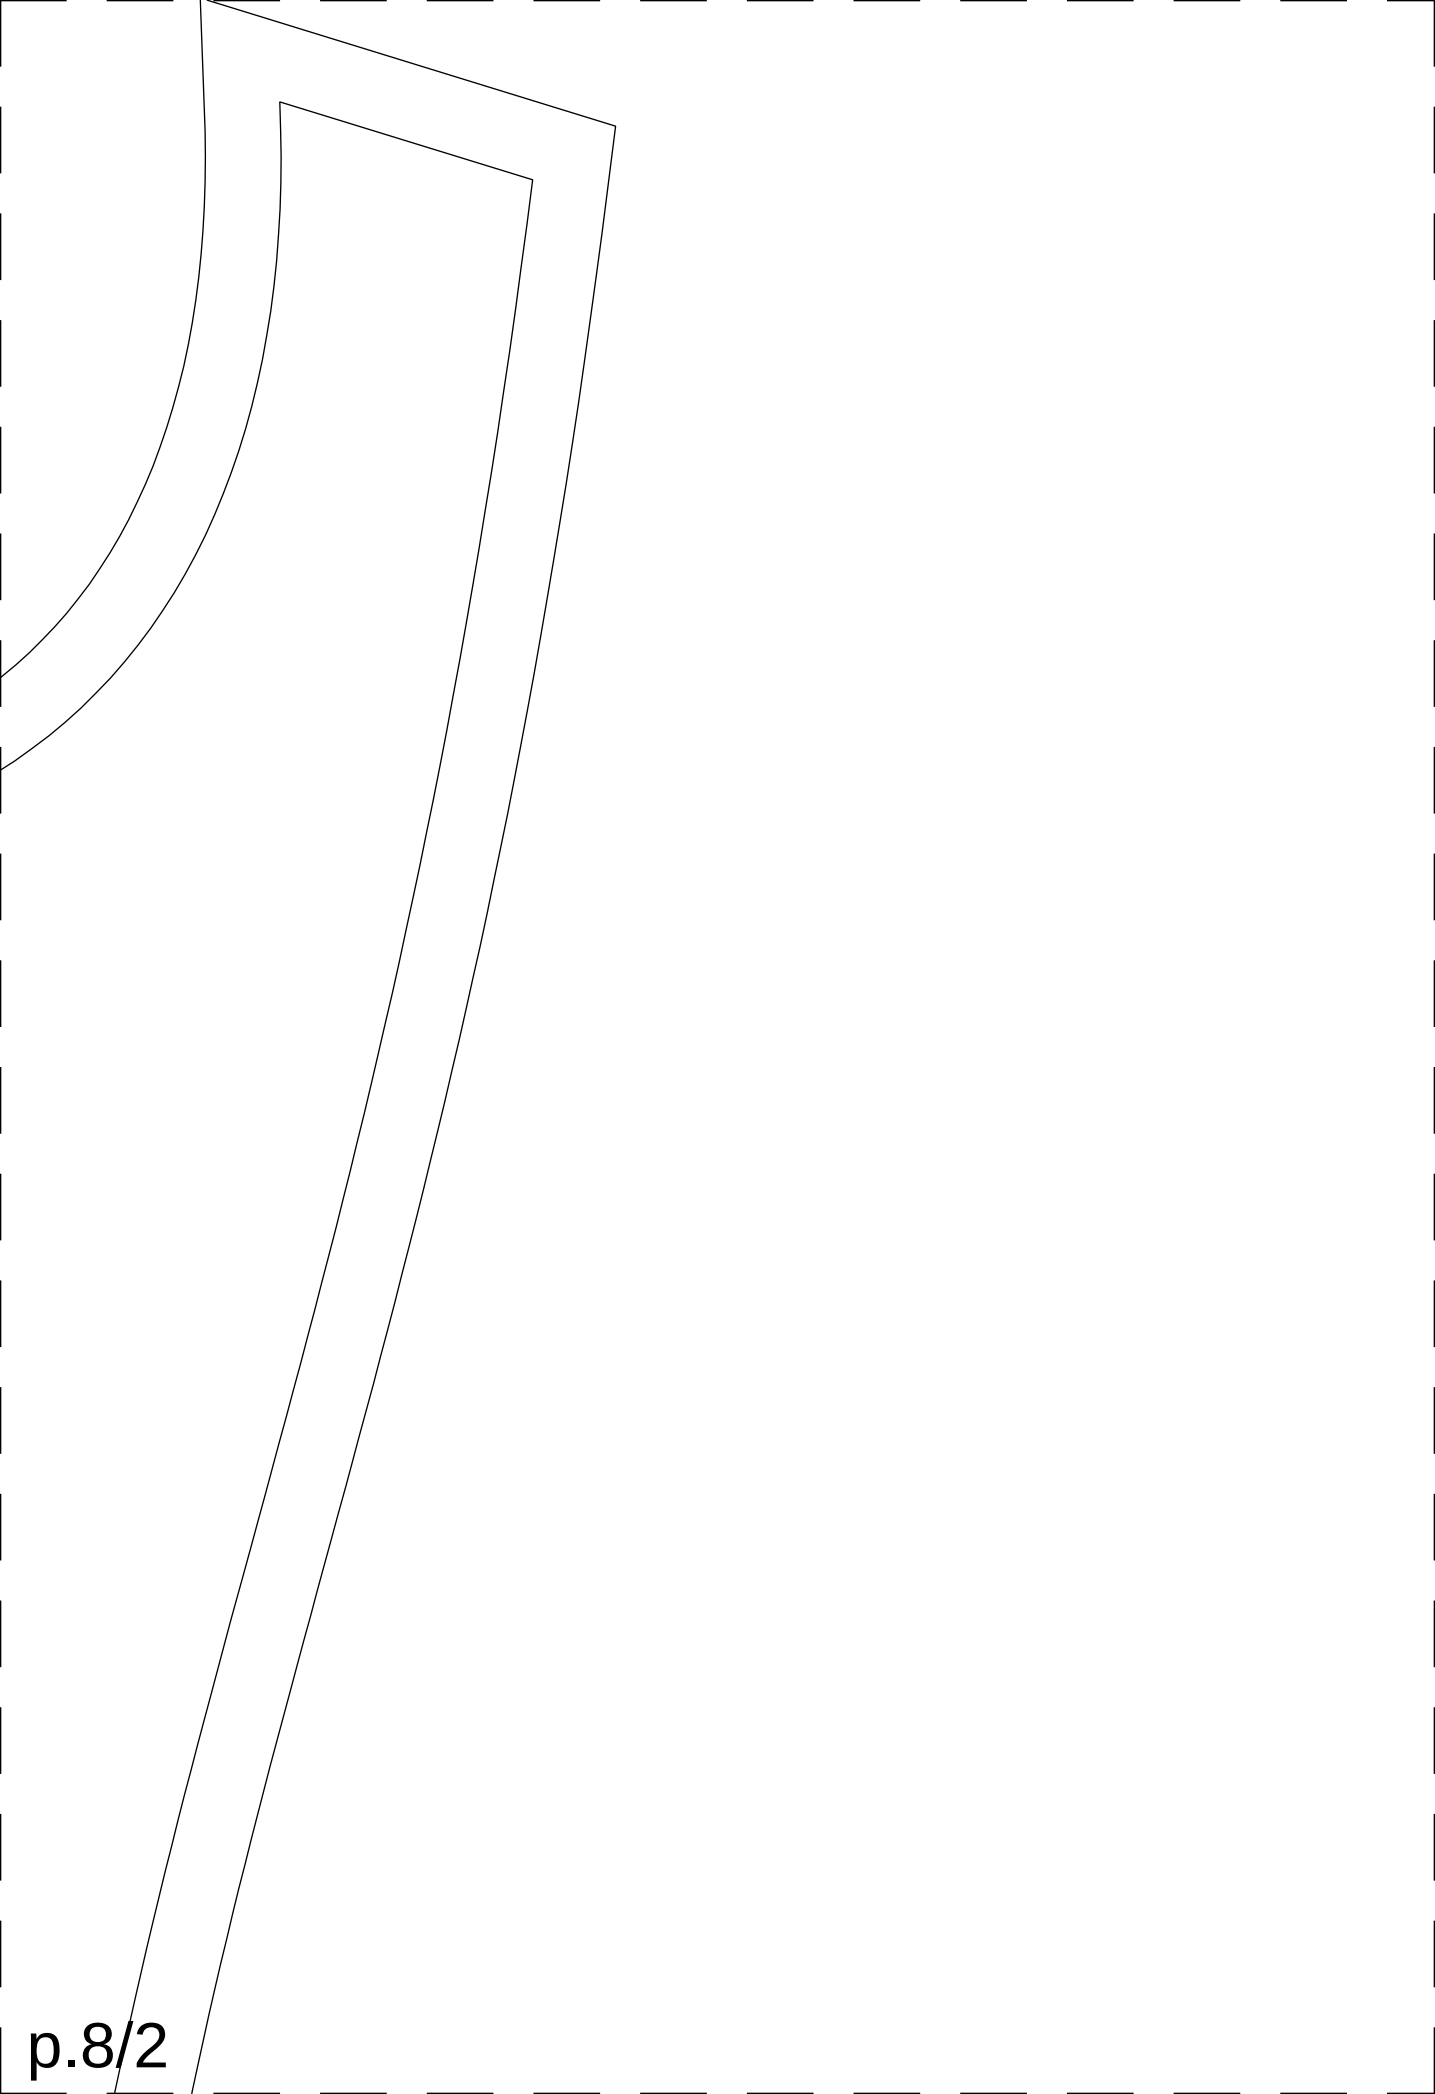

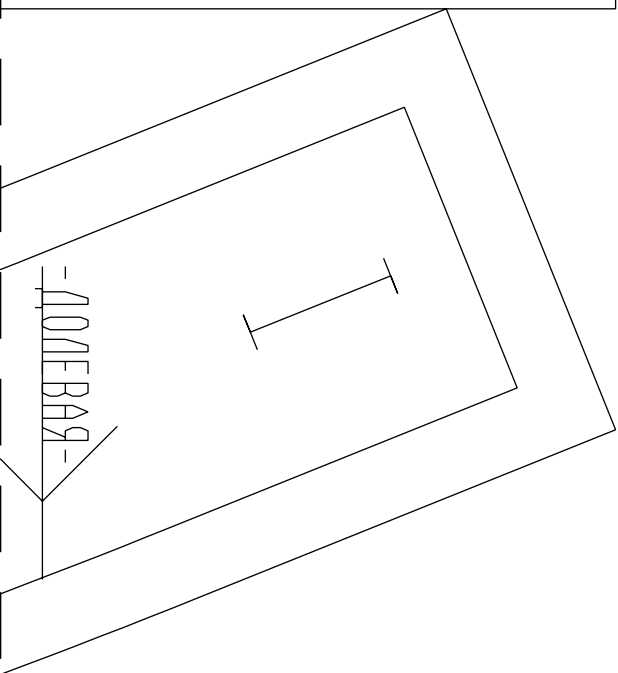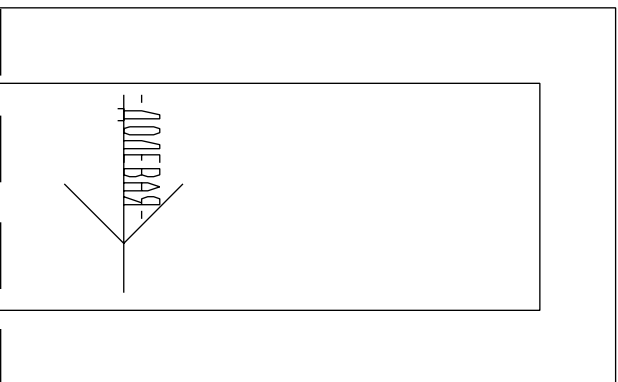

Maneken = ver. 0

rz_1=165 rz_16=84 rz_18=64 rz_19=92