




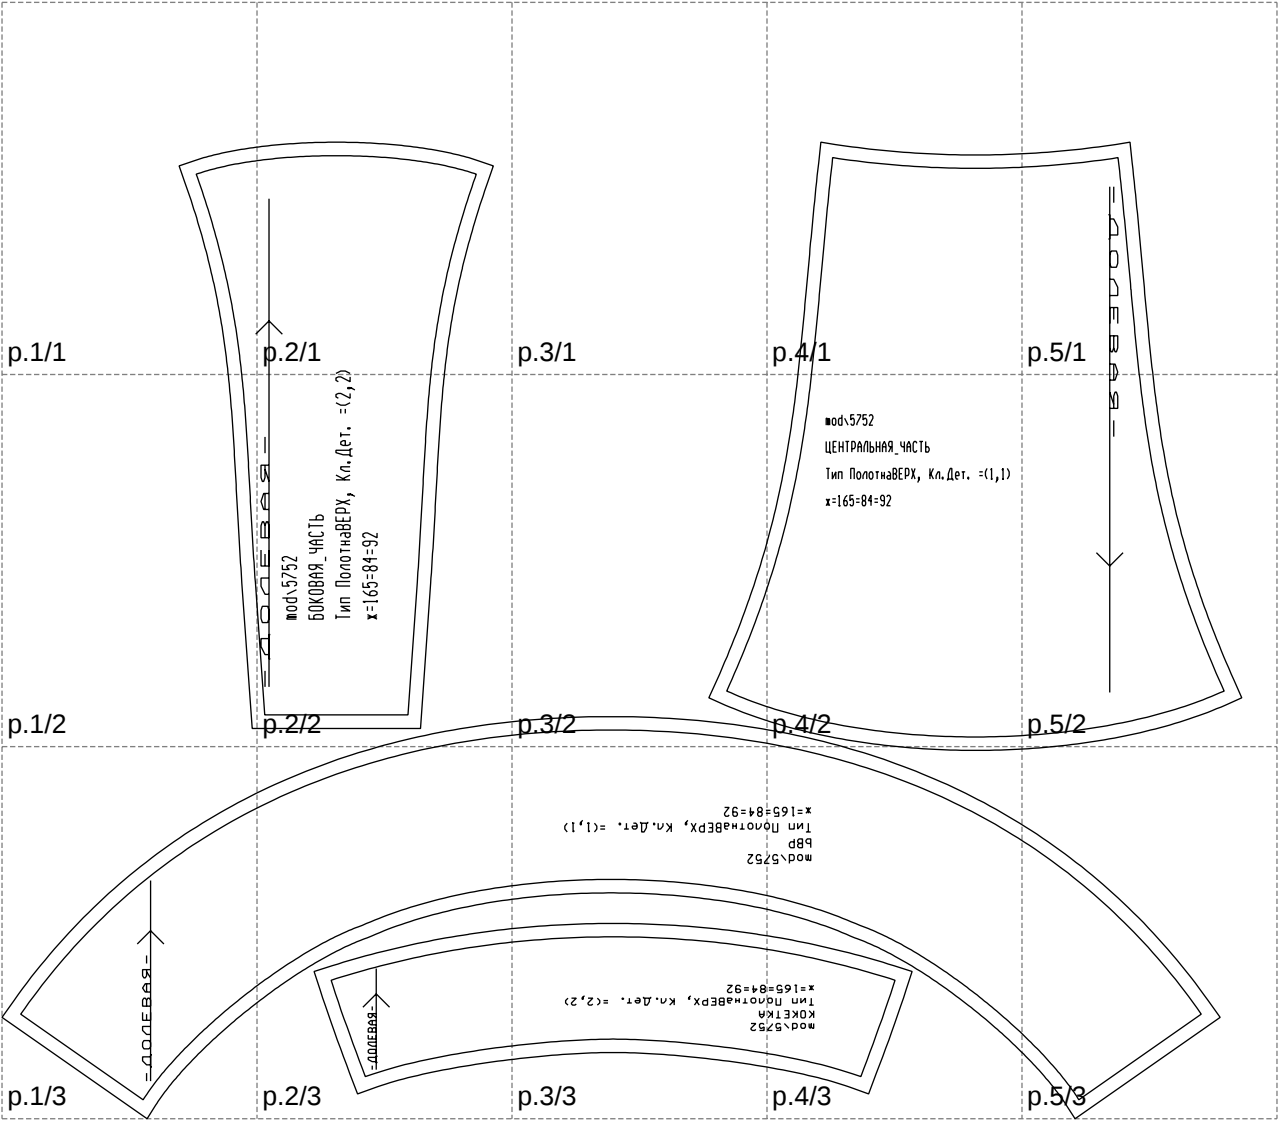

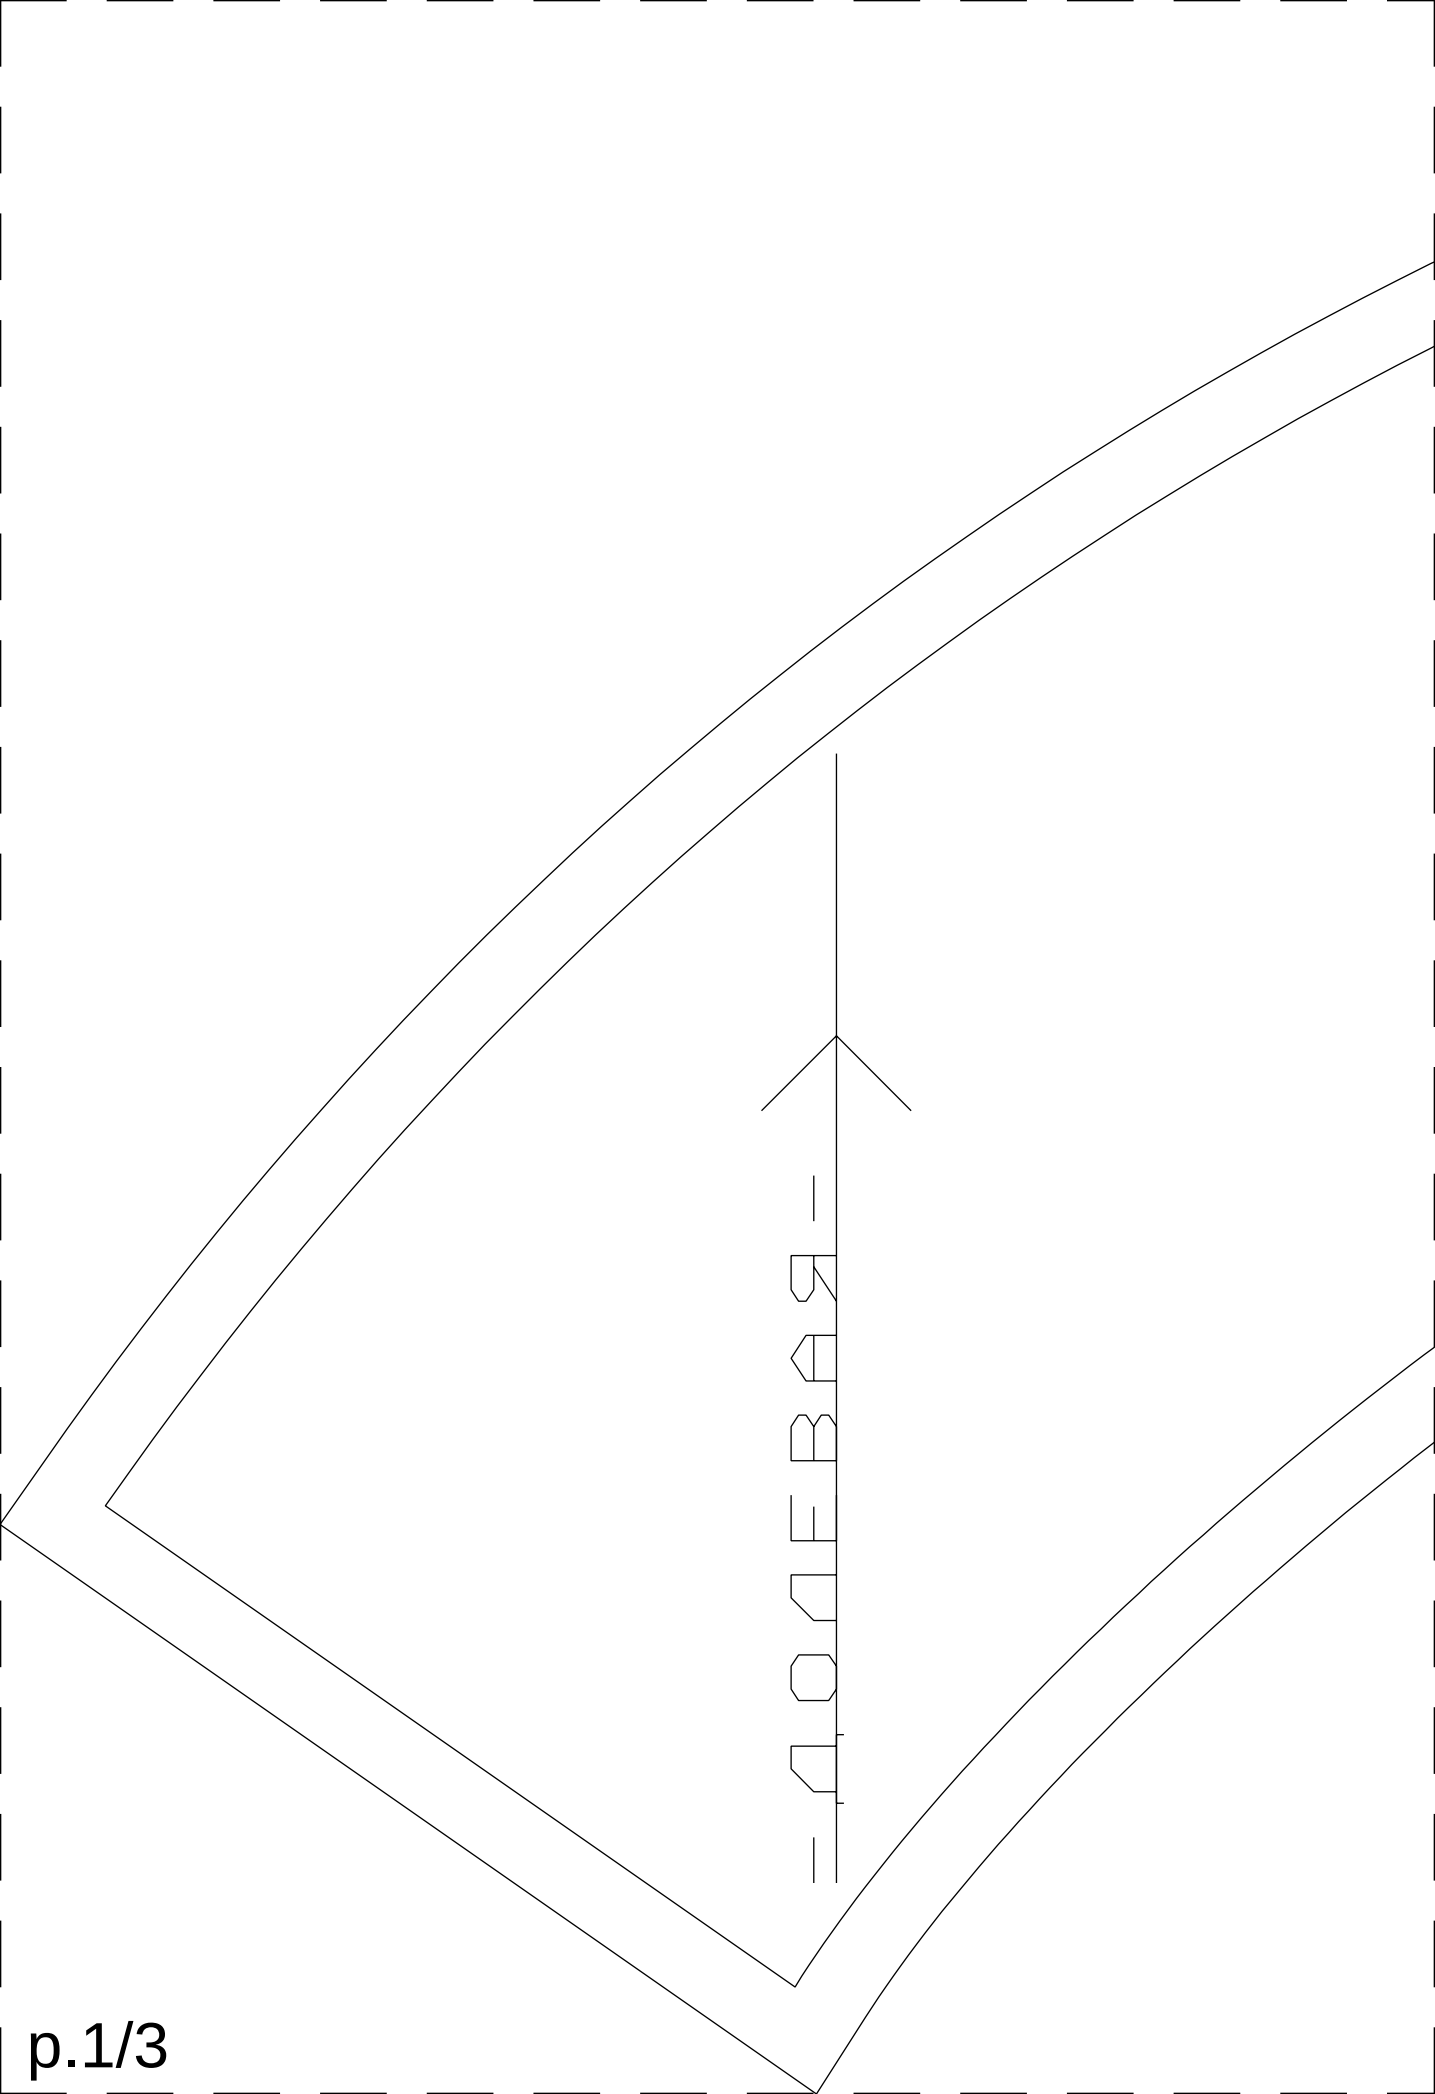

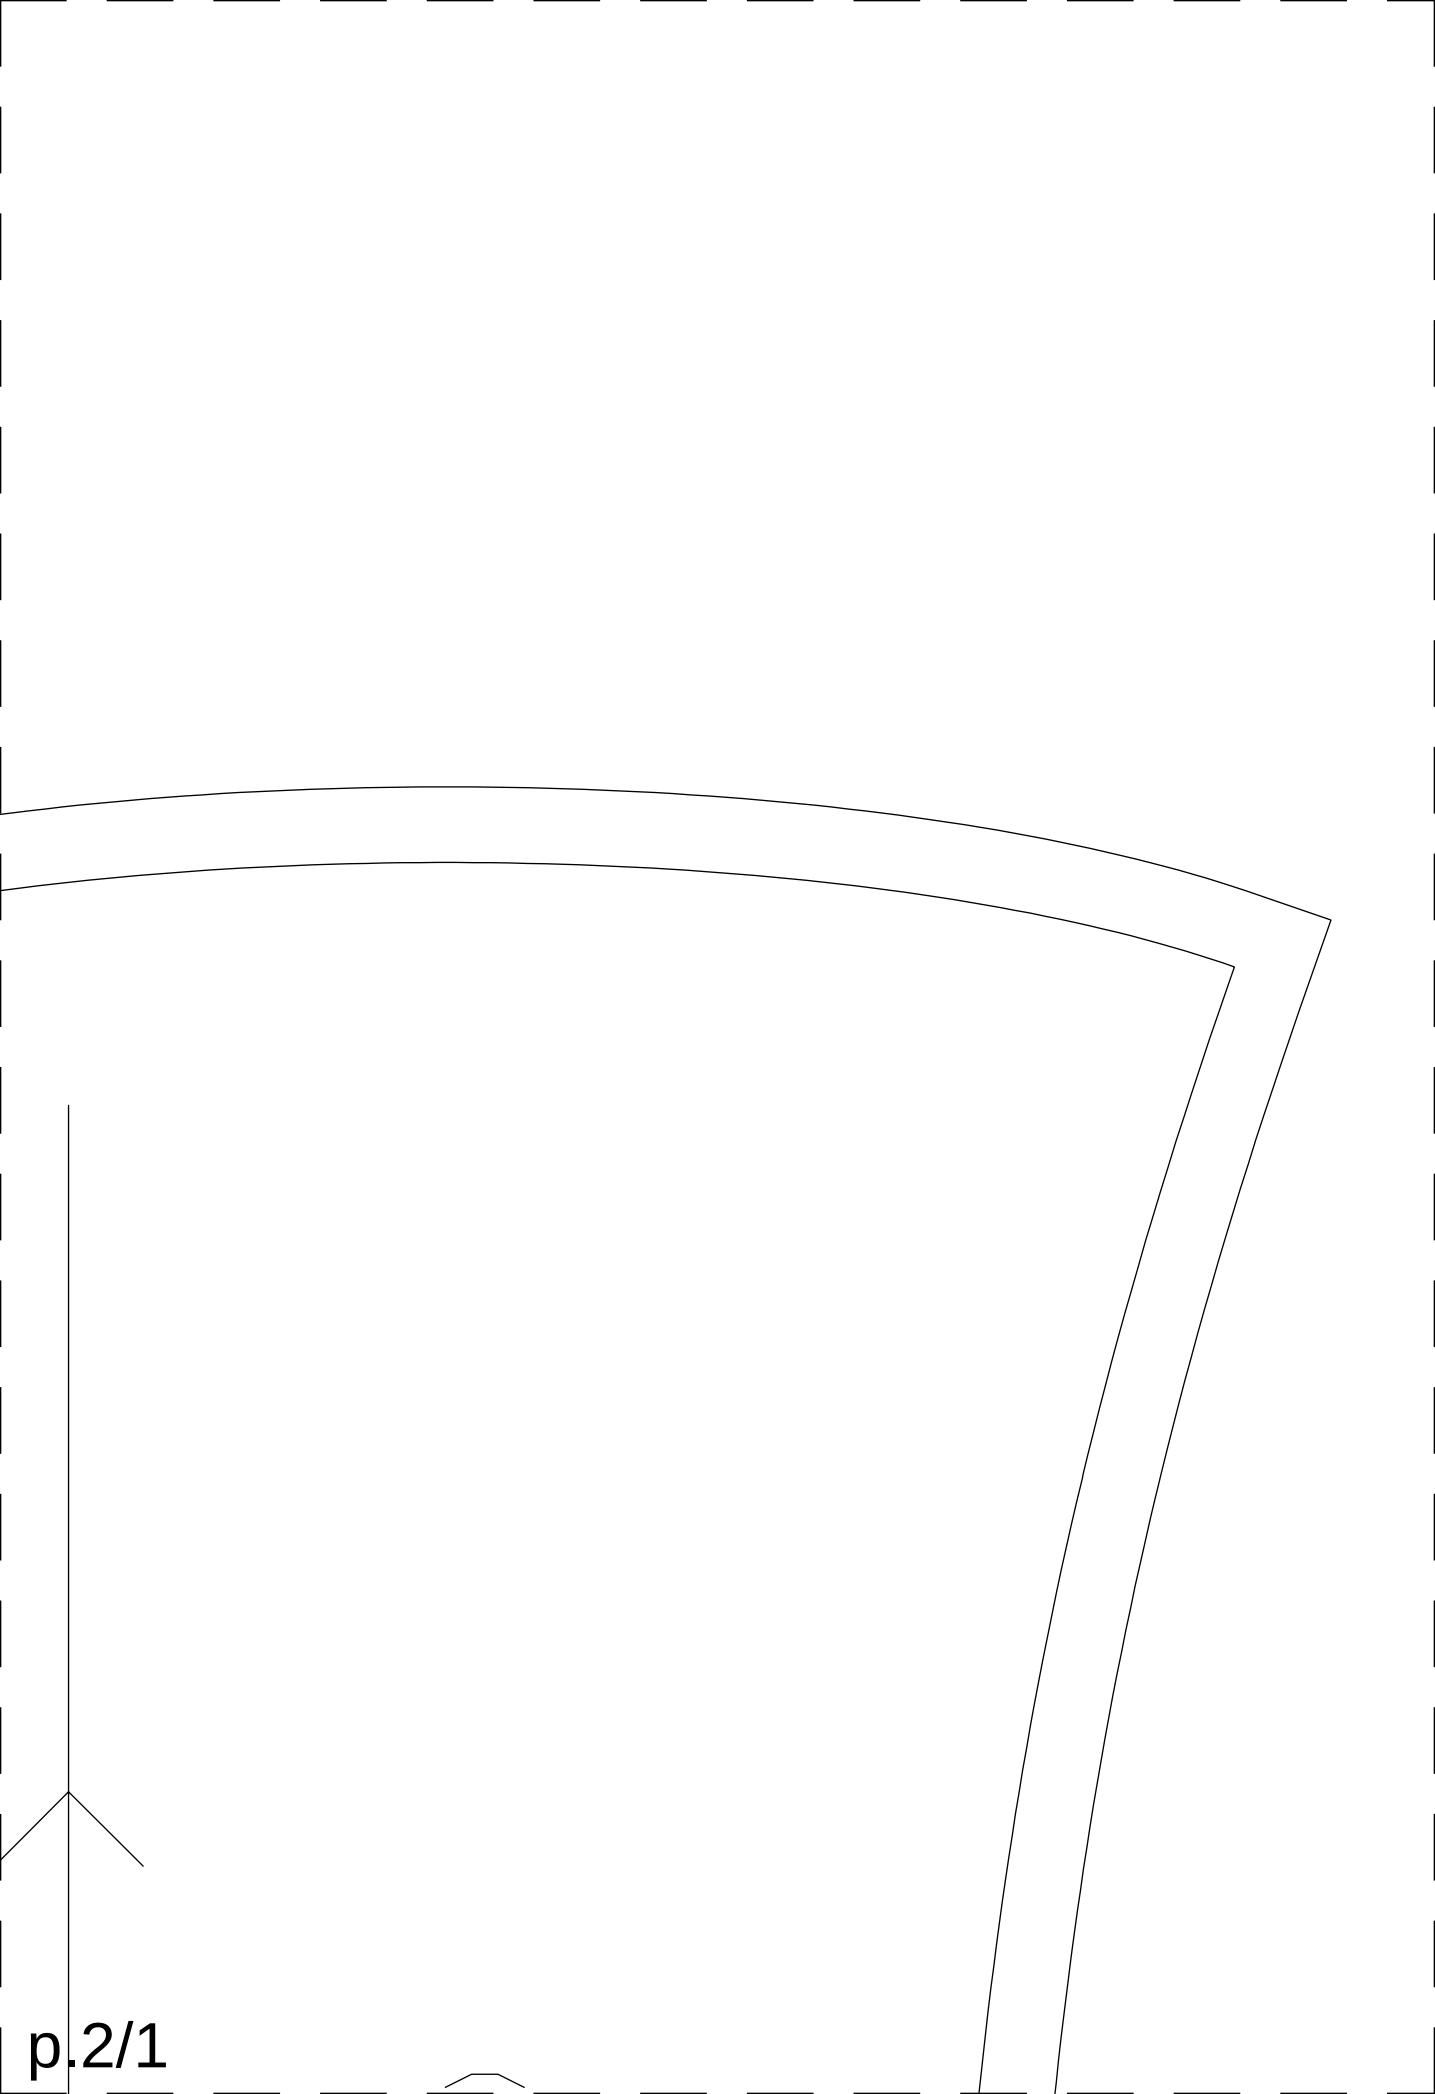



mod\5752

БОКОВАЯ_ЧАСТЬ

Тип ПолотнаВЕРХ, Кл.Дет. =(2,2

Ж=165=84=92

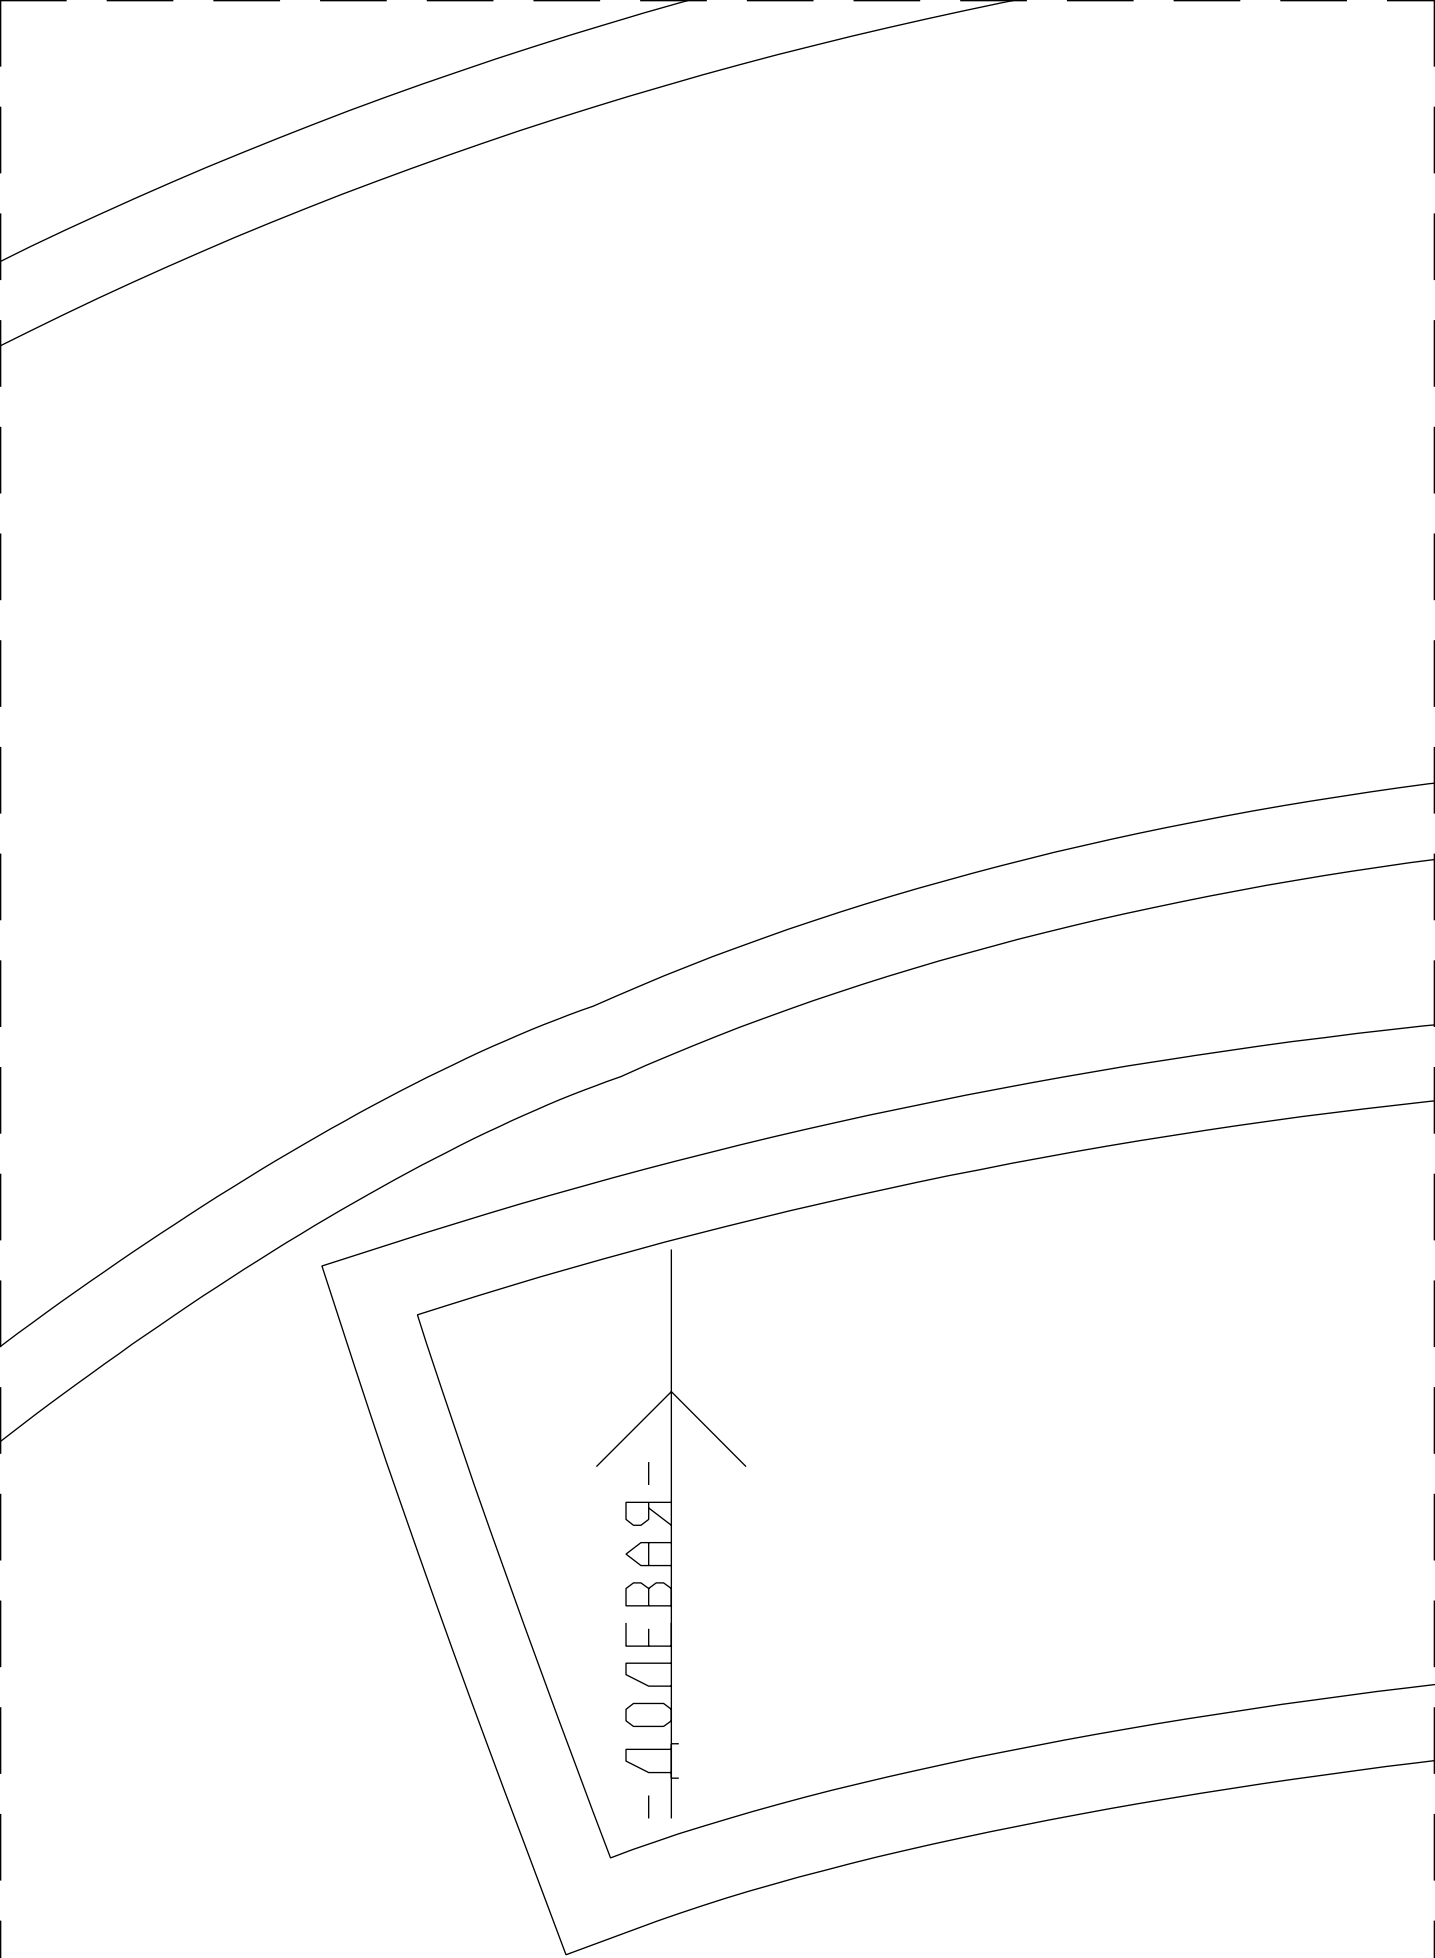

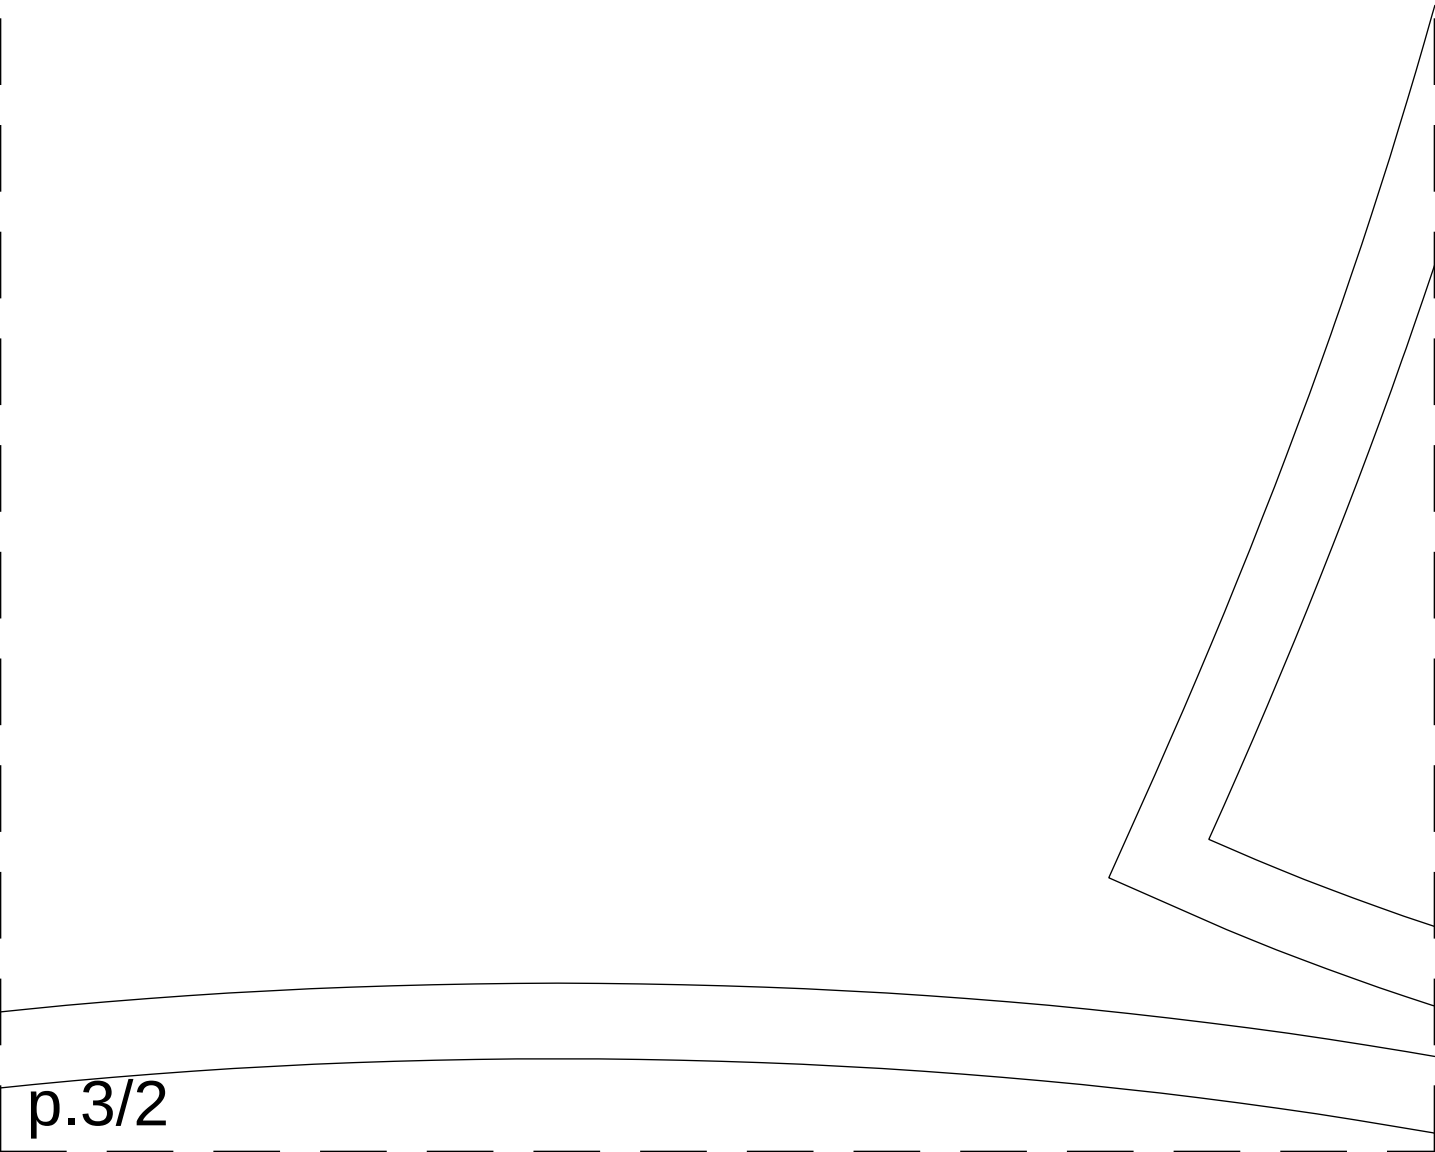

52

4

84=92

NOTHABEPX, K_n.DET. = (2, 2)

52

84=92

NOTHABEPX, K_n.DET. = (1, 1)

mod\5752


ЦЕНТРАЛЬНАЯ_ЧАСТЬ


Тип Полотна ВЕРХ, Кл. Дет. = (1, 1)


$\text{ж} = 165 = 84 = 92$

mod\57
BBP
TIN 10
*=165=

mod\57
KOKETK
TIN 10
*=165=

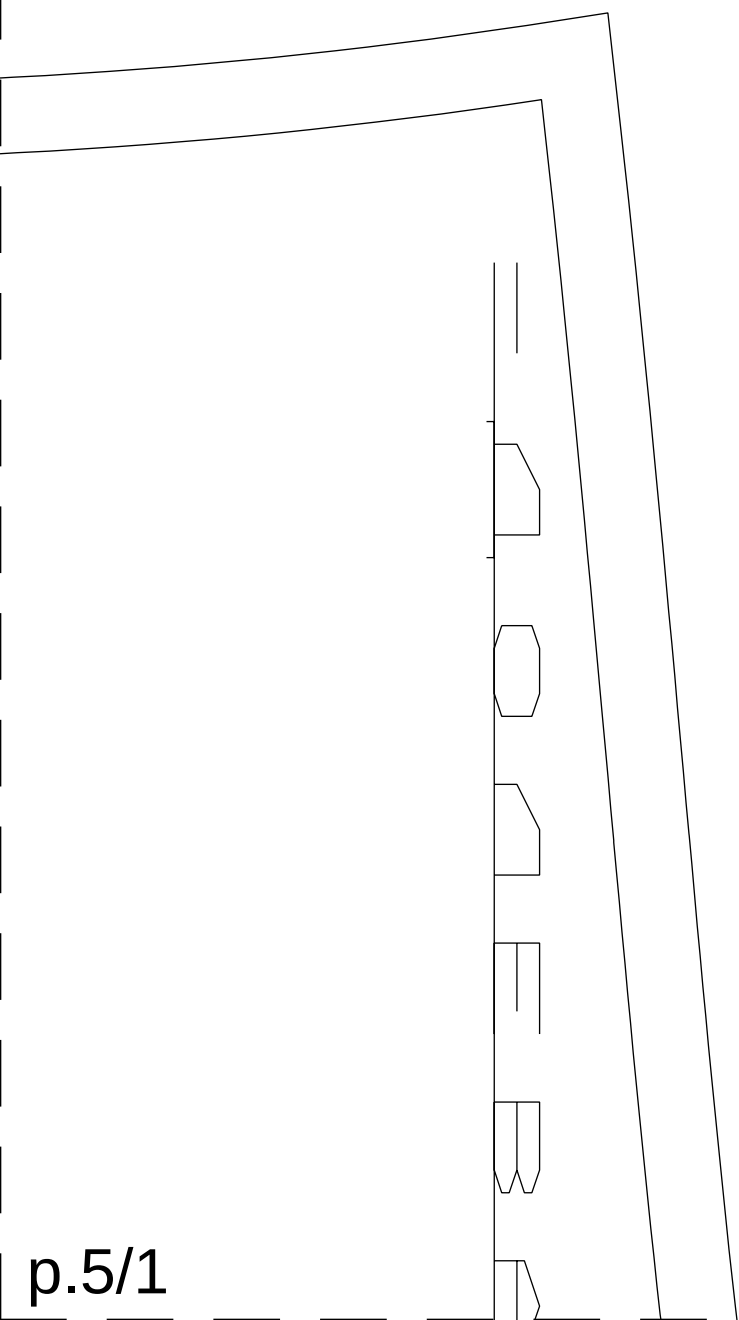

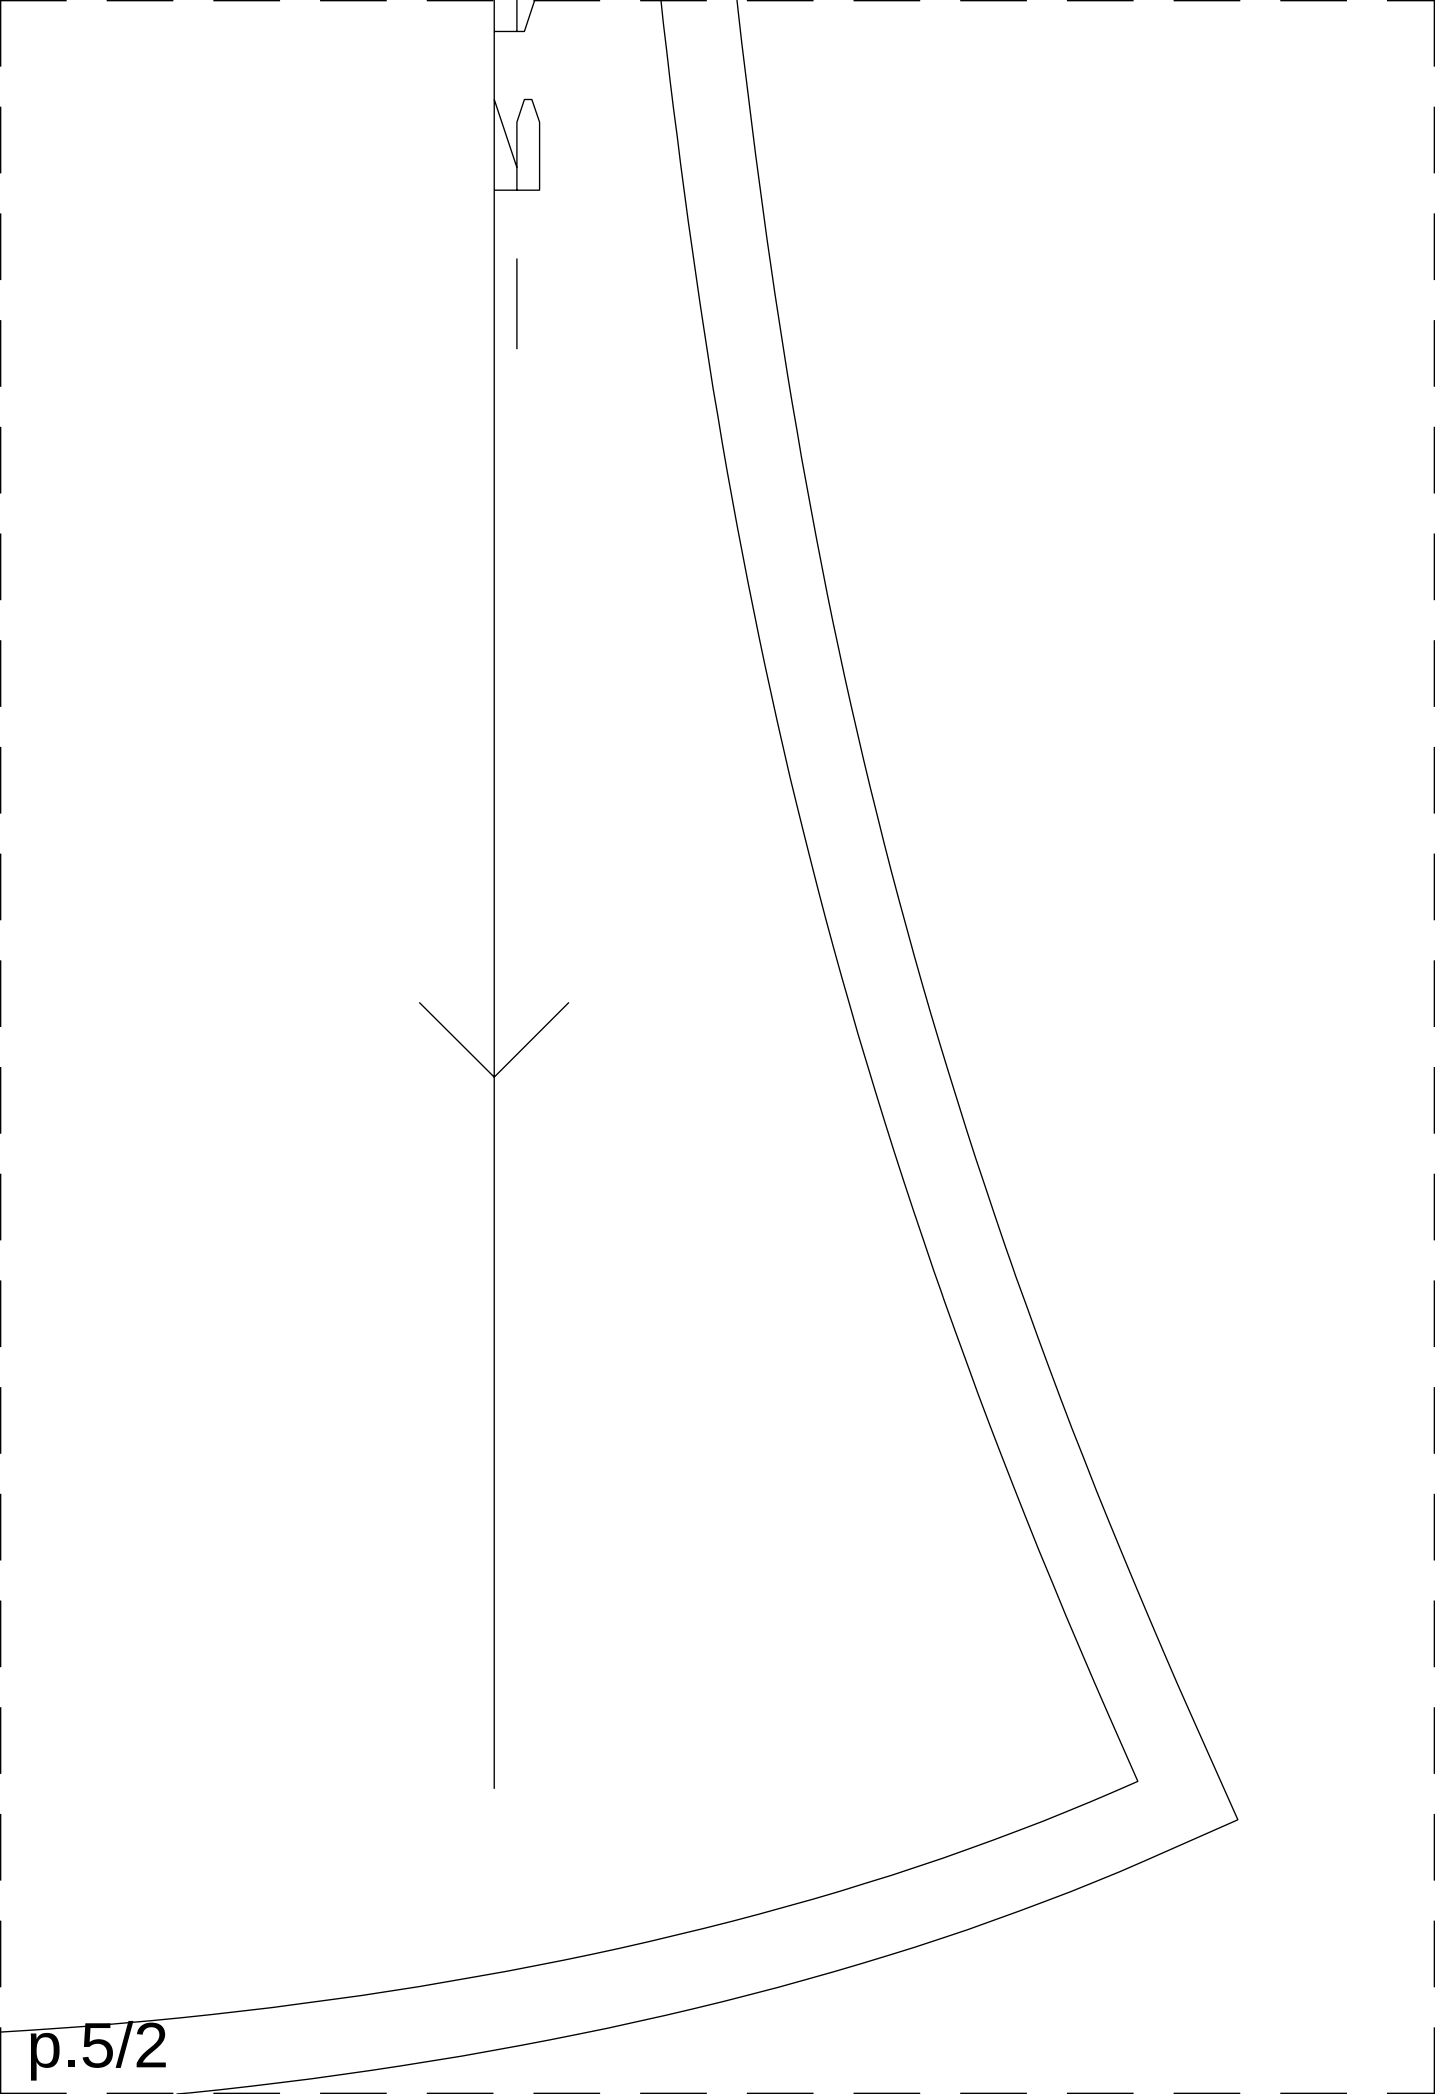

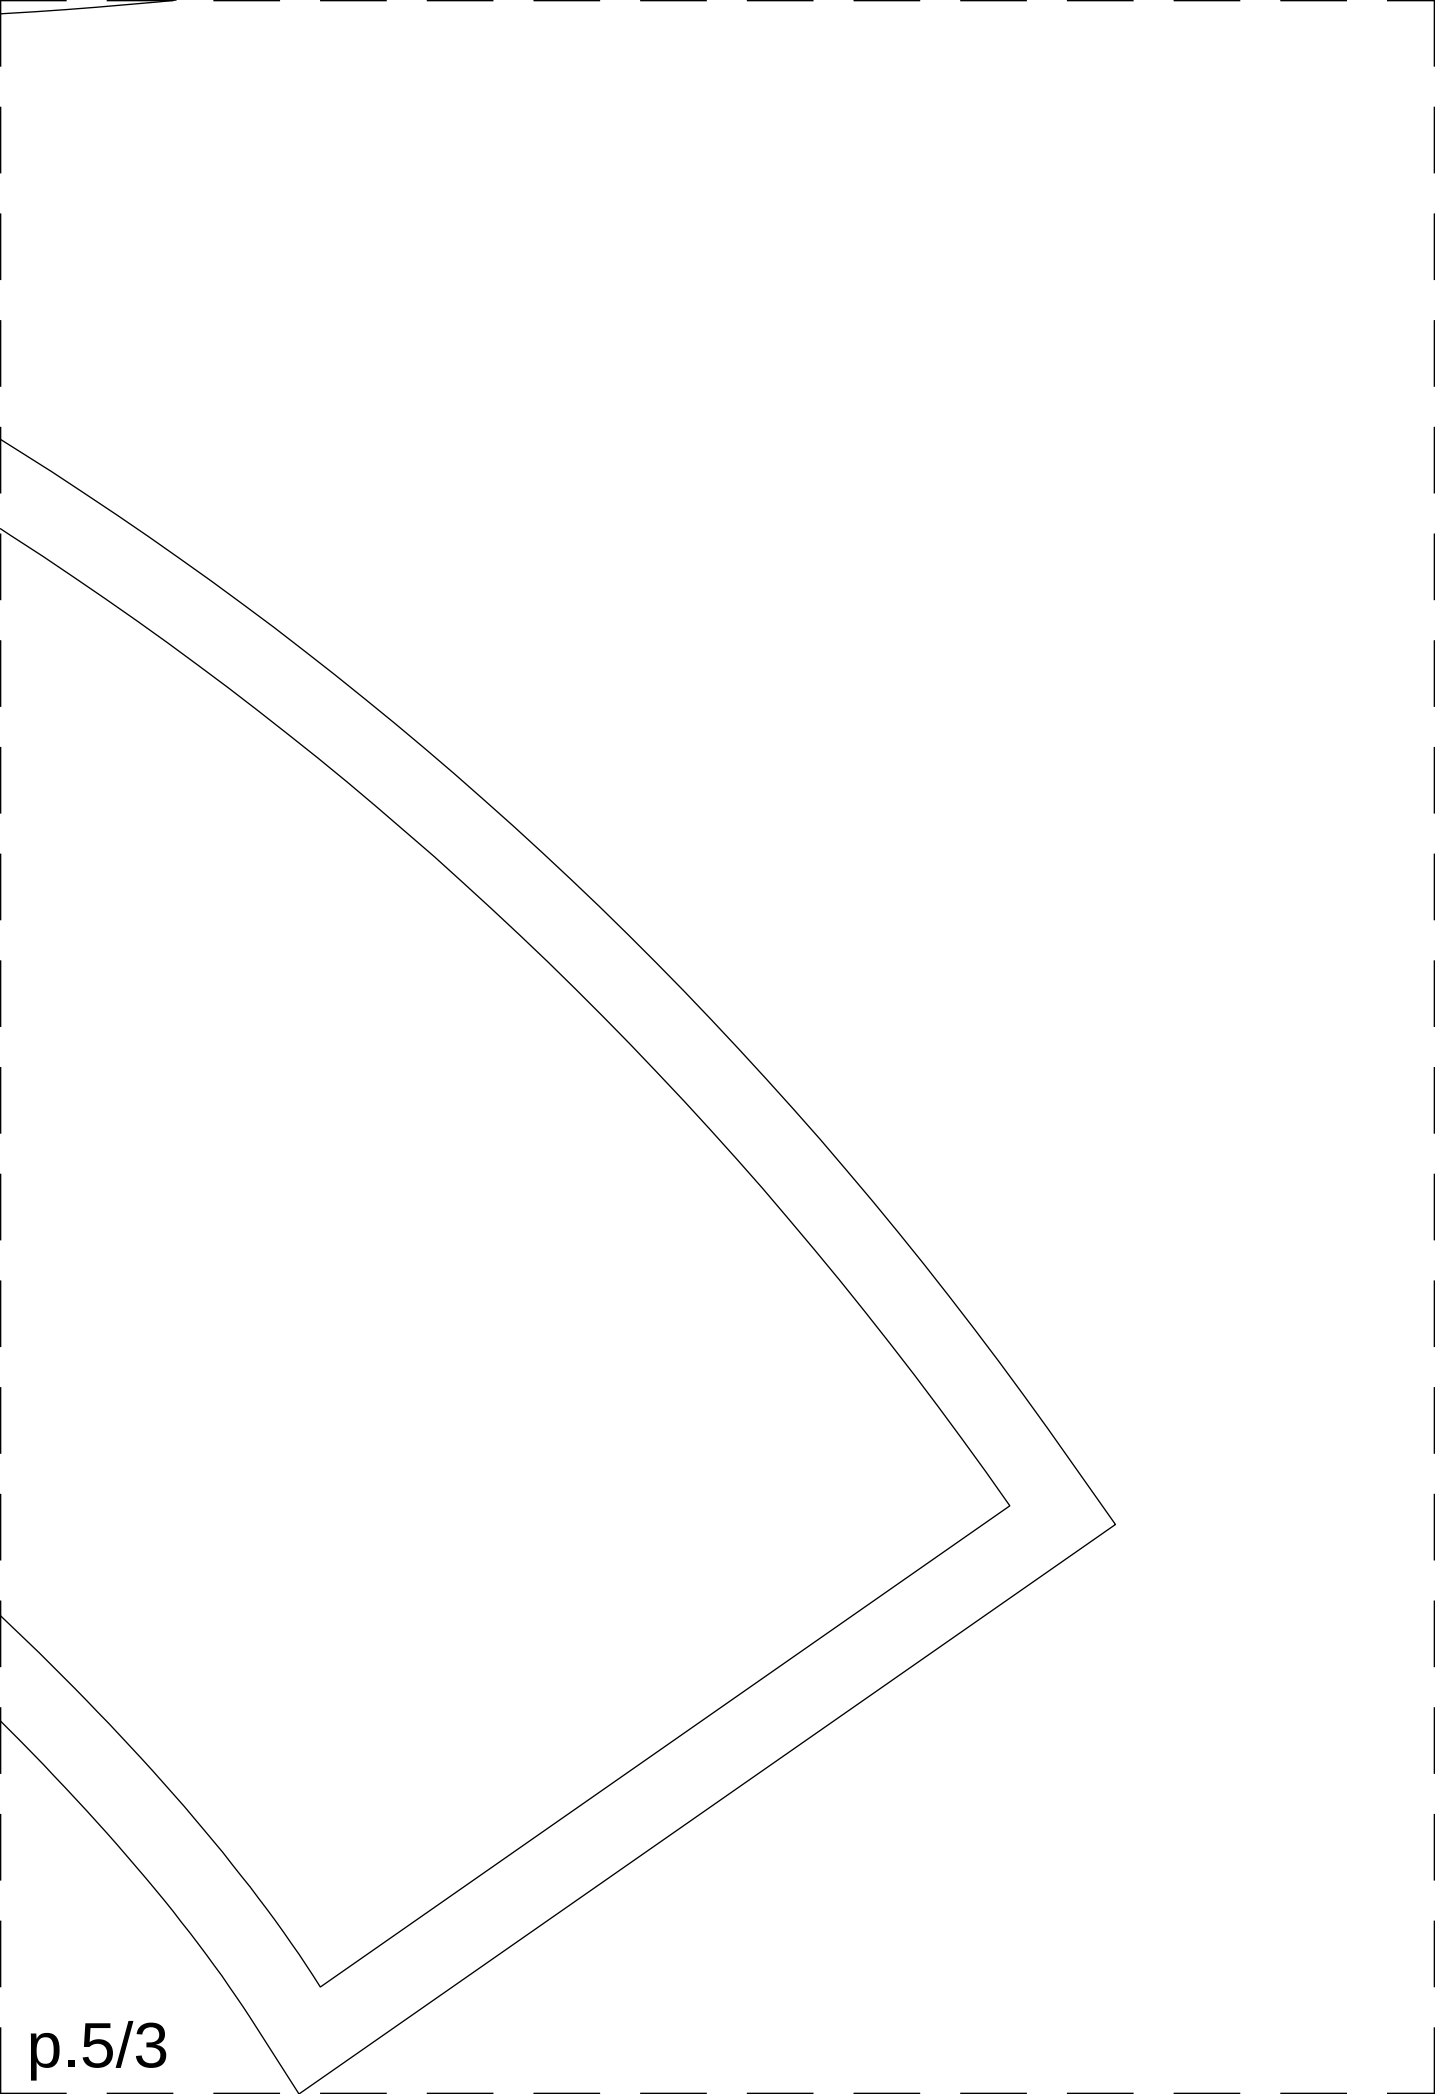

Maneken = ver. 0

rz_1=165 rz_16=84 rz_18=64 rz_19=92